SHARP SERVICE MANUAL

CODE: SM-ARC240P-1



DIGITAL COLOR LED PRINTER

MODEL AR-C240P

C(JN.	ΓΕΙ	NT	S
----	-----	-----	----	---

[1]	CONFIGURATIONS
[2]	PARTS REPLACEMENT
[3]	ADJUSTMENTS
[4]	REGULAR MAINTENANCE110
[5]	TROUBLESHOOTING PROCEDURES
[6]	CONNECTION DIAGRAM
[7]	APPENDIX A INTERFACE SPECIFICATIONS
[8]	APPENDIX B 2ND/3RD TRAY MAINTENANCE
[9]	APPENDIX C ERROR MESSAGES
[10]	PARTS GUIDE

Parts marked with " \triangle " are important for maintaining the safety of the set. Be sure to replace these parts with specified ones for maintaining the safety and performance of the set.

CONTENTS

1.	COI	NFIGUE	RATIONS	6
	1.1	System	n Configuration	6
	1.2	Printer	Configuration	7
	1.3	Supplie	es and Consumables	8
	1.4	Specific	cations	9
2.	PAF	RTS RE	PLACEMENT	. 17
	2.1		tions in Replacing Parts	
	2.2		ayout	
	2.3		ing Parts	
		2.3.1	Top Cover	
		2.3.2	LED Head / LED Spring / Post-Guide	
		2.3.3	Top Cover Unit	
		2.3.4	Control Panel Assy/ Control Panel Bezel/ LED Control PWB/ Toner Sensors	
			Stacker Full Sensor/ Control Panel/ Control Panel Tape Harness/	
			Eject Rollers	
		2.3.5	Top Cover Handle/ Top Cover Latch/ Top Cover Latch Spring	
		2.3.6	Eject Guide Assy	
		2.3.7	Cassette Assy/ Front Cover Assy/ Front Cover Inner Baffle	
		2.3.8	Retard Pad Assy/ Retard Pad Assy Spring	
		2.3.9	Feed Roller and Nudger Roller	
		2.3.10	Rear Cover	
		2.3.11	Face-Up Tray	
		2.3.12	Left Side Cover	
		2.3.13	Right Side Cover	. 39
		2.3.14	Multipurpose Tray Assy/ Multipurpose Tray Cover Assy/ Links/ Multipurpose Tray Top Cover/ Multipurpose Tray Drive Gear	40
		2.3.15	Drum Contact Assys	
		2.3.16	Media Thickness Sensor Assy	
		2.3.17	Registration Roller Assy (A)/ Registration Drive Gear (A)	
		2.3.18	Registration Roller Assy (B)	
		2.3.19	Registration Clutch and Registration Motor Assy	
		2.3.20	Main Cooling Fan	
		2.3.21	Color Registration Sensor Assy	
		2.3.22		
		2.3.23	Electrical Chassis Cooling Fan	. 49
		2.3.24	Printer Engine Controller PWB	50
			Printer Unit Chassis	
		2.3.26	Entrance Cassette Sensor Actuator	52
			Entrance Sensor PWB	53
		2.3.28	Entrance MT Sensor Actuator / Entrance Belt Sensor Actuator /	
			Entrance Waste Chassis Sensor Actuator	
		2.3.29	Fuser Exit Roller	
			Exit Sensor Assy	
			Fuser Latching Handle (L)	
			Belt Motor Assy	
			Fuser Latching Handle (R)	
			Main Motor Assy	
		2.3.36	Main Feeder Drive Motor Contact Assy/ Left Plate Assy	
			Low Voltage Power Supply	
		2.3.38	High voltage power supply	
		2.3.39	Main Feed Assy	
		2.3.40	Cassette/ Left Guide Assy	
		2.3.41	Cassette/ Right Guide Assy	
			Fuser Unit	


		2.3.43	Belt Unit	t	69
				Jnit	
		2.3.45		ails (L) and (R)	
		2.3.46		Fransport Assembly	
		2.3.47	CU Assy	/	74
3.	Αdjι	ıstmen	ıt		76
	3.0	System	Maintena	ance MENU	76
		3.0.1		k Pattern Printing (" TEST PRINT MENU " item)	
	3.1	Mainter		de and Functions	
		3.1.1		ance menu	
		3.1.2	Engine r	maintenance mode	
			3.1.2.1	Operator panel	
			3.1.2.2	5	
				3.1.2.2.1 Entering self-diagnostic mode (Level 1)	
			2422	3.1.2.2.2 Exiting the self-diagnostic mode	
			3.1.2.3	Switch scan test	
			3.1.2.4 3.1.2.5	Motor clutch test Test print	
			3.1.2.6	Initializing NVM	
			3.1.2.7	Displaying the consumables counter	
			3.1.2.8	Displaying the consumables continuation counter	
			3.1.2.9	Panel display details	
		3.1.3		print jobs with single printer unit attached with a controller	
	3.2	Adjustn		Replacing Parts	
		3.2.1	Precauti	ons in replacing the engine control board	98
		3.2.2	Precauti	ons in replacing EEPROM	98
		3.2.3		ng EEPROM after replacing the TIG board	
		3.2.4		ion Setting (Checking Metod: Printing Demo Page)	
		3.2.5		y Flash ROM data on TIG board	
	3.3			nsity	
	3.4			Detection Sensitivity Adjustment and Media Thickness Detect	
		3.4.1		ble Operating Systems and Interfaces, and File Required	
		3.4.2		ne Operating Systems and interfaces, and rife Required	
		5.4.2	3.4.2.1		
			•	Media Setting	
			3.4.2.3	<u> </u>	
			3.4.2.4	• •	
		3.4.3		the density of the calibration chip for density detection	
			3.4.3.1	Density Adjustment Menu Setting	
		3.4.4	Electron	ic Serial Number Input	
1	rogi	ılar ma	intonar	ICe	110
╼.					
	4.1		•	Regularly	
	4.2		•	N	
	4.3		•	D Lens Array	
	4.4	Cleariii	ig the Fich	k-up Roller	110
5.	Trou	ublesh	ooting F	Procedures	111
	5.1	Precau	tions befo	re troubleshooting	111
	5.2	Precau	tions befo	ore handling an abnormal image	111
	5.3		•	n handling an abnormal image	
	5.4	•	•	publeshooting	
	5.5		•	Procedure	
		5.5.1		ssage list	
		5.5.2		ng for troubleshooting	
	5.6	5.5.3 Fuse ch		shooting for abnormal images	
	J.U	1 435 6	100N		140

6. CC	ONNECT	TION DIAGRAM	146
6.1 6.2		ance Checks m/Font ROM Layouts	
0.2	. i rogra	III/I OIL NOW Layouts	150
APPE	NDIX A	INTERFACE SPECIFICATIONS	156
1.	Paralle	el Interface Specifications	156
	1.1	Parallel Interface	156
	1.2	Parallel Interface Connector and Cable	156
	1.3	Parallel Interface Level	156
	1.4	Timing Charts	157
	1.5	Parallel I/F Signals	158
2.	Univer	sal Serial Bus (USB) Interface Specifications	159
	2.1	USB Interface	159
	2.2	USB Interface Connector and Cable	
	2.3	USB Interface Signals	159
APPE	NDIX B	2ND/3RD TRAY MAINTENANCE	160
1.	Parts F	Replacement	160
	1.1	Cover Idle Roller Assy	
	1.2	PCB	161
	1.3	Feeder Drive Assy	162
2.		2nd/3rd Tray PARTS LIST	163
APPE	NDIX C	ERROR MESSAGES	165
1.	Error n	nessages	165
2.		nessages : Color, Media Detect	
3.		ng messages : usage, media	
4.		ng messages : Job Account	
5.		Warning	

1. **CONFIGURATIONS**

1.1 System Configuration

Figure 1-1 shows the system configuration of the ARC200P.

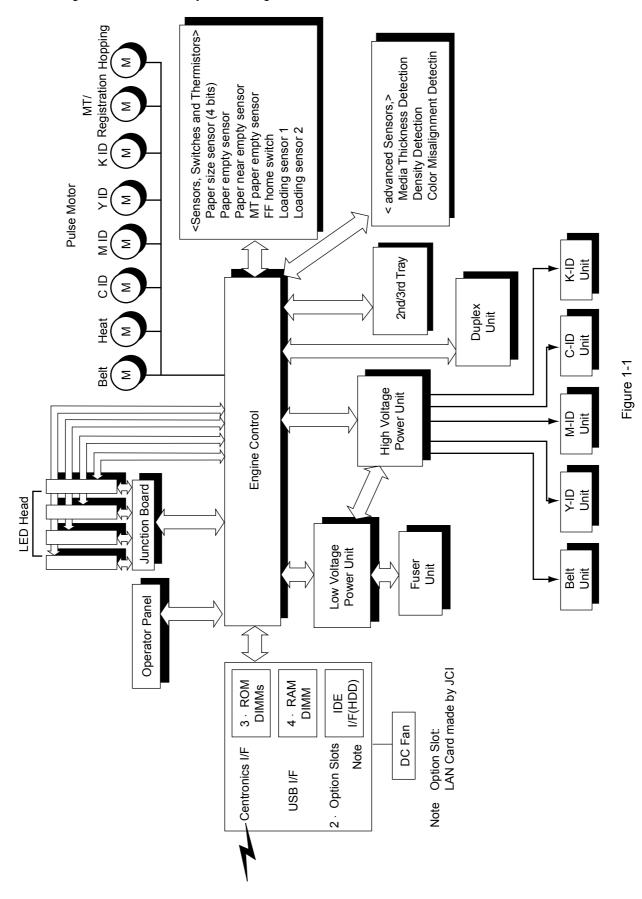

1.2 Printer Configuration

The inside of the printers is composed of the followings:

- Electrophotographic Processor
- Paper Paths
- Controller Block (CU and PU)
- Operator Panel
- Power Units (High Voltage Unit and Low Voltage Unit)

Figure 1-2 shows the printer configuration.

Figure 1-2


1.3 Supplies and Consumables

Product Code	Description	Quantity	Estimated Yield	Comments
			10,000	@ 5% Image
AR-C20TBU	Black Toner Cartridge	1	Images/Cartridge	Area
			10,000	@ 5% Image
AR-C20TCU	Cyan Toner Cartridge	1	Images/Cartridge	Area
			10,000	@ 5% Image
AR-C20TMU	Magenta Toner Cartridge	1	Images/Cartridge	Area
			10,000	@ 5% Image
AR-C20TYU	Yellow Toner Cartridge	1	Images/Cartridge	Area
				(Customer
AR-C20BDR	Black Image Drum	1	30,000 Images/Unit	replaceable)
				(Customer
AR-C20CDR	Cyan Image Drum	1	30,000 Image/Unit	replaceable)
				(Customer
AR-C20MDR	Magenta Image Drum	1	30,000 Images/Unit	replaceable)
				(Customer
AR-C20YDR	Yellow Image Drum	1	30,000 Images/Unit	replaceable)
				(Customer
AR-C20TB1	Transfer Belt	1	60,000 Images/Belt	replaceable)
				(Customer
AR-C20FU1	Fuser Unit	1	60,000 Images/Belt	replaceable)
AR-C20ABD	Deluxe Printer Cabinet (with Door)			


Option Configuration

The followings are available as options on the ARC200P.


(1) 2nd Tray/ 3rd Tray (AR-C20PFU)

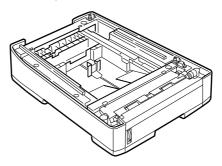


(2) Duplex Unit (AR-C20ADU)

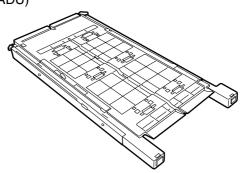

(3) Expansion Memory



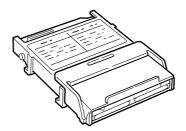

1.4 Specifications

(1) External Dimensions Height: 430mm Width: 430mm Length: 620mm

(2) Weight 42 kg

(3) Papers Type: Ordinary paper, Transparencies (Recommended: MLOHP01)

Size: Postal card, Legal 13" or 14", Executive, A4, A5, B5, A6 (Only

the 1st tray and the front feeder support A6 and postal-card

sizes.)

Weight: 1st tray 55 kg to 151 kg (64 to 176g/m²)

Front feeder 55 kg to 172 kg (64 to 203g/ m²)

(4) Print Speed Color: 20 pages per minute (Transparency: 8 pages per minute)

Monochrome: 24 pages per minute (Transparency: 12 pages per minute)

Postal Card, Label, Thick Paper: 12 pages per minute

(5) Resolution $600 \cdot 600$ dots per inch

(6) Power Input 115 - 127 V, 220 - 240 V

(7) Power Consumption Peak: 1500W Normal Operation: 500W (5% duty)

Idle: 150W Power Saving Mode: 45W or less

(8) Frequency 50Hz or $60Hz \pm 2Hz$

(9) Noise Operation: 56 dB (Without second tray)

Standby: 45 dB Power Saving: 43 dB

(10) Consumable Life Toner Cartridge: 5,000 pages (5% duty) (each of Y, M, C and K)

Large-Capacity Toner Cartridge: 10,000 pages (5% duty)

(each of Y, M, C and K)

Image Drum: 30,000 pages (5% duty, Continuous printing)

(each of Y, M, C and K)

(11) Parts Replaced Periodically Fuser Unit Assy: Every 60,000 pages

Belt Cassette Assy: Equivalent of 60,000 pages (3 pages/job)

(12) Temperatures and Relative Humidities

Temperature

Temperature Condition

	Temperature(F)	Temperature(C)	Remark
Operation	50 to 89.6	10 to 32	17 to 27 C (Temperatures to assure full color print quality)
Non-Operation	32 to 109.4	0 to 43	Power-off
Storage (Max. One Year)	-14 to 109.4	-10 to 43	With drum and toner
Transport (Max. One Month)	-20 to 122	-29 to 50	With drum and without toner
Transport (Max. One Month)	-20 to 122	-29 to 50	With drum and toner

Humidity

Humidity Condition


	Relative Humidity (%)	Max. Wet-Bulb Temperature(C)	Remark
Operation	20 to 80	25	50 to 70% (Humidities to assure full color print quality)
Non-Operation	10 to 90	26.8	Power-off
Storage	10 to 90	35	
Transport	10 to 90	40	

(13) Printer Life 600,000 pages (on a A4-size basis) or five years

2. OPERATION DESCRIPTION

The C7500/C7300 of printers, tandem color electrophotographic page printers, adopt technologies such as an LED array, OPC, dry single-component non-magnetic developing, roller transfer and heat-compression fusing. A black-writing printing method by shedding light on print areas is used.

Figure 2-1-1(600dpi) provides the block diagram of the printer.

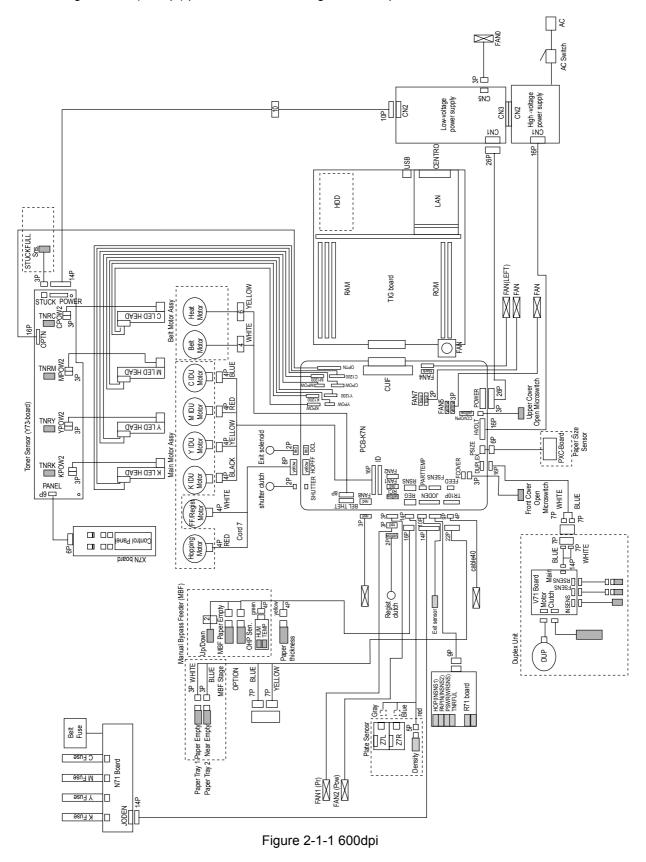

2.1 Main Board (TIG PWB)

Figure 2-2 provides the block diagram of the main control board (TIG PWB).

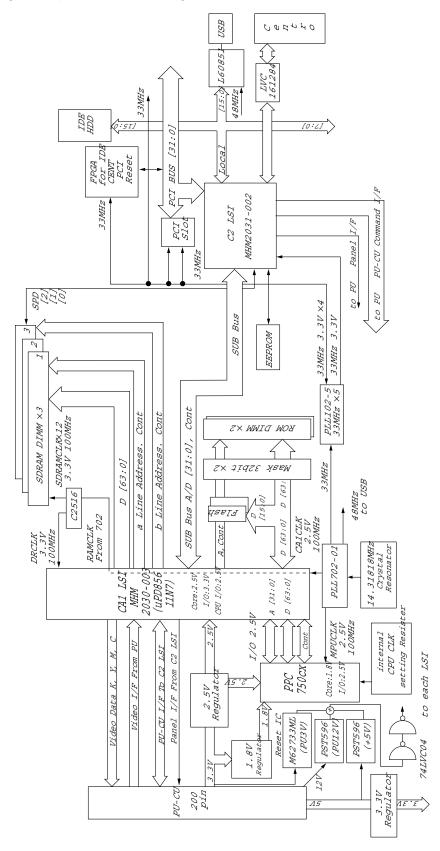


Figure 2-2

(1) CPU

The CPU is PowerPC750CXe, a 64-bit bus RISC processor, which inputs an 100-MHz CLK (= BUS CLK), and operates at 450MHz that is 4.5 times the input.

(2) Cache

PPC750Cxe has its cache only inside of it.

Speed: Same as CPU Core CLK speed

Capacity:

Primary Cache: 32 K bytes in D-cache capacity, 32 K bytes in I-cache capacity

Secondary Cache: 256 K bytes

(3) ROM

ROM is to be inserted into the two 168 pin DIMM slots. The slot A is for program ROM and the slot B is for Japanese kanji fonts. The slot C is not assigned.

(4) RAM

RAM is to be inserted into the three 168 pin DIMM slots. The DIMMs must be fitted in descending labeled type No. order into the slots 1, 3, 2 and 4.

SDRAM DIMM Specifications:

Speed: PC133 or more Capacity: 64/128/256/512 MB

Configuration: Without parity. Without ECC. SPD information is required.

(5) EEPROM

EEPROM, an 8-pin DIP package, is to be inserted into the IC socket. The EEPROM is of 16 Kbits for 3.3V power supply, and settings for controlling the controller block are stored in it.

(6) Flash ROM

A 4Mbyte flash ROM is surface-mounted on the TIG board. The flash ROM is composed of four 2048k-by-16bit chips, and fonts and macros can be stored in it.

(7) Memory Control LSI (CAI)

A 696-pin BGA package ASIC made by NEC. The chip mainly controls a CPU I/F, memory, video data compression and decompression, and a PU-video I/F.

(8) Interface Control LSI (C2)

A BGA package ASIC made by Toshiba, which controls a PU command I/F, operator panel I/F, IDE I/F, Centronics I/F, USB I/F, PCI I/F, EEPROM and a SPD (SDRAM DIMM) I/F.

(9) IDE HDD

An IDE connector is surface-mounted on the board to which an IDE HDD assembled using exclusive molds will be connected. The IDE HDD is used for storing font data, spooling edited video data and registering form data.

(10) PCI Bus Option

Two PCII/F slots are provided for option board use. The bus, which uses an Oki Data original connector, can accept an Ethernet board.

(11) Host Interface

Standard: Centronics two-way parallel I/F (IEEE-1284-compliant)

USB (USB1.1-compliant)

Additional Board: (connected to PCI BUS) Ethernet Board

2.2 Engine Controller Board (K7N PWB)

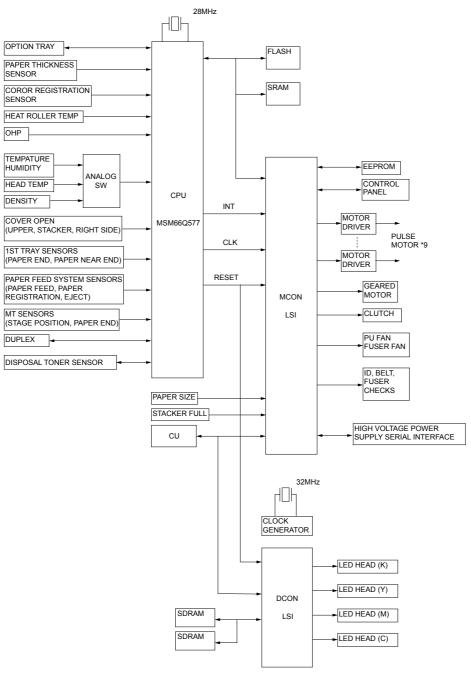


Figure 2-3

The engine control block (PU) is controlled by the engine controller board (K71 PWB) which consists of a CPU (MSM66Q577), general LSI chip, flash ROM, EEPROM, pulse motor drivers and a video memory (see Figure 2-3).

(1) CPU

This, a 16-bit CPU with an AD converter (OKI MSM66Q577), controls the entire system.

(2) General LSI

This LSI (UPD65454GD-241-LML, UPD65946GD-137-LML), which is contained in the printer engine control block, incorporates 4 megabits of video memory and has functions such as engine-controller interfacing, LED interfacing, motor control, sensor input, video memory control, main scan color misalignment correction, skew correction and high-voltage power supply control.

(3) MCON LSI

This LSI is used for inport of SENSORs and the cntrols of Pulse Motors, Cluches, FANs and High Voltage Power Suply.

(4) Flash ROM

The flash ROM (29F800-70) is of 8-Mbits, and PU programs are stored in it.

(5) EEPROM

The EEPROM (NM93C66N-NW) is of 4-Kbits, and mounted on the board with an IC socket. Correction values are stored in it.

(6) Pulse Motor Driver

The pulse motor driver (A2919SLBTR, A3955SLBTR,MTD2005) drives the eight pulse motors to revolve the ID and transport media.

(7) SRAM

This SRAM (628100LG-55L) is used as working memory of the CPU.

(8) SDRAM

This SRAM (56V16160T) is used as data memory of the DCON LSI.

2.3 Power Units

There are a low voltage power unit consists of an AC filter circuit, low voltage power circuit and heater driver circuit, and a high voltage power unit organizes a high voltage power circuit.

(1) Low Voltage Power Unit

This circuit generates the following voltages:

Output Voltage	Use for
+5 V	LED head
+5 V	Logic circuit power supply, PU CPU
+34 V	Motor, drive voltage and power supply voltage for high voltage power supply
+12 V	High voltage power supply, Media Thickness Sensor power supply

(2) High Voltage Power Unit

This circuit generates the following voltages of not less than +34V, which are required for electrophotographic process, according to control sequences from the controller board.


Output	Voltage	Use for	Remark
СН	-1000V to 1.4KV+/-50V	Voltage to charging roller	
DB	-50 to -300V/ +300V	Voltage to developing roller	
SB	-300V to -450V/ 0V	Voltage to toner supplying roller	
TR	C: 0KV to 7KV	Voltage to transfer roller	Variable
	K,Y,M: 0KV to 6KV		

2. PARTS REPLACEMENT

This section describes the procedure for replacing the parts, assemblies and units in the field. The replacing procedure is given for detachment. To attach, use the reverse procedure.

2.1 Precautions in Replacing Parts

- (1) Before replacing the parts, be sure to remove the AC cable and the interface cable.
 - (a) To remove the AC cable, always use the following procedure.
 - i) Flip the power switch of the printer off (to "O").
 - ii) Pull the AC inlet plug of the AC cable out of the AC receptable.
 - iii) Remove the AC cable and the interface cable from the printer.
 - (b) To connect the printer again, always use the following procedure.
 - i) Connect the AC cable and the interface cable to the printer.
 - ii) Insert the AC inlet plug into the AC receptacle.
 - iii) Flip the power switch of the printer on (to "I").

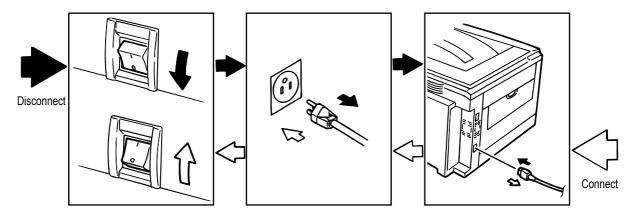

- (2) Do not disassemble the printer so long as it operates properly.
- (3) Minimize the disassembly. Do not detach parts other than those shown in the replacing procedure.
- (4) For maintenance, use designated tools.
- (5) Follow the order instructed to disassemble the printer. Incorrect order may damage the parts.
- (6) Small parts such as screws and collars tend to get lost, so temporarily place and fix them in their original positions.
- (7) When handling ICs and circuit boards such as microprocessors, ROMs and RAMs, do not use gloves that likely to have static.
- (8) Do not place the printed circuit boards directly on the printer or the floor.

[Maintenance Tools]

Table 2-1 lists tools necessary to replace the printed circuit boards and the units.

Table 2-1 Maintenance Tools

No.	Service Tools		Q' ty	Place of use	Remarks
1		No. 1-100 Philips screwdriver	1	2~2.5 mm screws	
2		No. 2-200 Philips screwdriver, Magnetized	1	3~5 mm screws	
3		No. 3-100 screwdriver	1		
4		No. 5-200 screwdriver	1		
5		Digital multimeter	1		
6		Pliers	1		
7		Handy cleaner	1		
8		LED Head cleaner	1		
9		High voltage probe	1		
10	Label	Transparency sheet (thickness premeasured) 0ZZ42404301//	1	Adjustment for Media Thickness sensor	
11		Stage height adjustment jig 0ZZ42423701//	1	Adjustment for Media Thickness sensor	
12			1	Adjustment for Lever adjust (Media Thickness)	

2.2 Parts layout

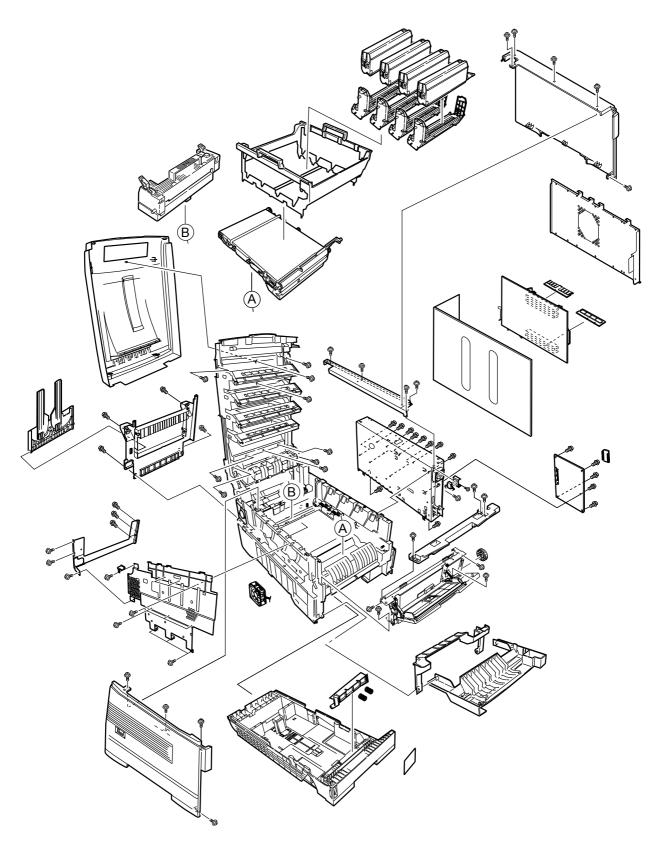


Figure 2-1

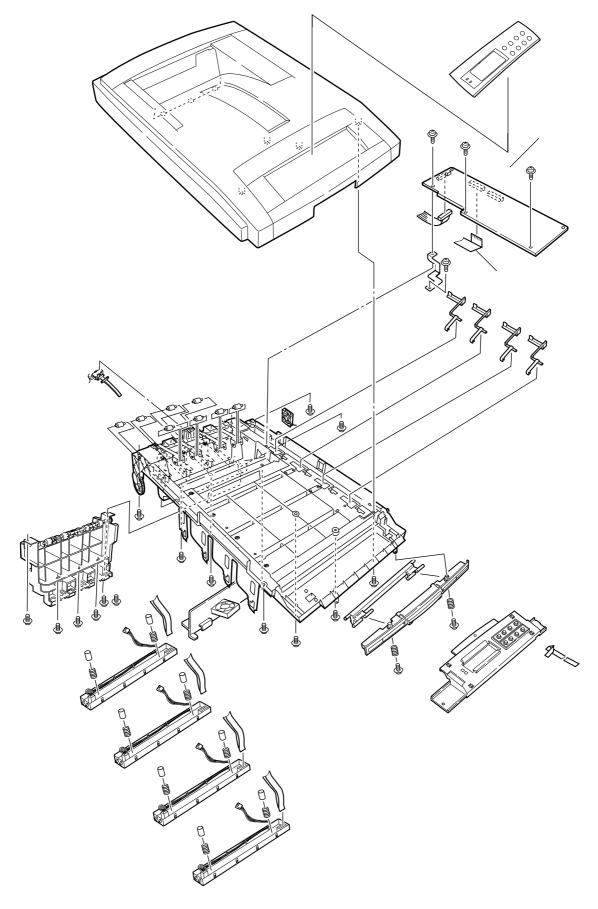


Figure 2-2

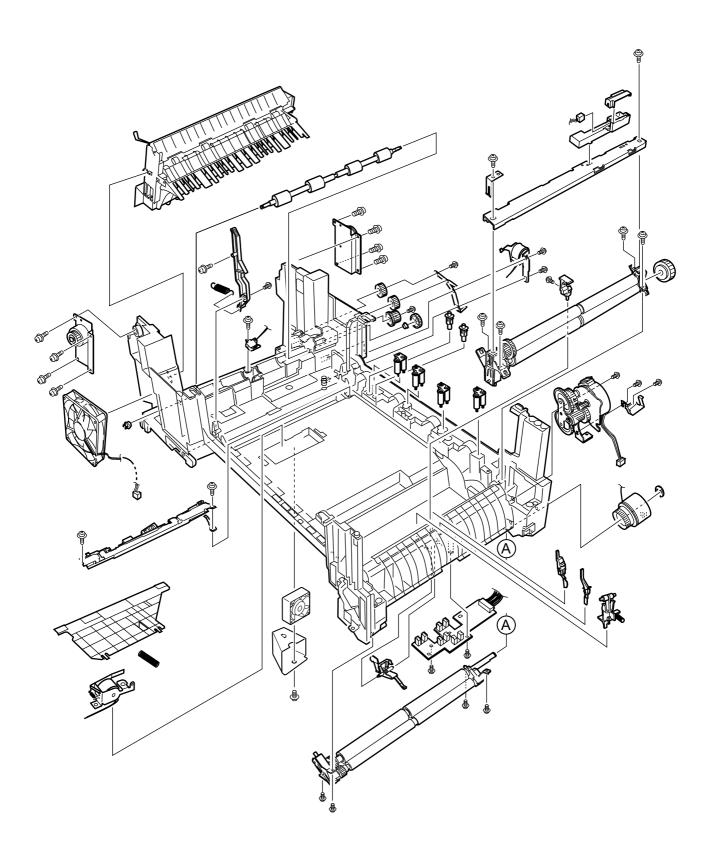
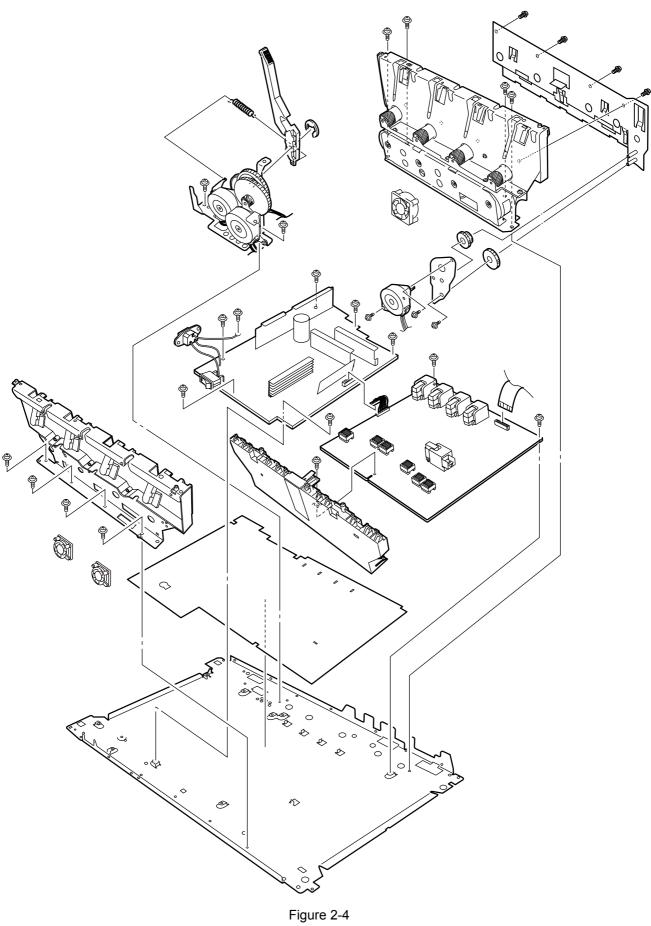


Figure 2-3



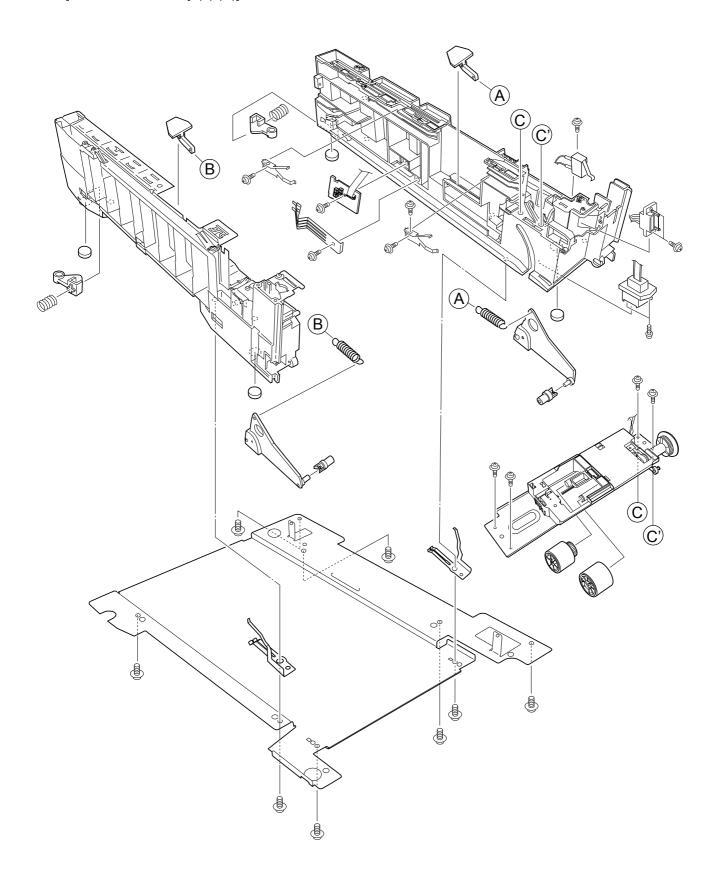


Figure 2-5



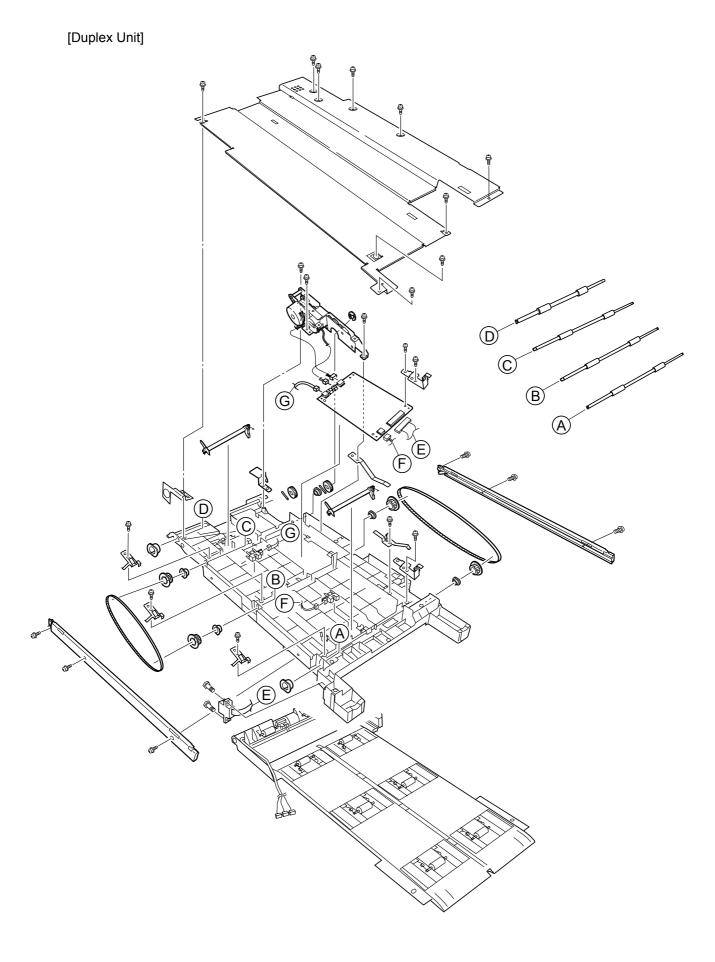


Figure 2-6

2.3 Replacing Parts

This section describes how to replace the parts and assemblies shown in the following disassembling system diagram.

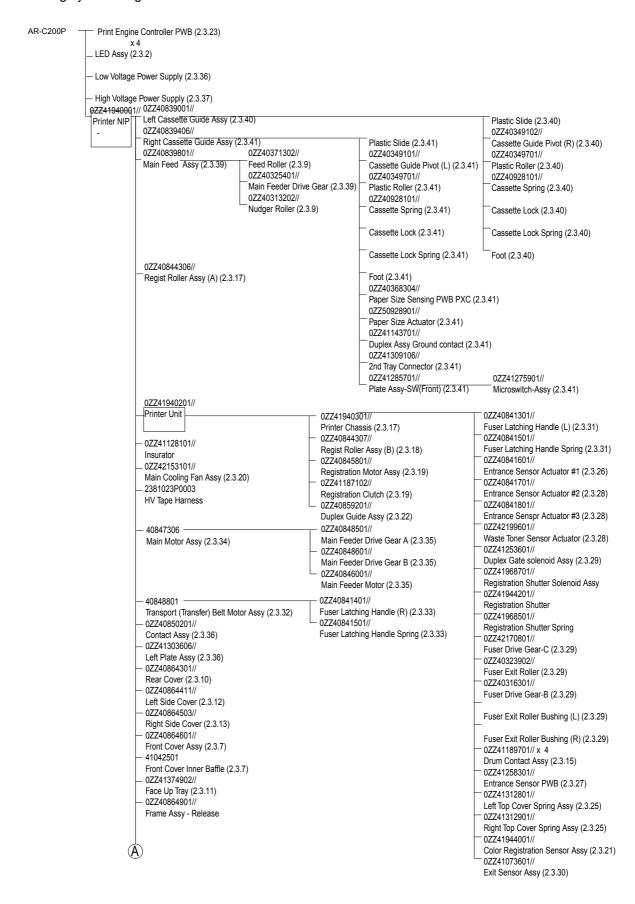

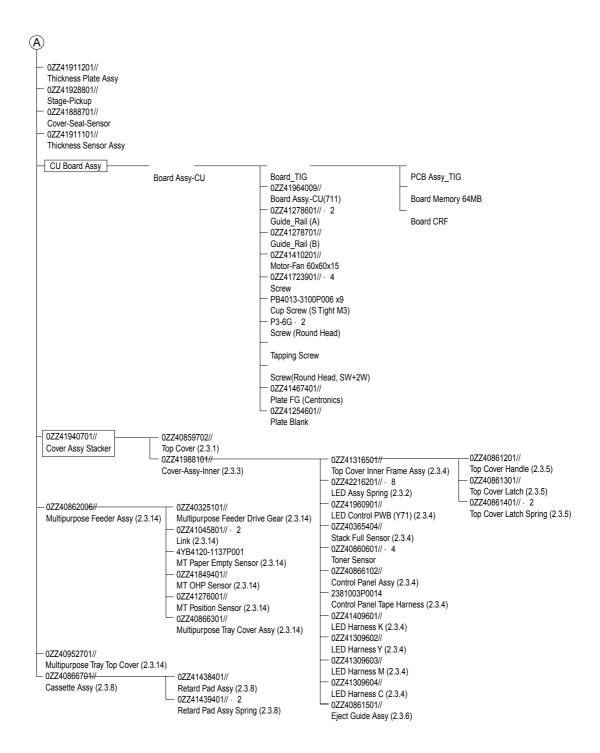

26 /

2.3.1 Top Cover

- (1) Open the Top Cover assy.
- (2) Remove the nine screws ① to detach the top cover ②.

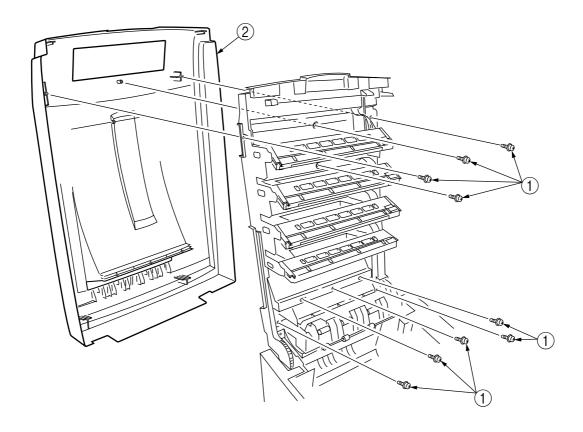


Figure 2-3-1 Top Cover

2.3.2 LED Head / LED Spring / Post-Guide

- (1) Open the top cover ①.
- (2) Remove the three cables, and unhook the LED Head ② at two places to demount it (the two springs ③, Post-Guide ④ become detached together with the LED Head ②).

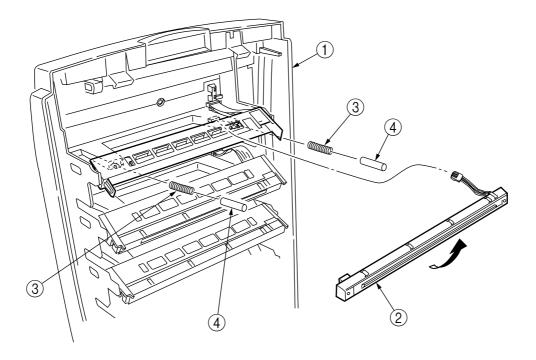


Figure 2-3-2 LED Head / LED Spring / Post-Guide

2.3.3 Top Cover Unit

- (1) Remove the top cover (see section 2.3.1).
- (2) Remove the rear cover (see section 2.3.10).
- (3) Remove the left side cover (see section 2.3.12).
- (4) Remove the right side cover (see section 2.3.13).
- (5) Remove the shield plates A and B (see section 2.3.23), and unplug the connector to separate the top cover.
- (6) Disengage the top cover unit ① at two places to detach it.

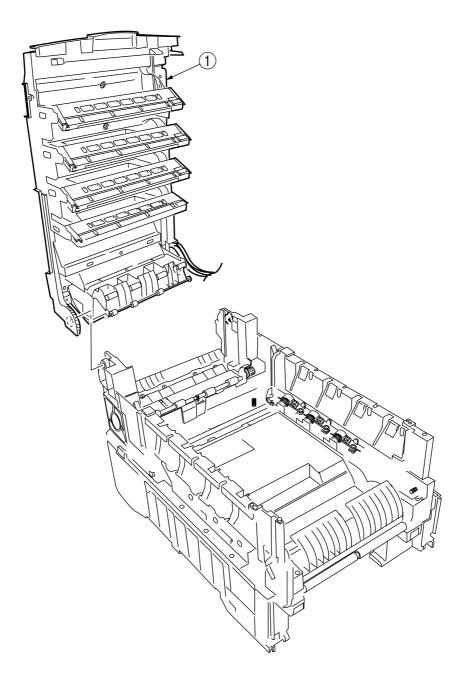


Figure 2-3-3 Top Cover Unit

- 2.3.4 Control Panel Assy/ Control Panel Bezel/ LED Control PWB/ Toner Sensors/ Stacker Full Sensor/ Control Panel/ Control Panel Tape Harness/ Eject Rollers
 - (1) Remove the control panel Assy 1.
 - (2) Detach the control panel tape harness ②.
 - (3) Remove the top cover unit (see section 2.3.3).
 - (4) Unscrew the six screws ③ to remove the earth plate ④.
 - (5) Remove the two screws (5), unhook all the connectors (6) and demount the LED control PWB (7).
 - (6) Disengage the four claws to demount the toner sensor @.
 - (7) Demount the stacker full sensor 9.
 - (8) Demount the exit rollers 11.
 - (9) Detach the LED harnesses, K, Y, M and C 12.
 - (10) Detach the top cover inner frame Assy (3).

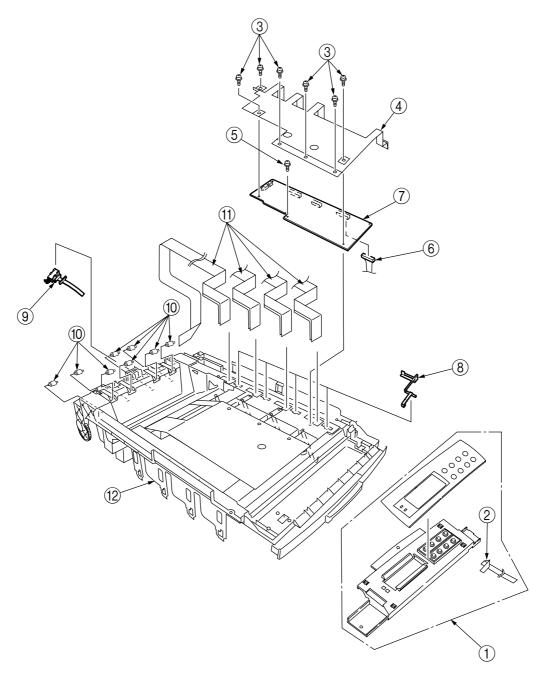


Figure 2-3-4 Control Panel Assy/ Control Panel Bezel/ LED Control PWB/ Toner Sensors/ Stacker Full Sensor/ Control Panel/ Control Panel Tape Harness/ Eject Rollers

2.3.5 Top Cover Handle/ Top Cover Latch/ Top Cover Latch Spring

(1) Remove the two screws ① to detach the top cover handle ② and disengage the top cover latch ③ (at the same time, the two top cover latch springs ④ become detached).

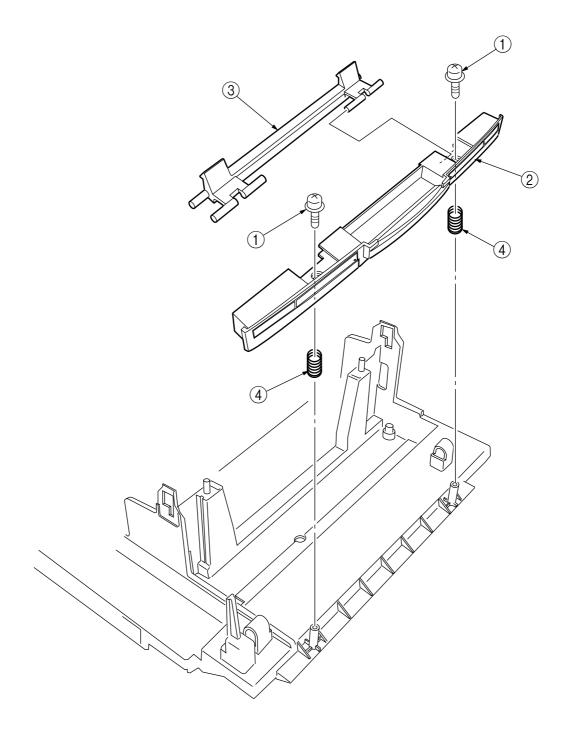


Figure 2-3-5 Top Cover Handle/ Tope Cover Latch/ Top Cover Latch Spring

2.3.6 Eject Guide Assy

(1) Remove the five screws ① to detach the eject guide Assy ②.

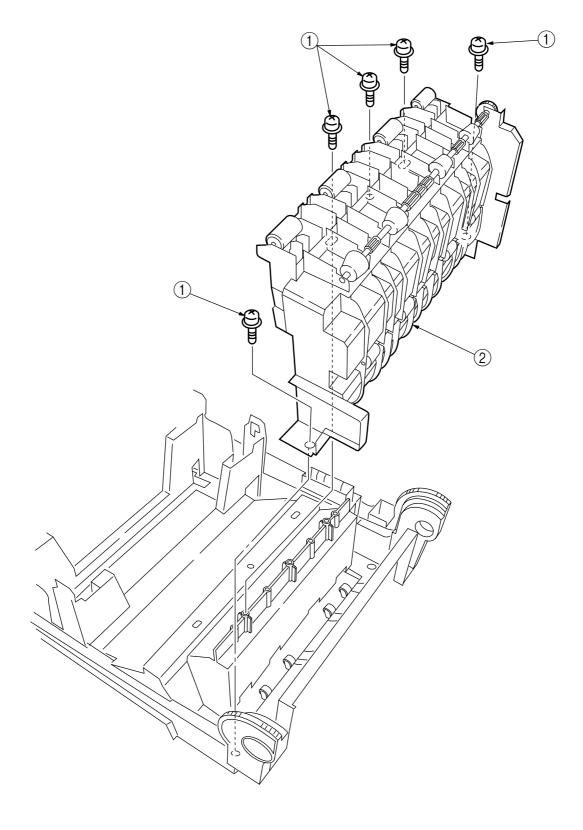


Figure 2-3-6 Eject Guide Assy

2.3.7 Cassette Assy/ Front Cover Assy/ Front Cover Inner Baffle

- (1) Detach the cassette Assy ①.
- (2) Open the front cover ②, and disengage it at two places to detach it.
- (3) Detach the front cover inner baffle ③.

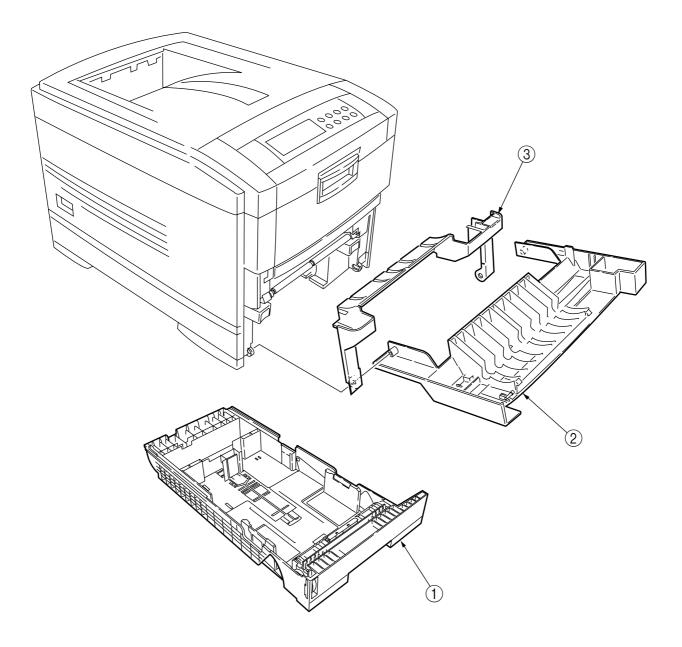


Figure 2-3-7 Cassette Assy/ Front Cover Assy/ Front Cover Inner Baffle

2.3.8 Retard Pad Assy/ Retard Pad Assy Spring

- (1) Remove the cassette \bigcirc .
- (2) Detach the retard pad Assy ② (at the same time, the spring ③ becomes detached).

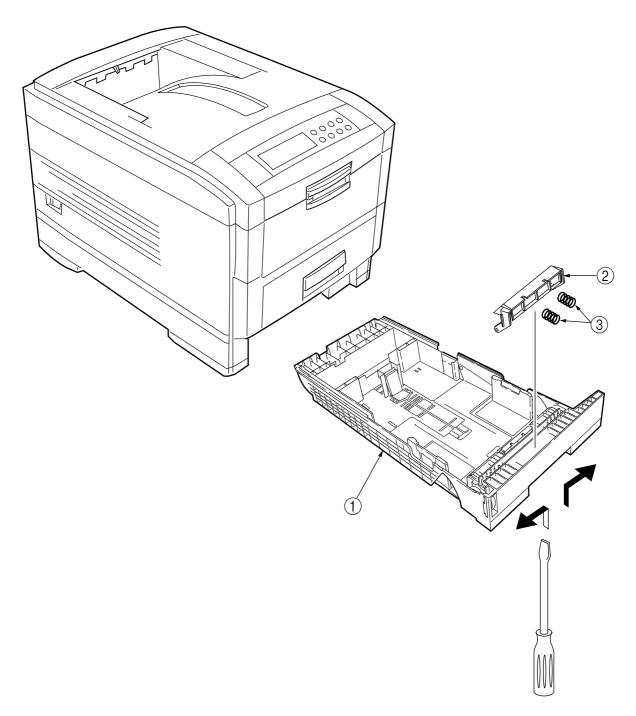


Figure 2-3-8 Retard Pad Assy/ Retard Pad Assy Spring

2.3.9 Feed Roller and Nudger Roller

- (1) Remove the cassette.
- (2) Unlatch and demount the feed roller ①.
- (3) Unlatch and demount the nudger roller ②.

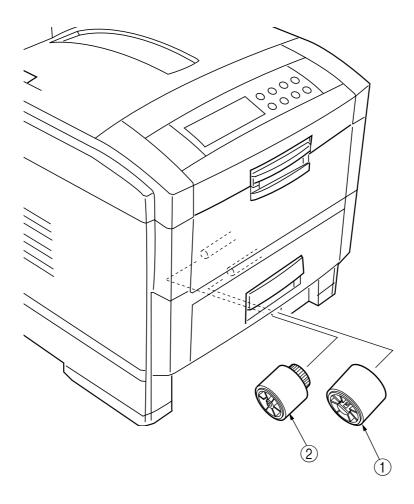


Figure 2-3-9 Feed Roller and Nudger Roller

2.3.10 Rear Cover

- (1) Remove the left side cover (see section 2.3.12).
- (2) Remove the four screws ① to detach the rear cover ②.

Note! When attaching the rear cover, take care not to allow the spring 3 to get caught in parts.

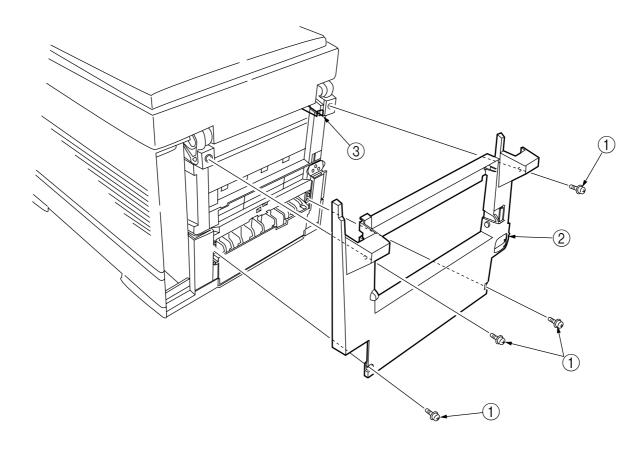


Figure 2-3-10 Rear Cover

2.3.11 Face-Up Tray

(1) Open the face-up tray ① in the arrow direction, and disengage it at two places to detach it.

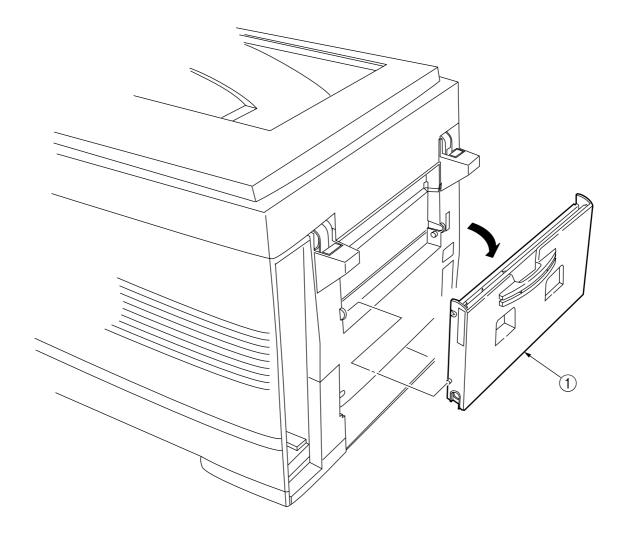


Figure 2-3-11 Face-Up Tray

2.3.12 Left Side Cover

- (1) Open the top cover ①.
- (2) Open the front cover ② and undo the screw ③.
- (3) Remove the four screws 4 to detach the left side cover 5.

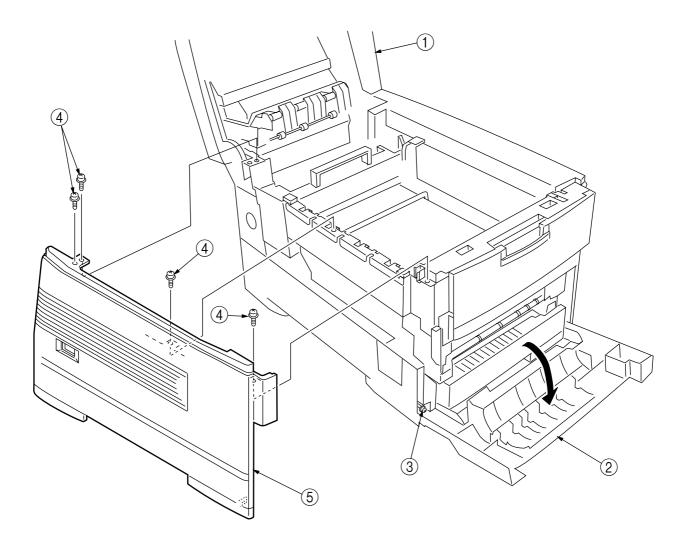


Figure 2-3-12 Left Side Cover

2.3.13 Right Side Cover

- (1) Open the top cover ①.
- (2) Open the front cover ② and undo the screw ③.
- (2) Remove the five screws 4 to detach the right side cover 5.

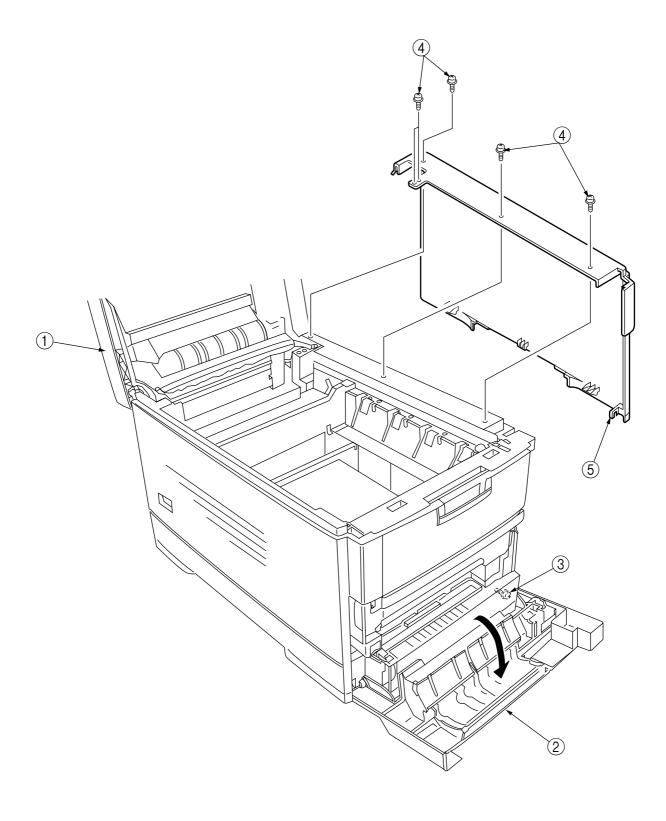


Figure 2-3-13 Right Side Cover

- 2.3.14 Multipurpose Tray Assy/ Multipurpose Tray Cover Assy/ Links/ Multipurpose Tray Top Cover/ Multipurpose Tray Drive Gear
 - (1) Remove the left side cover (see section 2.3.12).
 - (2) Remove the right side cover (see section 2.3.13).
 - (3) Detach the Cover Seal Sensor and the Thickness Sensor Connector (see section 2.3.16).
 - (4) Remove the three screws ① to detach the multipurpose tray top cover ②.
 - (5) Remove the three screws ③ (two of them are black) and the connector to detach the multipurpose tray ④.
 - (6) Disengage (A) and (B) at both sides of the assembly to detach the multipurpose tray cover Assy (5) (at the same time, the links (6) become detached).
 - (7) Unhook and detach the multipurpose tray drive gear \bigcirc .

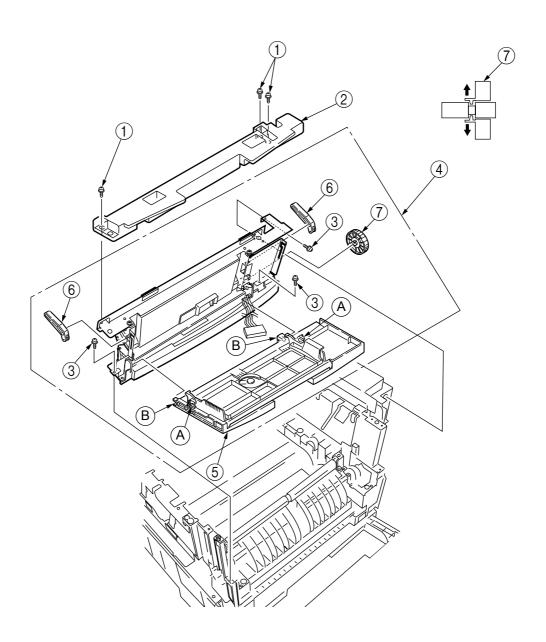


Figure 2-3-14 Multipurpose Tray Assy/ Multipurpose Tray Cover Assy/ Links/ Multipurpose Tray Top Cover/ Multipurpose Tray Drive Gear

2.3.15 Drum Contact Assys

(1) Insert a flatblade screwdriver between the printer case and the drum contact Assy ① to demount the drum contact Assy ①.

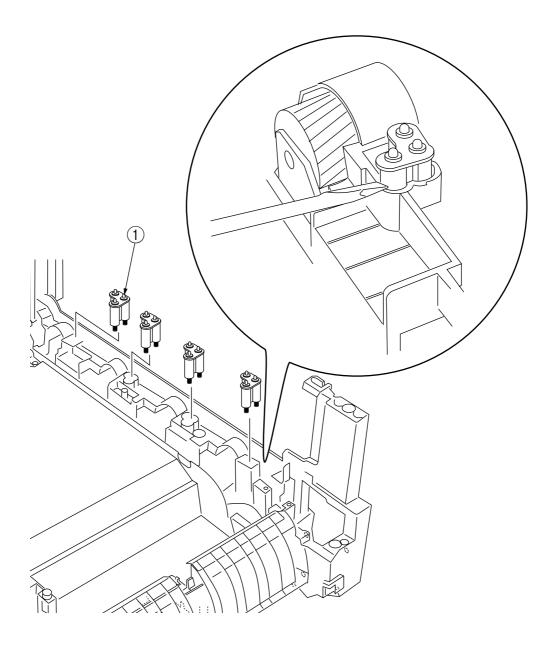


Figure 2-3-15 Drum Contact Assys

2.3.16 Media Thickness Sensor Assy

- (1) Detach the Cover Seal Sensor ① and the Thickness Sensor Connector ②.
- (2) Remove the two screws ③ to demount the Media Thickness Assy.
- (3) Insert a microdriver(-) between the Thickness Plate Assy ④ and Thickness Sensor Assy ⑤ to demount the Thickness Sensor Assy ⑤

Note! When attaching the Media Thickness Assy, adjust [Spin lever adjust by microdriver(-)] the position of lever (White).

The upper surface of the lever be in agreement with a datum level. (Adjustment range 0/-0.5mm) Lever(White) 0/-0.5mm Microdriver Adjustment Datum range Datum level Lever adjust View A Lever(White) View A Figure 2-3-16 Media Thickness Sensor Assy

2.3.17 Registration Roller Assy (A)/ Registration Drive Gear (A)

- (1) Remove the left side cover (see section 2.3.12).
- (2) Remove the right side cover (see section 2.3.13).
- (3) Remove the multipurpose tray (see section 2.3.14).
- (4) Remove the Media Thickness Sensor Assy. (see section 2.3.16).
- (5) Remove the screw ① of the Pickup Stage ②.
- (6) Remove the four screws ③ to demount the registration roller Assy (A) ④ and the Pickup Stage ②.
- (7) Remove the E ring (5) to detach the registration gear (A) (6).

Note! When attaching the pickup stage ②, place the stage height adjustment jig between the pressure roller and the registration roller and, until the top surface of the pickup stage reaches the jig, move the pickup stage toward the jig.(See Table 2-1 Maintenance Tools)

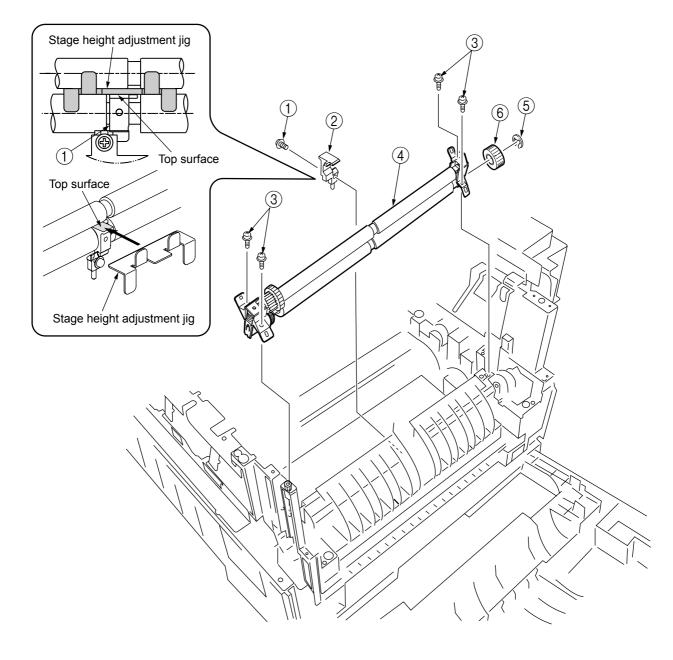


Figure 2-3-17 Registration Roller Assy (A)/ Registration Driver Gear (A)

2.3.18 Registration Roller Assy (B)

- (1) Remove the cassette Assy.
- (2) Open the front cover.
- (3) Remove the right side cover (see section 2.3.13).
- (4) Remove the left plate Assy (see section 2.3.23).
- (5) Remove the registration clutch (see section 2.3.19).
- (7) Unscrew the four screws ①, and pull out the registration Assy (B) ① in the arrow direction.

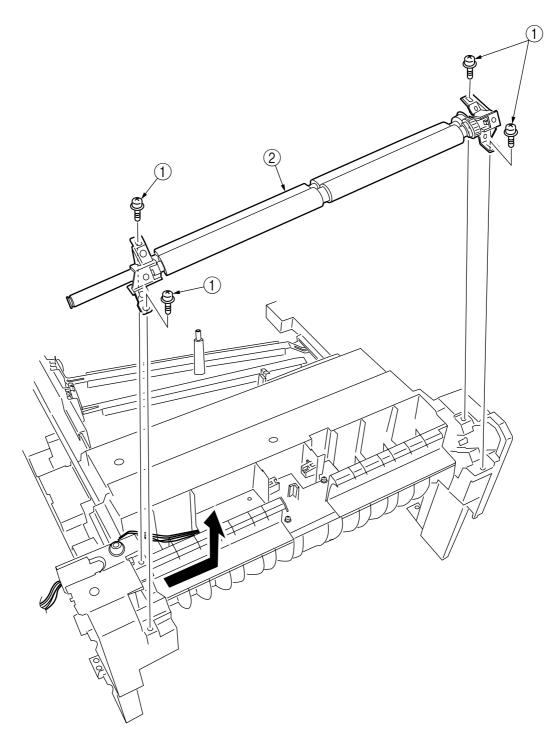


Figure 2-3-18 Registration Roller Assy (B)

2.3.19 Registration Clutch and Registration Motor Assy

- (1) Remove the left side cover (see section 2.3.12).
- (2) Remove the left plate Assy (see section 2.3.23).
- (3) Remove the connector and the E ring ①, then remove the two screws ②, the earth ③ and the registration clutch ④.
- (4) Remove the connector to remove the two screws (5) and the registration motor Assy (6).

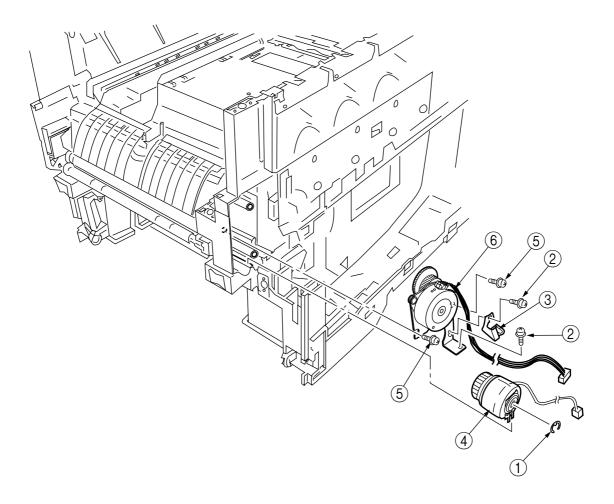


Figure 2-3-19 Registration Clutch and Registration Motor Assy

2.3.20 Main Cooling Fan

(1) Unhook the connector 1, and remove the screw 2 and the cooling fan 3.

Note! When attaching the cooling fan, observe its correct orientation.

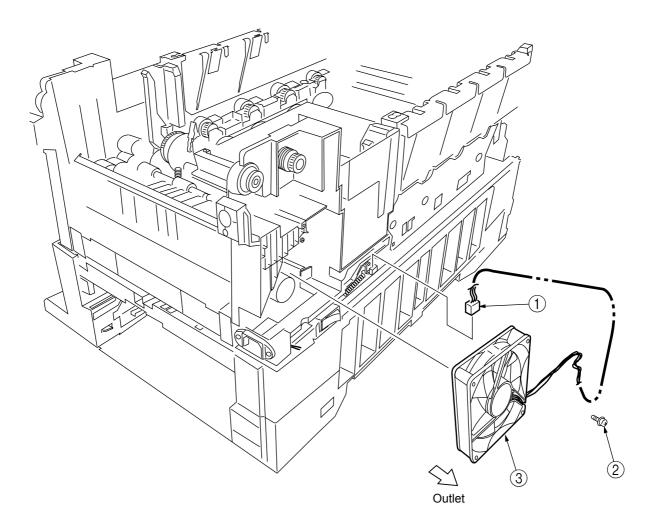


Figure 2-3-20 Main Cooling Fan

2.3.21 Color Registration Sensor Assy

- (1) Remove the two screws ① and the two connectors to demount the color registration sensor Assy ②.
- (2) Remove the earth plate B ③.

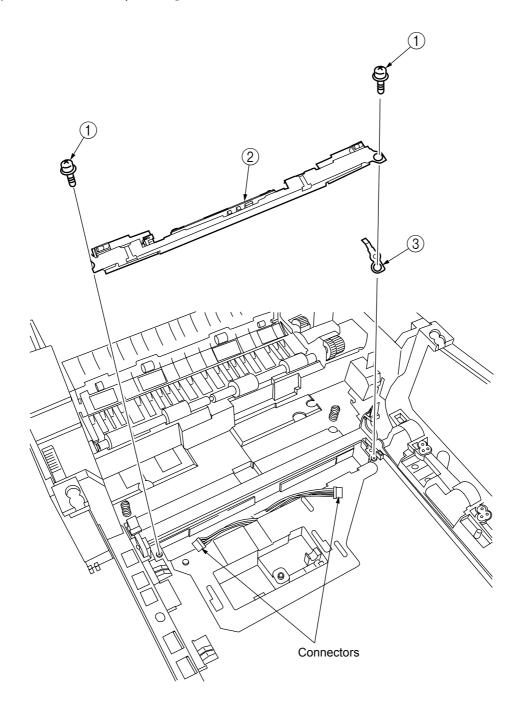


Figure 2-3-21 Color Registration Sensor Assy

2.3.22 Duplex Guide Assy

(1) Unlatch and demount the duplex guide ①.

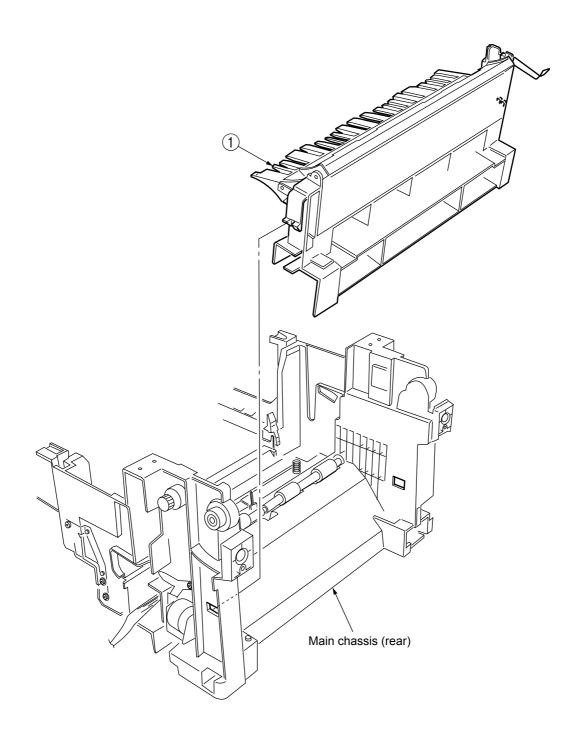


Figure 2-3-22 Duplex Guide Assy

2.3.23 Electrical Chassis Cooling Fan

- (1) Unscrew the four screws ① to remove the plate A ②.
- (2) Unscrew the thirty-four screws ③ to remove the shield plate B ④.
- (3) Remove the printer engine controller PWB (see section 2.3.24).
- (4) Unscrew the eleven screws (5) to remove the shield plate (6).
- (5) Unscrew the two screws $\ensuremath{\mathfrak{T}}$ to demount the electrical chassis cooling fan $\ensuremath{\mathfrak{B}}$.

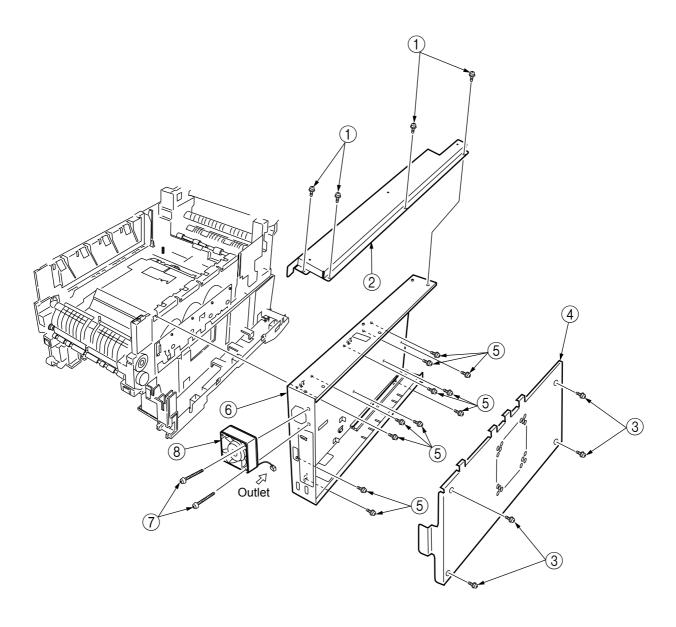


Figure 2-3-23 Electrical Chassis Cooling Fan

2.3.24 Printer Engine Controller PWB

- (1) Remove the right side cover (see section 2.3.13).
- (2) Remove the left plate Assy (see section 2.3.23).
- (3) Remove the five screws 1 and all the connectors to demount the printer engine controller PWB 2.

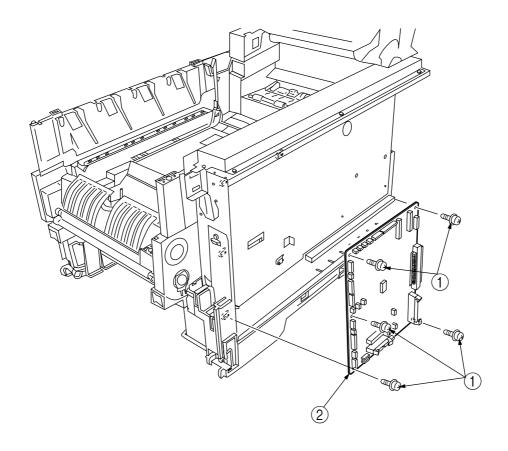


Figure 2-3-24 Printer Engine Controller PWB

2.3.25 Printer Unit Chassis

- (1) Unscrew the two screws ① and remove the AC inlet ②.
- (2) Unscrew the four black screws ③ and five screws ④ to detach the printer unit chassis ⑤.
- (3) Unscrew the four black screws ⑥ and remove the left top cover spring Assy ⑦.
- (4) Unscrew the four black screws (8) and remove the right top cover spring Assy (9).

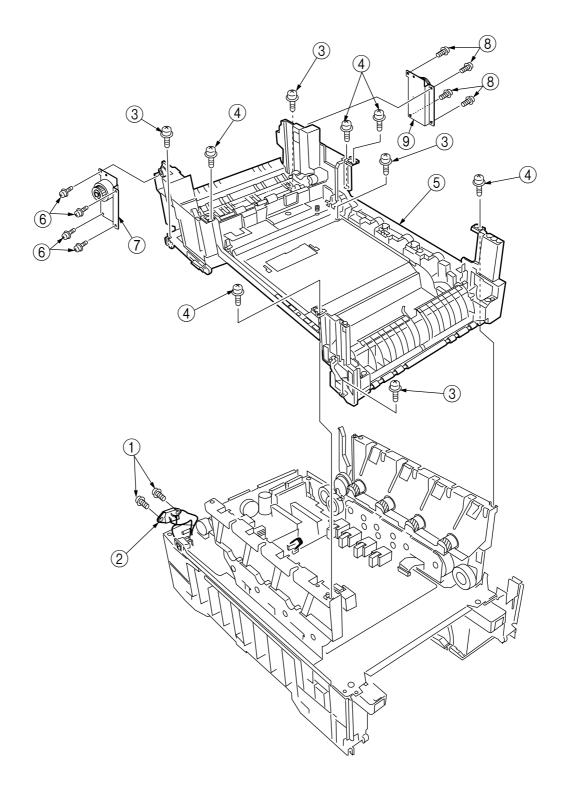


Figure 2-3-25 Pinter Unit Chassis

2.3.26 Entrance Cassette Sensor Actuator

- (1) Remove the printer unit chassis (see section 2.3.25).
- (2) Turn over the main chassis.
- (3) Remove the two clamps with tweezers to demount the entrance cassette sensor actuator ①.

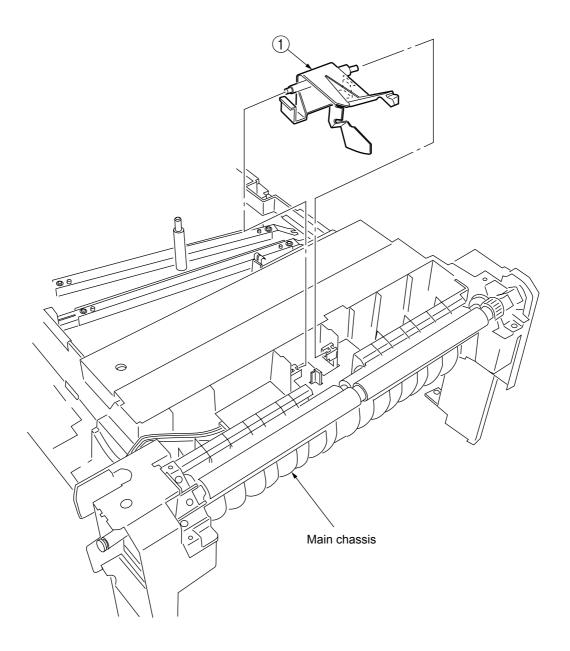


Figure 2-3-26 Entrance Cassette Sensor Actuator

2.3.27 Entrance Sensor PWB

- (1) Remove the registration roller Assy (B) (see section 2.3.18).
- (2) Remove the two screws ① to demount the entrance sensor PWB ②.

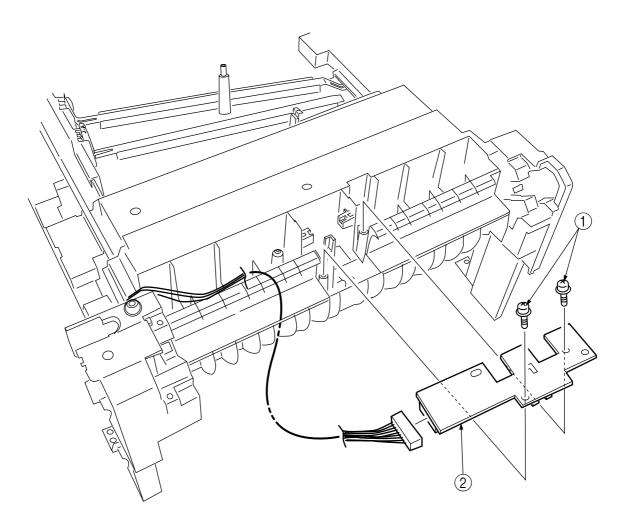


Figure 2-3-27 Entrance Sensor PWB

2.3.28 Entrance MT Sensor Actuator / Entrance Belt Sensor Actuator / Entrance Waste Chassis Sensor Actuator

- (1) Remove the entrance sensor PWB (R71) (see section 2.3.27).
- (2) Unlatch and detach the entrance MT sensor actuator ①.
- (3) Unlatch and detach the entrance belt actuator 2.
- (4) Release the latch and remove the Entrance Waste Chassis Sensor Actuator ③.

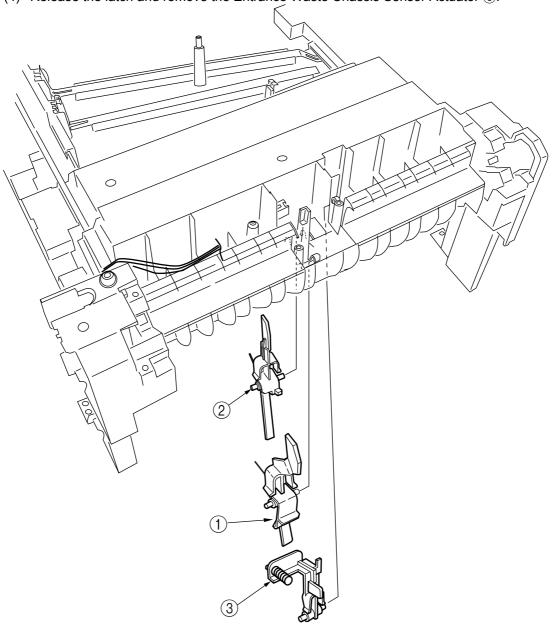


Figure 2-3-28 Entrance MT Sensor Actuator / Entrance Belt Sensor Actuator / Entrance Waste Chassis Sensor Actuator

2.3.29 Fuser Exit Roller

- (1) Unscrew the two screws ① to remove the duplex gate solenoid Assy ②.
- (2) Unscrew the screw ③ to remove the fuser exit roller contact ④.
- (3) Remove the fuser drive gear -A (5) and fuser drive gear -A (6).
- (4) Unscrew the screw ⑦ to remove the fuser drive gear -C ⑧.
- (5) Unlatch and detach the fuser drive gear -B (9) and fuser exit roller bush (R) (10).
- (6) Unlatch and detach the fuser exit roller bush (L) (1) and fuser exit roller (2).

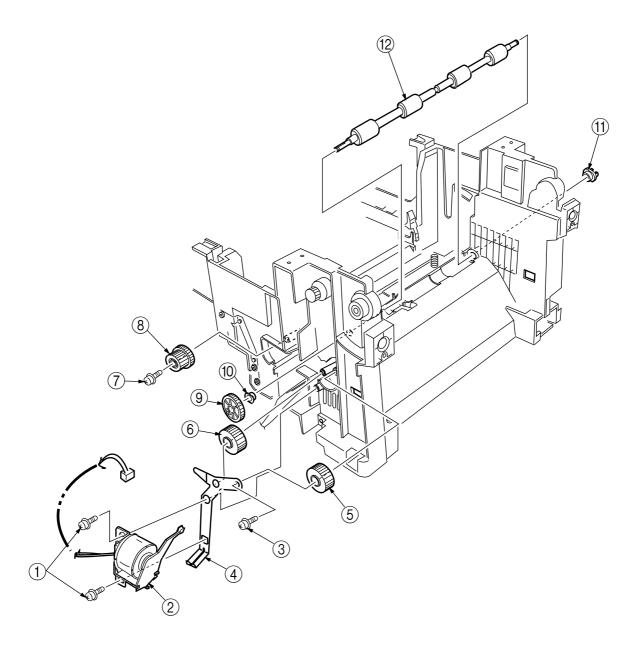


Figure 2-3-29 Fuser Exit Roller

2.3.30 Exit Sensor Assy

- (1) Remove the fuser exit roller (see section 2.3.29).
- (2) Remove the screw ① and connector to demount the (red and blue) exit sensor Assy ②.

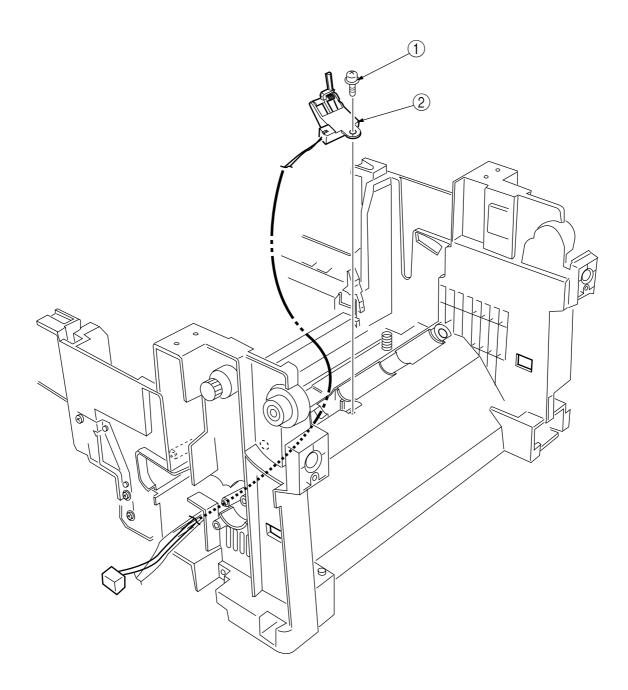


Figure 2-3-30 Exit Sensor Assy

2.3.31 Fuser Latching Handle (L)

- (1) Remove the latching handle spring ①.
- (2) Unscrew the screw ② to detach the fuser latching handle (L) ③.

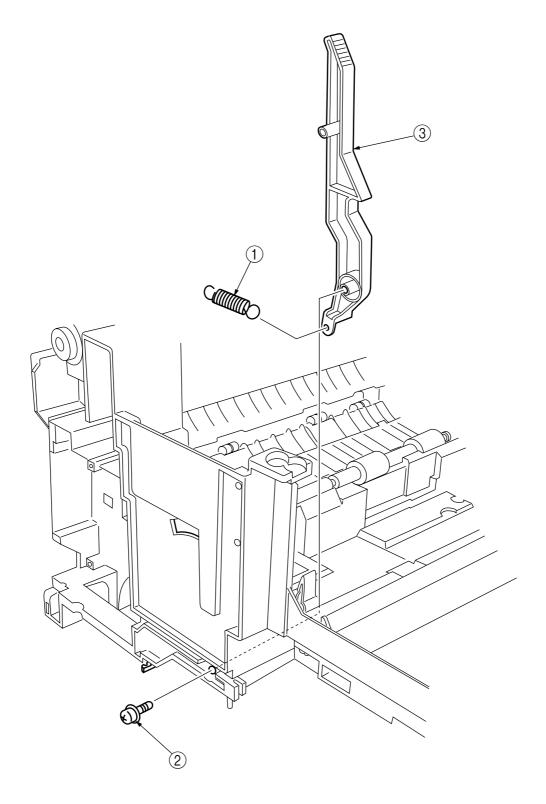


Figure 2-3-31 Fuser Latching Handle (L)

2.3.32 Belt Motor Assy

- (1) Remove the fuser latching handle (R) (see section 2.3.33).
- (2) Remove the two screws ① to detach the two connectors ②.
- (3) Demount the belt motor Assy ③.

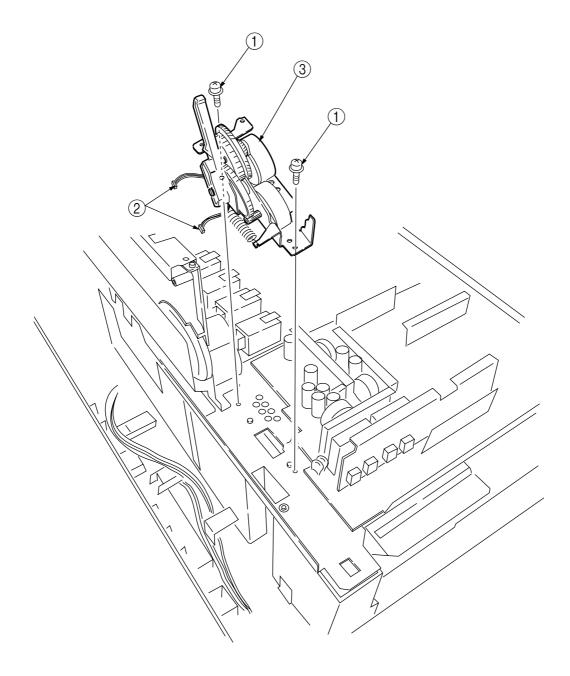


Figure 2-3-32 Belt Motor Assy

2.3.33 Fuser Latching Handle (R)

- (1) Remove the printer unit chassis (see section 2.3.25).
- (2) Remove the E ring ①.
- (3) Remove the fuser latching handle spring ② to detach the fuser latching handle (R) ③.

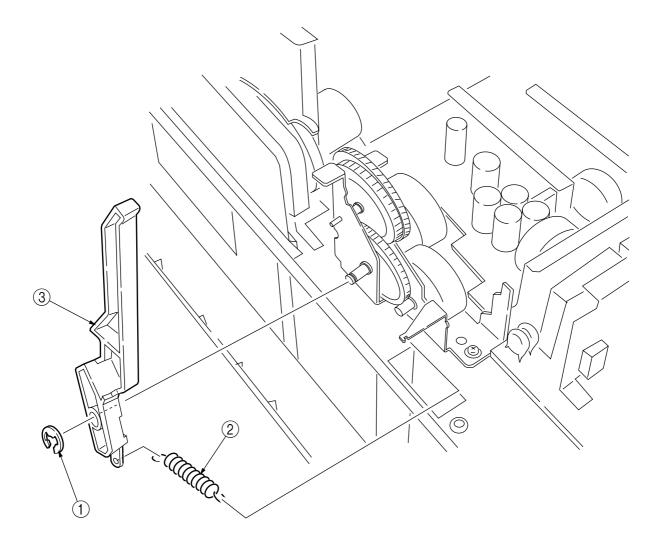


Figure 2-3-33 Fuser Latching Handle (R)

2.3.34 Main Motor Assy

- (1) Remove the belt motor Assy (see section 2.3.32).
- (2) Remove all the connectors.
- (3) Remove the four screws ① to demount the main motor Assy ②.

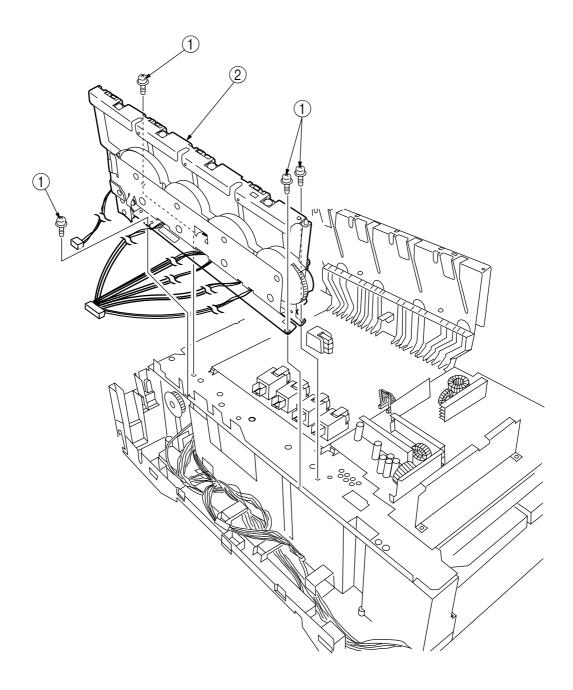


Figure 2-3-34 Main Motor Assy

2.3.35 Main Feeder Drive Motor

- (1) Remove the two screws 1 to detach the main feeder drive motor 2.
- (2) Unscrew the screw ③ to remove the main feeder drive motor bracket ④.
- (3) Remove the main feeder drive motor gears A (5) and B (6).

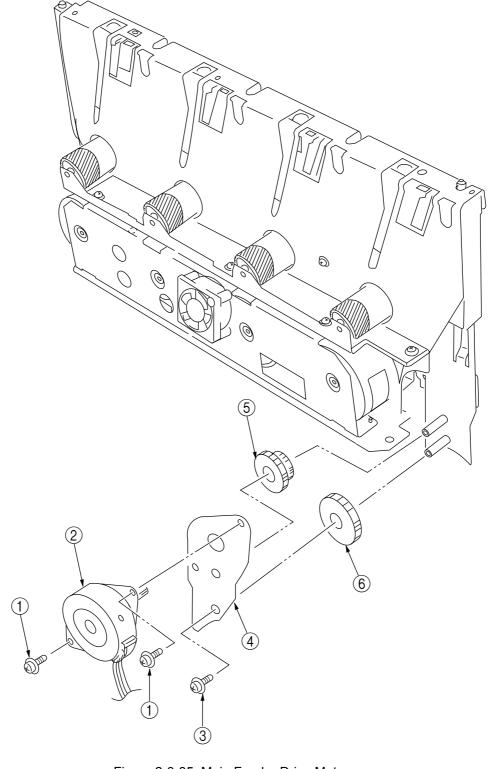


Figure 2-3-35 Main Feeder Drive Motor

2.3.36 Contact Assy/ Left Plate Assy

- (1) Remove the printer unit chassis (see section 2.3.25).
- (2) Remove the four screws 1 to detach the left plate Assy 2.
- (3) Remove the screw ③ to detach the contact Assy ④.

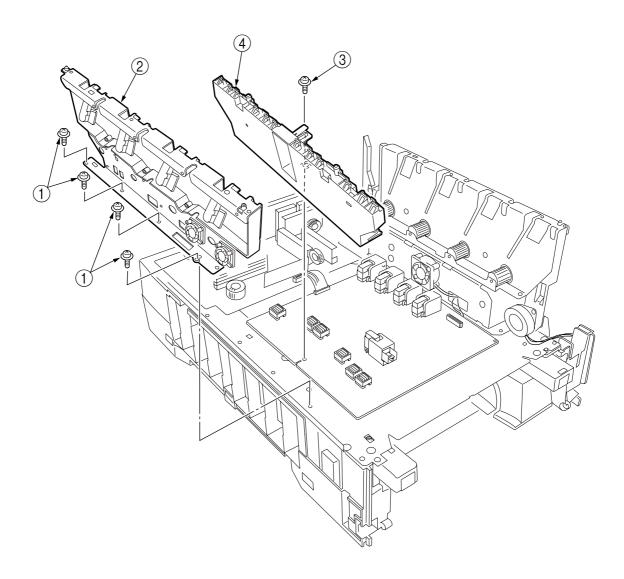


Figure 2-3-36 Contact Assy/ Left Plate Assy

2.3.37 Low Voltage Power Supply

- (1) Remove the printer unit chassis (see section 2.3.25).
- (2) Unhook the connector ①.
- (3) Unscrew the screw ② to remove the earth cable ③.
- (4) Unscrew the six screws 4 to demount the low voltage power supply 5.

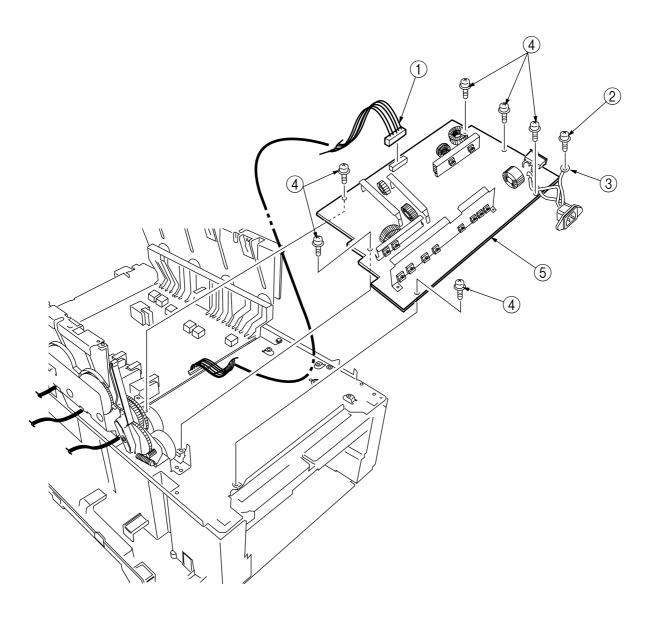


Figure 2-3-37 Low Voltage Power Supply

2.3.38 High voltage power supply

- (1) Remove the contact Assy (see section 2.3.36).
- (2) Unhook the connector of the high voltage power supply ①.
- (3) Remove the two screws ② to detach the high voltage power supply ① and the tape harness ③.

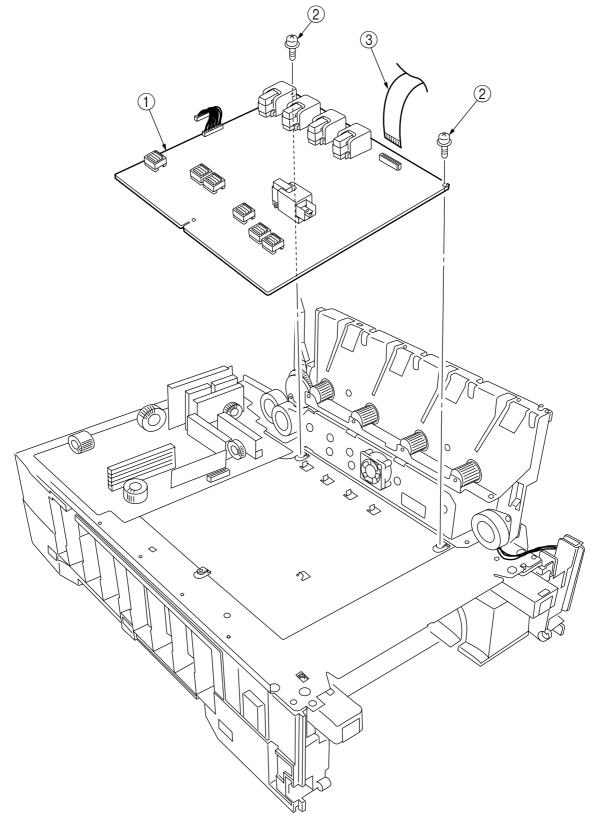


Figure 2-3-38 High Voltage Power Supply

2.3.39 Main Feed Assy

- (1) Remove the printer unit chassis (see section 2.3.25).
- (2) Remove the low voltage power supply and high voltage power supply (see sections 2.3.37 and 2.3.38).
- (3) Unscrew the five screws ① to remove the lower plate ②.
- (4) Unscrew the four screws ③ to demount the main feed Assy ④.
- (5) Unhook and remove the main feed drive gear ⑤.

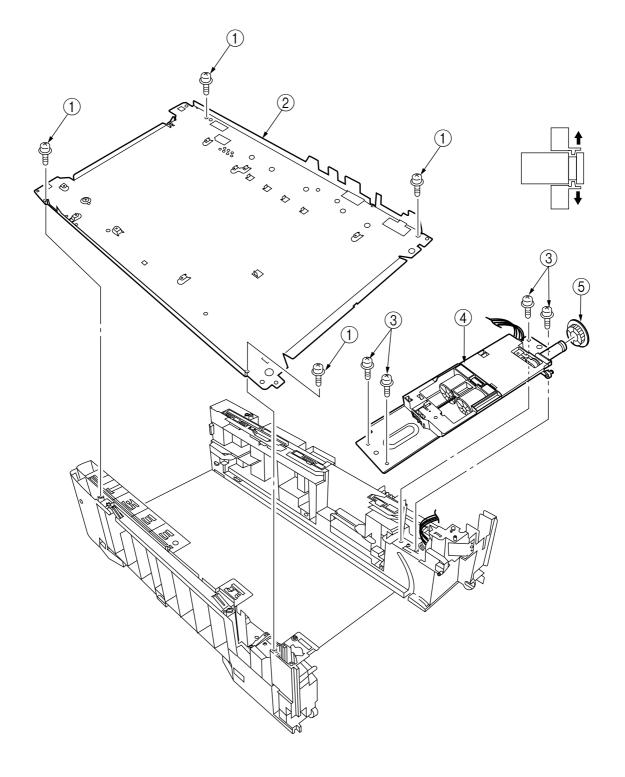


Figure 2-3-39 Main Feed Assy

2.3.40 Cassette/ Left Guide Assy

- (1) Remove the printer unit chassis (see section 2.3.25).
- (2) Remove the main feed Assy (see section 2.3.39).
- (3) Remove the three screws ① to detach the left cassette guide Assy ②. At the same time, the earth plate ③ becomes detached.
- (4) Remove the cassette lift spring ④, then remove the plastic slide ⑤, the cassette lift arm (L) ⑥ and the plastic roller ⑦.
- (5) Remove the two feet (8).
- (6) Remove the cassette lock spring 9, then remove the cassette lock 10.

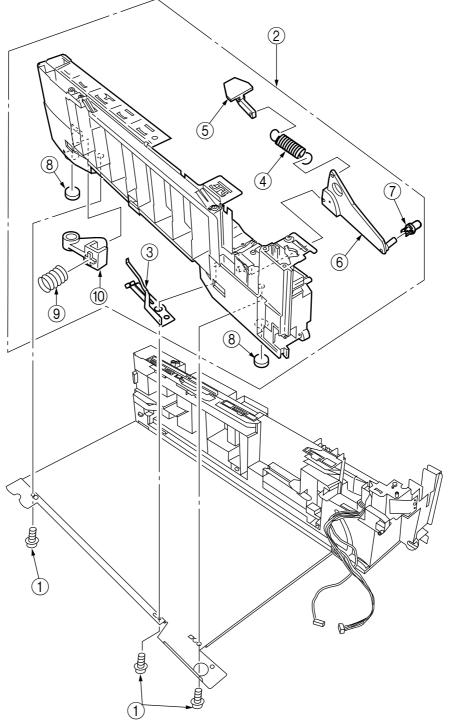


Figure 2-3-40 Cassette/ Left Guide Assy

2.3.41 Cassette/ Right Guide Assy

- (1) Remove the printer unit chassis (see section 2.3.25).
- (2) Remove the main feed Assy (see section 2.3.39).
- (3) Remove the five screws ① to detach the right cassette guide Assy ②. At the same time, the earth plate ③ becomes detached.
- (4) Remove the cassette lift spring ④, then detach the plastic slide ⑤, the cassette lift arm (L) ⑥ and the plastic roller ⑦.
- (5) Unscrew the screw (8) to remove the paper size actuator (9).
- (6) Unscrew the screw (1) to remove the paper size sensing PWB (1) in the downward direction.
- (7) Remove the two feet 12.
- (8) Remove the cassette lock spring 3, then remove the cassette lock 4.
- (9) Unscrew the two screws (5) to remove the 2nd tray connector (6).
- (10) Unscrew the screw ①, then remove the duplex Assy ground contact ⑧.

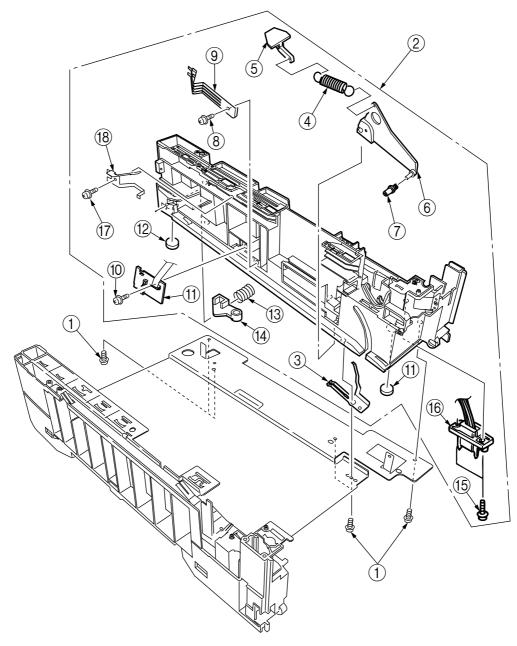


Figure 2-3-41 Printer Tray/ Right Guide Assy

2.3.42 Fuser Unit

- (1) Open the top cover ①.
- (2) Push the right and left fuser levers (blue) @ in the arrow direction to detach the fuser unit @.

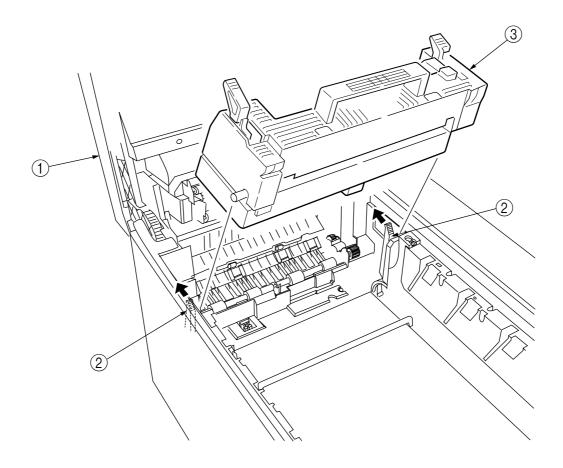


Figure 2-3-42 Fuser Unit

2.3.43 Belt Unit

- (1) Open the top cover ①.
- (2) Remove the I/D unit.
- (3) Push the lever (blue) ② in the arrow direction, raise the handle (blue) ③ and detach the belt unit ④.

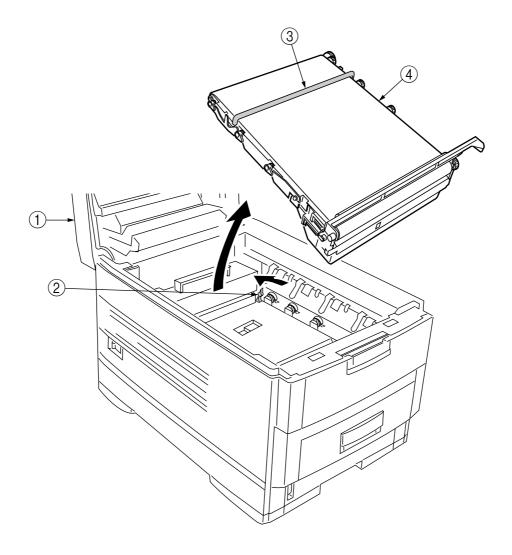


Figure 2-3-43 Belt Unit

2.3.44 Duplex Unit

- (1) Remove the cassette Assy, the front cover Assy and the front cover inner baffle.
- (2) Unlatch the rear at the right and left, and pull the duplex unit ① toward the front.

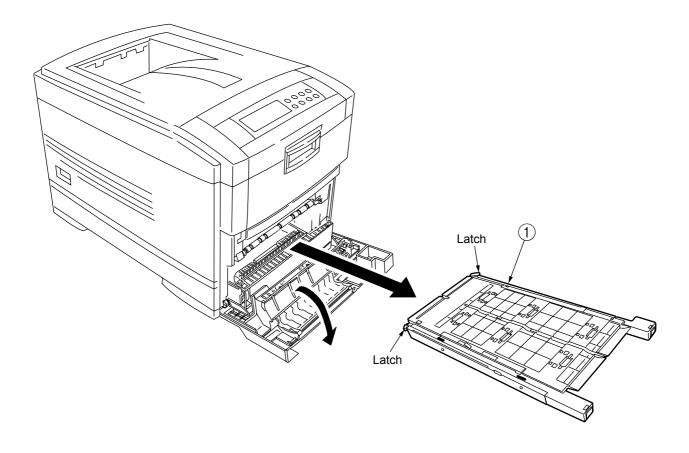


Figure 2-3-44 Duplex Unit

2.3.45 Guide Rails (L) and (R)

- (1) Remove the duplex unit (see section 2.3.44).
- (2) Remove the six screws 1 to detach the guide rails (L) 2 and (R) 3.

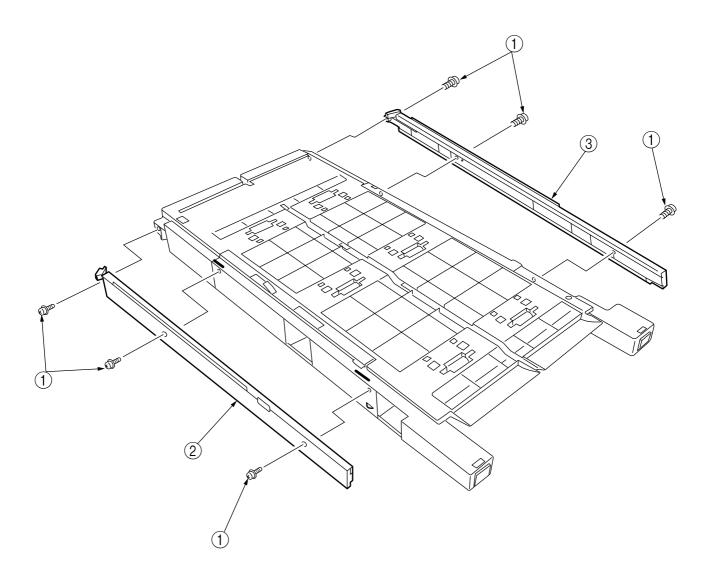


Figure 2-3-45 Guide Rail (L), (R)

2.3.46 Duplex Transport Assembly

- (1) Turn over the duplex transport Assy.
- (2) Unscrew the three screws ① and five screws ② to detach the plate ③.
- (3) Unplug the connector and detach the mold Assy 4.
- (4) Detach the two actuators ⑤.
- (5) Unscrew the screws (6) and (7) to remove the earth (8).
- (6) Unhook the connector and disengage the two claws to detach PCB-MOP (9).
- (7) Unplug the cable and, warping the claw, detach the transport sensor.
- (8) Unscrew the two screws to detach the cord duplex connector Assy.
- (9) Unscrew the screw (10) to remove the earth (11).
- (10) Unscrew the screw 12 to remove the earth 13.
- (11) Unscrew the screw (4) to remove the earth (5).
- (12) Detach the bush (6), gear (7) and bush (8), then detach the roller (9).
- (13) Unscrew the screw ② to remove the earth ②).
- (14) Detach the gear 22 and bush 23. At the same time, the mini pitch belt 24 becomes detached.
- (15) Detach the gear ② and bush ③, then detach the roller ②. At the same time, the mini pitch belt ② becomes detached.
- (16) Unscrew the screw 29 to remove the earth 30.
- (17) Remove the E ring ③ and three screws ② to detach the motor Assy ③. At the same time, the earth ③ becomes detached.
- (18) Detach the gear 35 and bush 36.
- (19) Detach the gear ③, knock-pin ③ and bush ⑤, then detach the roller ⑥.
- (20) Detach the bush ④, gear ④, knock-pin ⑤ and bush ④, then detach the roller ⑤. At the same time, the earths ⑥ and ⑥ become detached.
- (21) Detach the idle roller shaft and the idle roller, then detach the idle roller springs (eight springs).
- (22) Remove the cable of the duplex transport sensor Assy from the claw of the cover-upper. Disengage the claw, then detach the sensor.

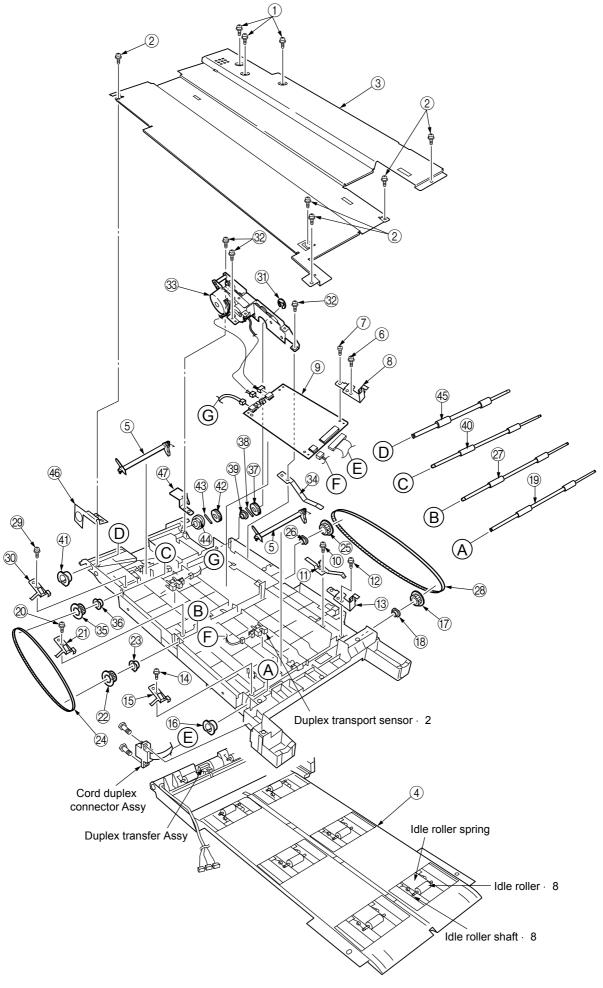


Figure 2-3-46 Duplex Transport Assembly

2.3.47 CU Assy

- (1) Pulling out Controller Board
 - 1. Undo the two screws ①.
 - 2. Pull the controller board ② out.
 - 3. Place the controller board ② on a flat table.
- (2) Detaching Fan
 - 1. Remove the connector ③.
 - 2. Remove the two screws (4).
 - 3. Detach the fan ⑤.

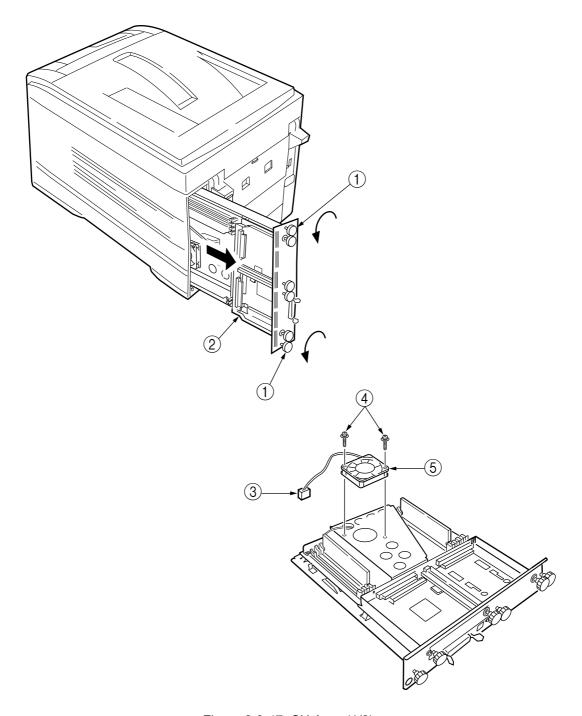


Figure 2-3-47 CU Assy (1/2)

(3) Demounting TIG Board

- 1. Remove the three screws ⑥ and screw ⑦ to detach the fan bracket ⑧.
- 2. Remove the screw (9) and four screws (10) to detach the plate support (11) and the guide rail A(12).
- 3. Remove the two screws (3) to detach the guide rail B(4).
- 4. Remove the two screws ⓑ and two screws ⓑ and the plate-FG(Centro)⑦, then demount the SWA board ⑱.

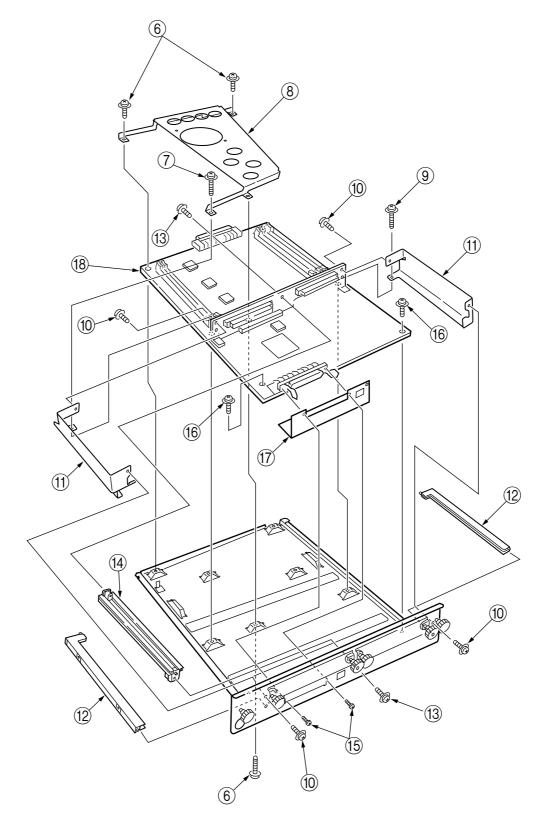


Figure 2-3-47 CU Assy (2/2)

3. ADJUSTMENT

This device is adjusted by key input from the operator panel.

Other than the general menu, this device supports a maintenance menu. Select the menu that matches your objective.

3.0 System Maintenance MENU

The printer enters this mode when you turn on the power supply switch while holding down the [Menu]+[Item]+[Value]+[Cancel] (0+1+6+7)switches.

Note: This menu is not disclosed to end-users because changes can be made to brand/ destination, etc.

Table 3-0 (1/2) Maintenance Menu display Table

Category	Item(1st Line)	Value(2nd Line)	DF	Functions
USER	USER	ODA OEL APS JP1 JPOEM1 OEMA OEML	*	Sets Brand JPOEM1: Japan OEM OEMA: Overseas OEM for A4 default OEML: Overseas OEM for Letter default Boots up automatically when the Menu is existed.
CONFIGURATION MENU	ENGINE SPEED	HIGH LOW	*	For swithing the engine speed between the overseas 16/24PPM model and the 20/24PPM model. (Valid only for 600dpi Head) HIGH: 20/24PPM model ARC200P LOW: 16/24PPM model Reboots automatically as the menu is exited. note: This function is ignored.
	HIGH RESOLUTION	ENABLE DISABLE	*	Not used. note: Don't change the setting value.
ENG STATUS PRINT	ENG STATUS PRINT	EXECUTE		Selecting by the Select switch, then pressing the On-line switch will prompt initialization and printing Engine information.
TEST PRINT MENU	TEST PRINT MENU	ENABLE DISABLE	*	Switches ENABLE and DISABLE to display the TEST PRINT MENU category in the User Menu. (See "ID Check Pattern" section.)
PAGE CNT PRINT	PAGE CNT PRINT	ENABLE DISABLE	*	Sets printing or not printing the total page count in PRINT MENU MAP.
PERSONALITY	PCL	ENABLE DISABLE	*	Cange the default PDL for each brand.
	IBM PPR III XL	ENABLE DISABLE	*	PDLs that are disabled in this Menu will not be displayed on User Menu or Adomin Menu's PERSONALITY.
	EPSON FX	ENABLE DISABLE	*	When print data in the PDL language set to DISABLE is received, the printer will display INVALID DATA and discard received data. (HP-CL/C) is under development, and there is no plan.
	Adobe Postscript	ENABLE DISABLE	*	GL/2 is under development, and there is no plan to implement as yet in the product.) The PDF function requires Adobe Postscript;
	HP-GL/2	ENABLE DISABLE	*	thus, switching ON/OFF of PDF alone is disabled. (Setting Adobe Postscript on DISABLE will set
	PCL XL	ENABLE DISABLE	*	the PDF function to DISABLE as well.) neither Adobe Postscript nor PDF can be set to DISABLE. (They are to be
	PDF	ENABLE DISABLE	*	always set to ENABLE for use. Even if they are set to DISABLE, the printer processes the data it receives. This item is incorporated only in the menu ahead of time for future extension.)

Table 3-0 (2/2) Maintenance Menu display Table

Category	Item(1st Line)	Value(2nd Line)	DF	Functions
NETWORK				The details depend on Network. (Not used)
DIAGNOSTIC MODE XX.XX.XX				Enters engine self-diagnostic mode. The display in place of xx.xx varies among the PU version. (The disply within this category depends on the Engine Maintenance specs.)

Switch operations and LCD displays in Engine Self-diagnostic Mode depend on the instructions from the Engine F/W; hence, they are different from the operation spec in the Controller F/W.

Engine Self-diagnostic Mode is excutable even if the Controller board is removed.

For details, see the Engine Unit spec as needed.

3.0.1 ID Check Pattern Printing (" TEST PRINT MENU " item)

This pattern can be used for the cause investigation (specifying of color(C,M,Y,K) of the problem item, the confirmation of the periodicity) of the following problem that it originated in ID, the LED head. It is composed of CMYK color 20% duty each of the patterns (print 2 pages).

Operation: (Press switch)

Without HDD: "0" - "0" - "3" - "3" With HDD : "0" - "0" - "0" - "3" - "3"


- Vertical Black/White Lines
- Vertical Black/White Bands
- Horizontal Black/White Lines
- Horizontal Black/White Bands

Print pattern:

Page.1

Y M+Y M C K

Page.2

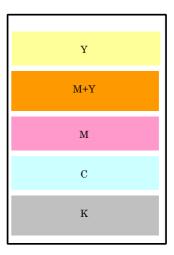

3.1 Maintenance Mode and Functions

3.1.1 Maintenance menu

A maintenance menu category is located in the general menu category. The following items are those that can be set with this menu.

Maintenance Menu


Category	Item(1st Line)	Value(2nd Line)	DF	Functions
MAINTENANCE MENU	EEPROM reset	EXECUTE	*	Resets EEPROM for CU.
	SAVE MENU Save menu setting	EXECUTE	*	Saves current menu setting. A message asking Are you sure? and a choice of YES/NO will appear.
	RESTORE MENU Return to saved menu setting	EXECUTE	*	Changes setting to the stored menu setting. (Displayed only when a menu setting is stored.) NOTE: Stored in CU Flash (directly attached). In HDD if HDD exists.
	POWER SAVE Power save function	Enabled Disabled	*	Enables or disables the power save mode. The time to switch to Power Save Enable can be changed with the Power Save Delay Time Item in the System Configuration Menu.
	Normal paper black setting	0 +1 +2 -2 -1	*	Normal Paper/Black Print Used for fine adjustment when scratches or dots are notable on print results. Decrement if the highly-dense print portion seems dispersed or scattered with white dust. Increment if the print result seems faint.
	Normal paper color setting	0 +1 +2 -2 -1	*	Normal Paper/Color Print Used for fine adjustment when scratches or dots are notable on print results. Decrement if the highly-dense print portion seems dispersed or scattered with white dust. Increment if the print result seems faint.
	OHP paper black setting	0 +1 +2 -2 -1	*	OHP/Black Print Used for fine adjustment when scratches or dots are notable on print results. Decrement if the highly-dense print portion seems dispersed or scattered with white dust. Increment if the print result seems faint.
	OHP paper color setting	0 +1 +2 -2 -1	*	OHP/Color Print Used for fine adjustment when scratches or dots are notable on print results. Decrement if the highly-dense print portion seems dispersed or scattered with white dust. Increment if the print result seems faint.


3.1.2 Engine maintenance mode

Three modes from Level 1 to Level 3 are in the engine maintenance mode. Level 1 is a mode that checks the media transport and basic movement of the print system. Level 2 checks the counter for consumables and tests the correcting function of color displacement, and is a mode that does not require special knowledge. Level 3, on the other hand, requires special knowledge for handling the process parameter setting and is contained in the independent experimental element of PU. Basically, levels other than Level 1 should not be used.

3.1.2.1 Operator panel

The description for operations related to self-diagnosis is made presuming the arrangement of the operator panel shown below.

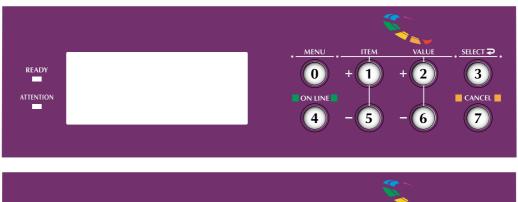

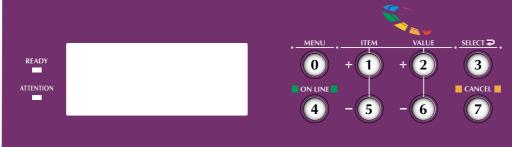

3.1.2.2 Normal self-diagnostic mode (Level 1)

Items in the normal self-diagnostic mode menu are listed below.

- Switch scan test
- Motor & clutch test
- Executing test pattern
- NVM initialization
- Consumables counter display
- Consumables continuation counter display

3.1.2.2.1 Entering self-diagnostic mode (Level 1)

- 1. The system maintenance menu mode is entered by turning the power ON while pressing the ①,①,⑥, and⑦keyssimultaneously.
- 2. Press the **(0**) key several times until [DIAGNOSTIC MODE] is displayed.

```
DIAGNOSTIC MODE

XX.XX.XX FACTORY/SHIPPING
```

- 3. The [XX.XX.XX] in [DISGNOSTIC MODE XX.XX.XX] that is displayed in the LCD display is the ROM version. The set value for FACTORY WORKING MODE is displayed in the right side of the bottom line. [SHIPPING] is normally set.
- 4. Proceed to each self-diagnosis step by pressing the ① or ⑤ key. (The menu item rotates by pressing the ①,⑥ key.)

3.1.2.2.2 Exiting the self-diagnostic mode


1. Turn the power OFF, then turn it on after ten seconds.

3.1.2.3 Switch scan test

This self-diagnosis is used for checking the input sensor and switch.

1. Press the ① and ⑤ keys until the normal diagnostic mode is entered and [SWITCH SCAN] is displayed on the top line.

(Key 1) increments the test item and Key 5 decrements the test item.)



2. Press the ② and ⑥ keys until the SCAN number that corresponds to the unit subject to the following test listed in Table 3-1. (Key ② increments the item and Key ⑥ decrements the item.)

```
SWITCH SCAN 00

1=H 2=L 3=H 4=L
```

- 3. The test starts by pressing the ③ key. The SWITCH SCAN number begins to blink and the number of the corresponding unit (1-4) is displayed along with the current status. Manipulate each unit (Fig 3-1). The items are displayed in the LCD that corresponds to each item. (The display differs for each sensor. See Table 3-1 for details.)
- 4. The SWITCH SCAN number reappears in the display status (blinking ceased) by pressing the (7) key.
- 5. Repeat Steps 2 to 4 as required.
- 6. Press the 4 key to end the test. (Status returns to that described in 1.)

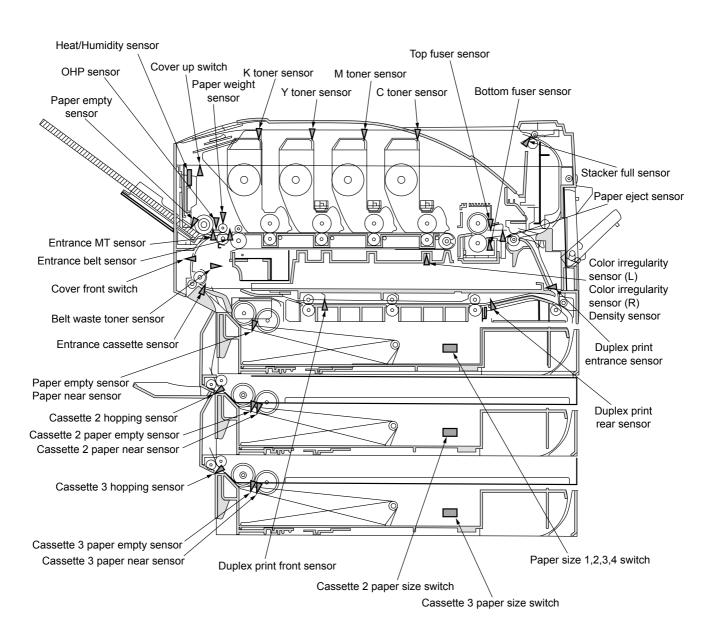


Figure 3-1 Switch Sensor Position

81 /

Table 3-1 SWITCH SCAN Details

				Ž N N	NUMBER			
	1	Display	2	Display	3	Display	4	Display
SWITCH SCAN 00	Cassette 1 paper end sensor	Port level H,L	Cassette 1 paper near end sensor	Port level H,L	Entrance cassette sensor	Port level H,L	Entrance MT sensor	Port level H,L
SWITCH SCAN 01 E	Entrance belt sensor	Port level H,L	Eject sensor	Port level H,L	Stacker full sensor	Port level H,L	Belt waste toner	Port level H,L
SWITCH SCAN 02	K toner sensor	Port level H,L	C toner sensor	Port level H,L	M toner sensor	Port level H,L	Y toner sensor	Port level H,L
SWITCH SCAN 03	Upper cover SW	Port level H,L	Front cover SW	Port level H,L	1	ı	1	1
SWITCH SCAN 04		1	1		1	1		
SWITCH SCAN 05	1	1	1		1		1	
SWITCH SCAN 06	MT hop switch	Port level H,L	MT paper empty SW	Port level H,L	1	1	OHP sensor	Port level H,L
SWITCH SCAN 07 (See Table 4-2)	Cassette 1 paper size SW	Port level H,L	Cassette 1 paper size 2 SW	Port level H,L	Cassette 1 paper size 3 SW	Port level H,L	Cassette 1 paper size 4 SW	Port level H,L
SWITCH SCAN 08	Color irregularity sensor	AD value ***H	Color displacement sensor (R)	AD value ***H	Density sensor	AD value ***H	Paper weight sensor	AD value ***H
SWITCH SCAN 09 C	Center sensor above fuser	AD value ***H	1	1	Center sensor below fuser	AD value ***H	ı	ı
SWITCH SCAN 10	Humidity sensor	AD value ***H	Temperature sensor	AD value ***H	ı	1	1	ı
SWITCH SCAN 11 D	Duplex print entrance sensor	Port level H,L	Duplex print rear sensor	Port level H,L	1	1	Duplex print front sensor	Port level H,L
SWITCH SCAN 12 (Option)	Cassette 2 paper size 1 SW	Port level H,L	Cassette 2 paper size 2 SW	Port level H,L	Cassette 2 paper size 3 SW	Port level H,L	Cassette 2 paper size 4 SW	Port level H,L
SWITCH SCAN 13 (Option)	Cassette 2 paper empty sensor	Port level H,L	Cassette paper near end sensor	Port level H,L	1	1	ı	ı
SWITCH SCAN 14 (Option)	1	ı	1	1	Cassette 2 hopping sensor (paper feed)	Port level H,L	ı	ı
SWITCH SCAN 15 (Option)	Cassette 3 paper size 1 SW	Port level H,L	Cassette 3 paper size 2 SW	Port level H,L	Cassette 3 paper size 3 SW	Port level H,L	Cassette 3 paper size 4 SW	Port level H,L
SWITCH SCAN 16 (Option)	Cassette 3 paper empty sensor	Port level H,L	Cassette 3 paper near end sensor	Port level H,L	1	1	1	1
SWITCH SCAN 17 (Option)		1			Cassette 3 hopping sensor (paper feed)	Port level H,L		1
SWITCH SCAN 24	Black head temperature	AD value ***H	Yellow head temperature	AD value	Magenta head temperature	AD value	Cyan head temperature	AD value ***H
SWITCH SCAN 25	Black ID up/down sensor	Port level H,L	Yellow ID up/down sensor	Port level H,L	Magenta ID up/down sensor	Port level H,L	Cyan ID up/down sensor	Port level H,L

Table 3-2 Paper Size Detection - Paper /Bit Correspondence Table

No.	Paper	1	2	3	4
[0]	No cassette	Н	Н	Н	Н
[1]	Letter-S	L	L	L	L
[2]	Legal13-S	Н	L	Н	Н
[3]	A4-S	L	L	L	Н
[4]	B5-S	L	L	Н	Н
[5]	Executive-S	L	L	Н	L
[6]	A6-S	Н	L	L	L
[7]	Not supported	_	_	_	_
[8]	Legal14-S	Н	L	н	L
[9]	Not supported	_	_	_	_
[A]	Not supported	_	_	_	_
[B]	Not supported	_	_	_	_
[C]	A5-S	Н	L	L	Н
[D]	Not supported	_	_	_	_
[E]	Not supported	_			_
[F]	Not supported	_	_	_	_

3.1.2.4 Motor clutch test

This self-diagnostic routine is used to test the motor and clutch.

- 1. Press the ① and ⑤ keys until the self-diagnostic (Level 1) mode is entered and [MOTOR & CLUTCH TEST] is displayed in the top line.(Key ① increments the test item and Key ⑤ decrements the test item.)
- 2. Press the ② and ⑥ keys until the section that corresponds to the unit subject to the next test in Table 3-2 is displayed in the top line of the display. (Key ② increments the item and Key ⑥ decrements the item.)

```
MOTOR & CLUTCH TEST

BLACK - ID MOTOR
```

3. The test starts by pressing the (3) key. The name of the unit begins to blink and the corresponding unit drives for 10 seconds. (See Fig 3-3.)

Note: The status returns to that described in 2 after driving 10 seconds, and the unit will start driving again be pressing the corresponding switch.

- The drive control conditions listed in Table 3-2 must be fulfilled in order to drive the corresponding unit. A unit cannot be driven without fulfilling the conditions, and if attempted, instructions will appear in the bottom display line.
- For clutch solenoid, ON and OFF is repeated for normal print drive. (For those that cannot be driven independently due to their mechanism, drive with the motor.)
- 4. A driving unit is stopped by pressing the key. (The display of the corresponding unit is maintained.)
- 5. Repeat Steps 2 to 4 as required.
- 6. Press the **4** key to end the test. (Status returns to that described in 1.)

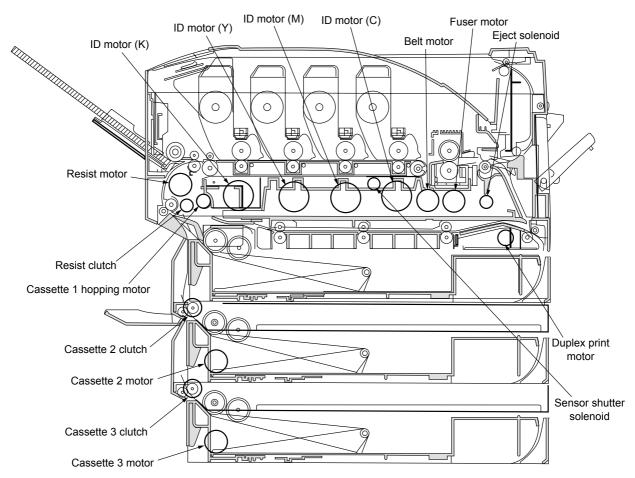


Figure 3-3

Table 3-2

Displayed Unit	Drive Restrictions	Restriction Display
ID motor (black)	Drive by removing all ID	Remove ID
ID motor (yellow)	(yellow/black/magenta/cyan).	
ID motor (magenta)		
ID motor (cyan)		
Belt motor		
Fuser motor	-	-
Resist motor	-	-
Cassette 1 hopping motor	Drive by removing Cassette 1.	Remove Cassette 1
Resister clutch	-	-
Sensor shutter solenoid	-	-
Eject solenoid	-	-
Duplex print motor (option)	-	-
Duplex print clutch (option)	-	-
Cassette 2 motor (option)	Drive by removing Cassette 2.	Remove Cassette 2
Cassette 2 roller clutch (option)	-	-
Cassette 3 feeder motor (option)	Drive by removing Cassette 3.	Remove Cassette 3
Cassette 3 roller clutch (option)	-	-
ID UP/DOWN	-	-
FAN1 TEST (Power Source Fan)		-
FAN2 TEST (Control Unit Fan)	-	-

3.1.2.5 Test print

This self-diagnostic routine is used to print the test patterns in the PU. The other test patterns are stored in the controller.

- 1. Press the ① and ⑤ keys until the self-diagnostic (Level 1) mode is entered and [TEST PRINT] is displayed in the top line. (Key ① increments the test item and Key ⑥ decrements the test item.)
- 2. The bottom line displays the setup items applied only for test print. Press the ② and ⑥ keys until the corresponding item is displayed. (Key ② increments the item and Key ⑥ decrements the item.)
- 3. When the ③ and ⑦ keys are pressed, the setup items appear in the top line and set values appear in the bottom line. The set value increments by pressing the ③ key and decrements by pressing the ⑦ key. (The value that is set at the end will be applied.) Repeat Stop 3 as required.

TEST	PATTERN
1	

Display	Set Value	Function
PRINT EXECUTE	_	Press Key ③ to start print. / Press Key ⑦ to end print.
		(In page unit.)
TEST PATTERN	0	0: empty page
		1-7: Refer to the following page (pattern print).
		8-15: empty page
CASSET	TRAY1	Set paper feed source.
	TRAY2	
	TRAY3	
	FF	
PAGE	0000	Set number of pages to test print.
COLOR	ON	Select color or monochrome.
	OFF	
DUPLEX	2 PAGES STACK	Perform duplex print with 2-page stack.
	OFF	Set duplex print to OFF.
	1PAGES STACK	Perform duplex print with 1-page stack.

• is the default. The set items are valid only in this test mode. (They will not be written in EEPROM.)

Note: Page setting: Key 1 or 5 shifts the digits.

Color setting: The following indications appear in the panel when Key ① or ⑤ is pressed when set to [ON].

Print setting for each color:

Shifts by pressing Key (1) or (5).

Switch between [ON] and [OFF] is set by pressing Key 3 or 7.

Panel indication returns by pressing Key (2) or (6).

COLOR

Y:ON M:ON C:ON K:ON


4. Test print will be executed under the values set in Steps 2 and 3 by pressing the 3 key when [PRINT EXECUTE] is displayed in the bottom row of the display.


Press the 7 key to stop the test print.

When an alarm indicated under Details in the table is detected at the start of test print or during test print, a message will appear in the panel display and the print operation will be interrupted. (Refer to "3.1.2.9 Panel display details" for details on errors.)


Print pattern

0, 8-15: Empty print

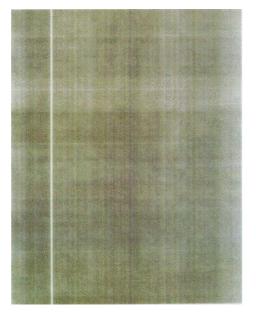


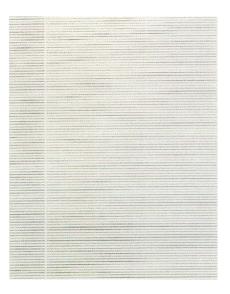

Pattern 1

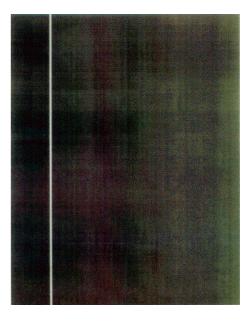


Pattern 2

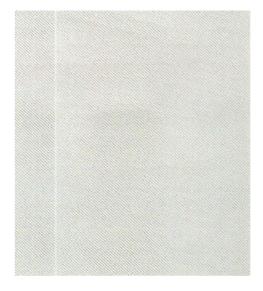


Pattern 3 Pattern 4



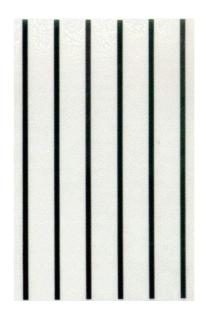

Pattern 5

Pattern 6

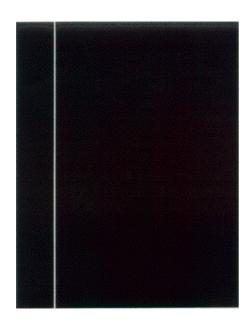

Pattern 7

• The following messages appear during print operation.

```
P=*** T=*** U=***[###]
H=***% L=***[###]
```

- P: No. of test print pages (unit: page)
- U: Temperature of top heater [Set value] (unit: Celsius)
- L: Temperature of bottom heater [Set value] (unit: Celsius)
- T: Environment temperature (unit: Celsius)
- H: Environment humidity (unit: percent)
- The display changes by pressing the 3 key.

```
KTR=*.**KV YTR=*.**KV

MTR=*.**KV CTR=*.**KV
```

YTR, MTR, CTR, KTR are values of the set transfer voltage. (unit: KV)

• The display changes by pressing the **3** key.

```
KR=*.**KV YR=*.**KV
MR=*.**KV CR=*.**KV
```

YR, MR, CR, KR are transfer rollers of each color values of the set transfer voltage. (unit: KV)

- 5. Repeat Steps 2 to 4 as required.
- 6. Press the **4** key to end the test. (Status returns to that described in 1.)

3.1.2.6 Initializing NVM

This self-diagnosis is used for initializing non-volatile memory.

- 1. Press the ① and ⑤ keys until the self-diagnostic (Level 1) mode is entered and [NV-RAM INITIAL] is displayed in the top line. (Key ① increments the item and Key ⑤ decrements the item.)
- 2. The bottom line displays the table number subject to initialization. There are three tables to initialize. Press the ② and ⑥ keys until the corresponding table number is displayed. (Key ② increments the table number and Key ⑥ decrements the table number.)

Note: Do not use Table 2.



- 3. The [NV-RAM INITIAL] display blinks when the ③ key is pressed and all items in Table 3-3 will be initialized by pressing the key for 10 seconds continuously.
- 4. Press the **4** key to end the test. (Status returns to that described in 1.)

Table 3-3 (1/2) Items to Initialize in Table 2

Item to Initi	alize	Details	Initial Value	Unit
Drum counter	Black	Initialize internal counter since	0	-
	Yellow	exchanging the drum.		
	Magenta			
	Cyan			
Belt unit counter		Initialize internal counter since	0	-
		exchanging the belt unit.		
Fuser unit		Initialize internal counter since	0	-
counter		exchanging the fuser unit.		
Toner counter	Black	Initialize internal counter since	0	-
	Yellow	recovering the toner error.		
	Magenta			
	Cyan			

Table 3-3 (2/2) Items to Initialize in Table 2

Item to Initi	alize	Details	Initial Value	Unit
Color irregularity	Yellow	Initialize X axis correction value for	0	1/1200 inch
adjust point X	Magenta	the LED head (yellow, magenta,		
axis	Cyan	cyan).		
Color irregularity	Yellow	Initialize Y axis (L) correction value	0	1/1200 inch
adjust point Y	Magenta	for the LED head (yellow, magenta,		
axis (L)	Cyan	cyan).		
Color irregularity	Yellow	Initialize Y axis (R) correction value	0	1/1200 inch
adjust point Y	Magenta	for the LED head (yellow, magenta,		
axis (R)	Cyan	cyan).		
Engine		Initialize all items set in Level 2 and 3		
parameter		in the engine maintenance mode.		

3.1.2.7 Displaying the consumables counter

This self-diagnosis is used for displaying the consumed status of consumables.

- 1. Press the ① and ⑤ keys until the normal self-diagnostic mode is entered and [CONSUMABLE STATUS] is displayed in the top line. (Key ① increments the item and Key ⑥ decrements the item.)
- 2. The consumed status of consumables is displayed by pressing the ② and ⑥ keys. (Keys ③ and ⑦ are invalid.)
- 3. Press the 4 key to end the test. (Status returns to that described in 1.)

Item	Top Display	Bottom Display	Format	Unit	Details
Fuser unit	FUSER UNIT	****** PRINTS	Decimal system	Printed sheets	Displays number of pages
					since installing a new fuser.
Belt unit	TR BELT UNIT	****** PRINTS	Decimal system	Printed sheets	Displays number of pages
					since installing a new drum
					unit.
ID unit - black	BLACK ID UNIT	****** IMAGES	Decimal system	Printed sheets	Displays number of
ID unit - yellow	YELLOW ID UNIT	****** IMAGES	Decimal system	Printed sheets	rotations by converting to
ID unit - magenta	MAGENTA ID UNIT	****** IMAGES	Decimal system	Printed sheets	A4 3Page/Job since
ID unit - cyan	CYAN ID UNIT	****** IMAGES	Decimal system	Printed sheets	installing a new ID unit.
Toner - black	BLACK TONER	***%	Decimal system	%	Displays amount of color
Toner - yellow	YELLOW TONER	***%	Decimal system	%	toner used.
Toner - magenta	MAGENTA TONER	***%	Decimal system	%	
Toner - cyan	CYAN TONER	***%	Decimal system	%	

3.1.2.8 Displaying the consumables continuation counter

This self-diagnosis is used for displaying the continuous status of a consumable. Continuous status of a consumable is the total count of a consumable that is not initialized even upon being replaced. The consumed amount is counted continuously.

- 1. Press the ① and ⑤ keys until the normal self-diagnostic mode is entered and the continuous status of a consumable is displayed in the top line. (Key ① increments the item and Key ⑤ decrements the item.)
- 2. The total consumed amount of a consumable is displayed by pressing the ② and ⑥ keys. (Keys ③ and ⑦ are invalid.)
- 3. Press the 4 key to end the test. (Status returns to that described in 1.)

Item	Top Display	Bottom Display	Format	Unit	Details
Total sheets fed	TOTAL SHEETS FEED	****** PRINTS	Decimal system	Printed sheets	Total number of fed sheets
					including passed paper.
Print - black	BLACK IMPRESSIONS	****** IMAGES	Decimal system	Printed sheets	Displays number of
Print - yellow	YELLOW IMPRESSIONS	****** IMAGES	Decimal system	Printed sheets	printed sheets for each
Print - magenta	MAGENTA IMPRESSIONS	****** IMAGES	Decimal system	Printed sheets	color ID.
Print - cyan	CYAN IMPRESSIONS	****** IMAGES	Decimal system	Printed sheets	

3.1.2.9 Panel display details

Panel display

BLANCE ERROR BELT IFE OVER BELT REPLECTION ERROR BELT REPLECTION ERROR BELT REPLECTION ERROR BELT WIT FUSE CUT ERROR BELT REPLECTION ERROR BELACK DENSITY CALIB ERROR BLACK DENSITY SENSOR ERROR BLACK DENSITY SENSOR ERROR Black density sensor error BLACK DENSITY SENSOR ERROR BLACK DRUM LIFE OVER BLACK DRUM UPIDOWN ERROR BLACK DRUM UPIDOWN ERROR BLACK REGISTRATION ERROR BLACK REGISTRATION ERROR BLACK REGISTRATION OUT HORIZONTAL Abnormal color irregularity registration value detected in black sub-scan registration value detected in black sub-scan registration BLACK REGISTRATION OUT LEFT BLACK REGISTRATION OUT RIGHT BLACK SENSOR ERROR RIGHT BLACK SENSOR ERROR RIGHT BLACK SENSOR ERROR RIGHT BLACK TONER EMPTY BLACK TONER EMPTY BLACK TONER EMPTY BLACK TONER SENSOR ERROR BLACK HORIZONTAL BLACK TONER SENSOR ERROR BLACK HORIZONTAL DRUM PROPER OF TONE BLACK TONER SENSOR ERROR BLACK LID ENSITY ERROR 1 BLACK ID ENSITY ERROR 2 BLACK ID DENSITY ERROR 2 BLACK LID ENSITY ERROR 1 BLACK ID DENSITY ERROR 2 BLACK LID GROWN CALL BRATION CHIP ERROR COLUR DENSITY CALLB ERROR COLUR DENSITY SENSOR ERROR COLUR DENSITY ERROR 1 BLACK LID GROWN COLUR DENSITY ERROR 2 COLUR DENSITY ERROR 2 CALIBRATION CHIP ERROR COLUR DENSITY CALLB ERROR COLUR DENSITY CALLB ERROR COLUR DENSITY CALLB ERROR COLUR DENSITY ERROR 1 COLUR DENSITY ERROR 1 COLUR DENSITY ERROR 1 COLUR DENSITY ERROR 1 CYAN DRUM LIFE OVER CYAN DRUM LIFE DRUFT CHARLE SENSOR ERROR 1 CYAN D	Panel Display	Details
BELT LIFE OVER BELT REFLECTION ERROR BELT UNIT FUSE CUT ERROR BELT UNIT FUSE CUT ERROR BELT UNIT FUSE CUT ERROR BLACK DENSITY CALIB ERROR BLACK DENSITY CALIB ERROR BLACK DENSITY SENSOR ERROR BLACK DENSITY SENSOR ERROR BLACK DRUM LIFE OVER BLACK DRUM LIFE OVER BLACK DRUM LIFE OVER BLACK DRUM WEAR LIFE BLACK DRUM WEAR LIFE BLACK DRUM UPDOWN ERROR BLACK DRUM UPDOWN ERROR BLACK DRUM UPDOWN ERROR BLACK DRUM UPDOWN ERROR BLACK REGULAR ERROR BLACK REGULAR ERROR BLACK REGISTRATION OUT HORIZONTAL BLACK REGISTRATION OUT HORIZONTAL BLACK REGISTRATION OUT HEFT BLACK REGISTRATION OUT RIGHT BLACK SENSOR ERROR RIGHT BLACK TONER SENSOR ERROR BLACK ID DENSITY ERROR BLACK ID DENSITY ERROR BLACK ID DENSITY ERROR C BLACK ID DENSITY ERROR C CALIBRATION CHIP ERROR COLOR DENSITY SENSOR ERROR CYAN DRUM UPDOWN ERROR CYAN DRUM LIFE OVER CYAN DRUM UPDOWN ERROR CYAN DRUM ERROR COLOR ERROR	· ·	
BELT REFLECTION ERROR BELT UNIT FUSE CUT ERROR BELT UNIT FUSE CUT ERROR BELT UNIT FUSE CUT ERROR BELACK DENSITY SENSOR ERROR BLACK DRUM HEAR LIFE Black density sensor error BLACK DRUM WEAR LIFE Black drum life over BLACK DRUM WEAR LIFE Black drum life warming BLACK DRUM UNIT FUSE CUT ERROR BLACK DRUM UNIT FUSE CUT ERROR BLACK DRUM UNIT FUSE CUT ERROR BLACK REGULAR ERROR BLACK REGULAR ERROR BLACK LED HEAD ERROR BLACK LED HEAD ERROR BLACK REGISTATION OUT HORIZONTAL Abnormal color irregularity registration value detected in black sub-scan registration BLACK REGISTRATION OUT LEFT BLACK REGISTRATION OUT LEFT BLACK REGISTRATION OUT RIGHT BLACK REGISTRATION OUT RIGHT BLACK SENSOR ERROR RIGHT BLACK SENSOR ERROR RIGHT BLACK SENSOR ERROR RIGHT BLACK TONER LOW BLACK SONE SENSOR ERROR Black toner empty BLACK TONER SENSOR ERROR Black toner empty BLACK TONER SENSOR ERROR BLACK ID ENSITY ERROR 1 BLACK ID ENSITY ERROR 2 CALIBRATION CHIP ERROR CALIBRATION ERROR CALIBRATION CHIP ERROR CALIBRATION ERROR CALIBRATION ERROR CALIBRATION CHIP ERROR CALIBRATION OUT LEFT CYAN DRUM UNIT FUSE CUT ERROR CALIBRATION OUT BETOR CALIBRATION OUT ERROR CAN DRUM INFE OVER CYAN DRUM LIFE OV	BELT LIFE OVER	Belt life over
BELT UNIT FUSE CUT ERROR BLACK DENSITY SENSOR ERROR BLACK DENSITY SENSOR ERROR BLACK DENSITY SENSOR ERROR BLACK DRUM LIFE OVER BLACK DRUM LIFE OVER BLACK DRUM LIFE OVER BLACK DRUM LIFE OVER BLACK DRUM UNIT FUSE CUT ERROR BLACK REGISTRATION DREAD BLACK REGISTRATION OUT HORIZONTAL BLACK REGISTRATION OUT HORIZONTAL BLACK REGISTRATION OUT HORIZONTAL BLACK REGISTRATION OUT HORIZONTAL BLACK REGISTRATION OUT LEFT BLACK SENSOR ERROR LEFT BLACK SENSOR ERROR RIGHT BLACK TONER EMPTY BLACK TONER ENFOR ERROR BLACK INDER SENSOR ERROR BLACK INDER SENSOR ERROR BLACK TONER SENSOR ERROR BLACK TONER SENSOR ERROR BLACK INDER SENSOR ERROR BLACK INDER SENSOR ERROR BLACK INDER SENSOR ERROR BLACK INDER SENSOR ERROR CALIBBATION CHIP ERROR COLOR DENSITY SENSOR ERROR CYAN DRUM UNIT FUSE CUT ERROR CYAN DRUM LIFE OVER CYAN DRUM LI		Belt reflection error
BLACK DENSITY CALIB ERROR BLACK DENSITY SENSOR ERROR BLACK DRUM NEAR LIFE BLACK DRUM NEAR LIFE BLACK DRUM UNIT FUSE CUT ERROR BLACK BLACK BLACK DRUM UNIT FUSE CUT ERROR BLACK REGISTRATION ERROR BLACK BLACK BLACK BLACK DRUM WITHOUT PROPERTY OF THE PROPERTY O		
BLACK DRUM LIFE OVER BLACK DRUM LIFE OVER BLACK DRUM LIFE OVER BLACK DRUM LIFE OVER BLACK DRUM NEAR LIFE BLACK DRUM WART LIFE BLACK DRUM WART LIFE BLACK DRUM WIT FUSE CUT ERROR BLACK DRUM UP/DOWN ERROR BLACK DRUM UP/DOWN ERROR BLACK LIPE BLACK DRUM UP/DOWN ERROR BLACK LIPE BLACK INTERCOR BLACK LIPE BLACK REGISTRATION ERROR BLACK LIPE BLACK REGISTRATION BEROR BLACK REGISTRATION OUT HORIZONTAL BLACK REGISTRATION OUT HORIZONTAL BLACK REGISTRATION OUT LEFT BLACK REGISTRATION OUT LEFT BLACK SENSOR ERROR LEFT BLACK SENSOR ERROR LEFT BLACK SENSOR ERROR LEFT BLACK SENSOR ERROR LEFT BLACK TOMER LOW BLACK TOMER SENSOR ERROR BLACK ID ENSITY ERROR 2 BLACK BLORSITY ERROR 2 BLACK DE DENSITY SEROR C CALIBRATION ERROR COLOR DENSITY CALIB ERROR COLOR DENSITY SENSOR ERROR COLOR DENSITY CALIB ERROR COLOR DENSITY SENSOR ERROR COLOR DENSITY CALIB ERROR COLOR DENSITY SENSOR ERROR COLOR DENSITY CALIB ERROR CYAN DRUM WHAT LIFE CYAN DRUM WHAT L		
BLACK DRUM LIFE OVER BLACK DRUM NEAR LIFE BLACK DRUM NEAR LIFE BLACK DRUM UNIT FUSE CUT ERROR BLACK DRUM UNIT FUSE CUT ERROR BLACK DRUM UNIT FUSE CUT ERROR BLACK DRUM UP/DOWN ERROR BLACK LIREGULAR ERROR BLACK REGISTRATION ERROR BLACK REGISTRATION OUT HORIZONTAL Abnormal color irregularity registration value detected in black sub-scan registration BLACK REGISTRATION OUT LEFT BLACK REGISTRATION OUT LEFT BLACK REGISTRATION OUT RIGHT BLACK REGISTRATION OUT RIGHT BLACK SENSOR ERROR RIGHT BLACK SENSOR ERROR RIGHT BLACK SENSOR ERROR LEFT BLACK SENSOR ERROR RIGHT BLACK TONER EMPTY BLACK TONER EMPTY BLACK TONER EMPTY BLACK TONER EMPTY BLACK TONER SENSOR ERROR BLACK ID DENSITY ERROR 1 BLACK ID DENSITY ERROR 2 CALIBRATION CHIP ERROR CALIBRATION CHIP ERROR CALIBRATION ERROR CALIBRATION ERROR COLOR DENSITY SENSOR ERROR COLOR DENSITY SENSOR ERROR COLOR DENSITY SENSOR ERROR COLOR DENSITY SENSOR ERROR COLOR DIAGNOSTICS MODE CYAN DRUM LIFE OVER CYAN DRUM LIFE		-
BLACK DRUM NEAR LIFE BLACK DRUM UNIT FUSE CUT ERROR BLACK DRUM UNIT FUSE CUT ERROR BLACK DRUM UNIT FUSE CUT ERROR BLACK REBLACK DRUM UPPOWN ERROR BLACK REGULAR ERROR BLACK LED HEAD ERROR BLACK LED HEAD ERROR BLACK LED HEAD ERROR BLACK REGISTRATION ERROR BLACK REGISTRATION OUT HORIZONTAL Abnormal color irregularity registration value detected in black sub-scan registration BLACK REGISTRATION OUT LEFT BLACK REGISTRATION OUT LEFT BLACK REGISTRATION OUT RIGHT BLACK REGISTRATION OUT RIGHT BLACK REGISTRATION OUT RIGHT BLACK SENSOR ERROR LEFT BLACK SENSOR ERROR LEFT BLACK SENSOR ERROR RIGHT BLACK SENSOR ERROR RIGHT BLACK TORER EMPTY BLACK TORER EMPTY BLACK TONER SENSOR ERROR BLACK TONER SENSOR ERROR BLACK ID DENSITY ERROR 1 BLACK ID DENSITY ERROR 2 BLACK ID DENSITY ERROR 2 BLACK ID DENSITY ERROR CALIBRATION CHIP ERROR COLOR DENSITY CALIB ERROR COLOR DENSITY CALIB ERROR COLOR DENSITY CALIB ERROR COLOR DENSITY SENSOR ERROR COLOR DENSI		-
BLACK DRUM UPIDOWN ERROR BLACK RROW UPIDOWN ERROR BLACK IRREQUIATE ERROR BLACK IRREQUIATE ERROR BLACK IRREQUIATE ERROR BLACK IRREQUIATE ERROR BLACK REGISTRATION ERROR BLACK REGISTRATION ERROR BLACK REGISTRATION OUT HORIZONTAL BLACK REGISTRATION OUT LEFT BLACK SENSOR ERROR LEFT BLACK SENSOR ERROR RIGHT BLACK SENSOR ERROR RIGHT BLACK SENSOR ERROR RIGHT BLACK TONER EMPTY BLACK TONER EMPTY BLACK TONER SENSOR ERROR CALIBRATION CHIP ERROR CALIBRATION CHIP ERROR CALIBRATION ERROR COLOR DENSITY SENSOR ERROR COLOR DENSITY SENSOR ERROR COLOR DENSITY CALIB ERROR COLOR DENSITY CALIB ERROR COLOR DENSITY SENSOR ERROR COLOR DENSI		
BLACK IRRECULAR ERROR BLACK LED HEAD ERROR BLACK LED HEAD ERROR BLACK REGISTRATION ERROR BLACK REGISTRATION ERROR BLACK REGISTRATION OUT HORIZONTAL BLACK REGISTRATION OUT HORIZONTAL BLACK REGISTRATION OUT HORIZONTAL BLACK REGISTRATION OUT HORIZONTAL BLACK REGISTRATION OUT LEFT BLACK REGISTRATION OUT RIGHT BLACK REGISTRATION OUT RIGHT BLACK REGISTRATION OUT RIGHT BLACK SENSOR ERROR LEFT BLACK TONER EMPTY BLACK TONER EMPTY BLACK TONER SENSOR ERROR BLACK TONER SENSOR ERROR BLACK TONER SENSOR ERROR BLACK ID DENSITY FERROR 1 BLACK ID DENSITY FERROR 2 BLACK ID DENSITY FERROR 2 BLACK ID DENSITY SEROR 2 BLACK ID DENSITY SEROR BLACK ID DENSITY SEROR COLOR DENSITY SENSOR ERROR CYAN DRUM LIFE OVER CYAN DRUM LIFE O		_
BLACK IRREGULAR ERROR BLACK REGISTRATION ERROR BLACK REGISTRATION OUT HORIZONTAL BLACK REGISTRATION OUT LEFT BLACK REGISTRATION OUT RIGHT BLACK REGISTRATION OUT RIGHT BLACK SENSOR ERROR RIGHT BLACK TONER LOW BLACK TONER LOW BLACK TONER SENSOR ERROR BLACK TONER SENSOR ERROR BLACK TONER SENSOR ERROR BLACK TONER SENSOR ERROR BLACK ID ENSITY ERROR 1 BLACK ID ENSITY ERROR 2 BLACK ID ENSITY ERROR 2 BLACK ID ENSITY ERROR 2 CALIBRATION CHIP ERROR CALIBRATION ERROR COLOR DENSITY SENSOR ERROR COLOR DOWN CUSTOM DIAGNOSTICS MODE CYAN DRUM LIFE OVER CYAN DRUM UNIT FUSE CUT ERROR CYAN REGISTRATION ERROR CYAN REGISTRATION ERROR CYAN LED HEAD ERROR CYAN REGISTRATION OUT LEFT CYAN SENSOR ERROR CYAN REGISTRATION OUT LEFT CYAN SENSOR ERROR CYAN REGISTRATION OUT LEFT CYAN SENSOR ERROR CYAN SENSOR ERROR CYAN REGISTRATION OUT LEFT CYAN SENSOR ERROR CYAN SENSOR ERROR CYAN REGISTRATION OUT LEFT CYAN SENSOR ERROR RIGHT CYAN SENSOR ERROR LIEFT CYAN SENSOR ERROR RIGHT CYAN TONER EMPTY CYAN TONER SENSOR ERROR CYAN ID DENSITY ERROR 1 CYAN ID DENSITY ERROR 2 DIAGNOSTICS MODE DISPOSAL TONER FULL DISPOSAL TONER FULL		
BLACK LED HEAD ERROR BLACK REGISTRATION ERROR BLACK REGISTRATION OUT HORIZONTAL Abnormal color irregularity registration value detected in black sub-scan registration BLACK REGISTRATION OUT LEFT BLACK REGISTRATION OUT LEFT BLACK REGISTRATION OUT RIGHT BLACK REGISTRATION OUT RIGHT BLACK SENSOR ERROR LEFT BLACK SENSOR ERROR RIGHT BLACK SENSOR ERROR RIGHT BLACK TONER EMPTY BLACK TONER EMPTY BLACK TONER EMPTY BLACK TONER LOW BLACK TONER SENSOR ERROR BLACK ID DENSITY ERROR 1 BLACK ID DENSITY ERROR 2 BLACK ID DENSITY ERROR 2 BLACK ID DENSITY ERROR 2 CALIBRATION CHIP ERROR COLOR DENSITY CALIB ERROR COLOR DENSITY SENSOR ERROR CYAN DRUM UNIT FUSE CUT ERROR CYAN DRUM UNIT FUSE	BLACK IRREGULAR ERROR	
BLACK REGISTRATION OUT HORIZONTAL BLACK REGISTRATION OUT LEFT BLACK REGISTRATION OUT LEFT BLACK REGISTRATION OUT LEFT BLACK REGISTRATION OUT RIGHT BLACK SENSOR ERROR LEFT BLACK SENSOR ERROR RIGHT BLACK SENSOR ERROR RIGHT BLACK SENSOR ERROR RIGHT BLACK TONER EMPTY BLACK TONER SENSOR ERROR BLACK ID DENSITY ERROR 1 BLACK ID DENSITY ERROR 2 BLACK ID DENSITY ERROR 2 CALIBRATION CHIP ERROR CALIBRATION CHIP ERROR CALIBRATION ERROR COLOR DENSITY SENSOR ERROR CYAN DRUM LIFE OVER CYAN DRUM LIFE OVER CYAN DRUM LIFE OVER CYAN DRUM UNIT FUSE CUT ERROR CYAN D	BLACK LED HEAD ERROR	_
BLACK REGISTRATION OUT HORIZONTAL BLACK REGISTRATION OUT LEFT BLACK REGISTRATION OUT LEFT BLACK REGISTRATION OUT LEFT BLACK REGISTRATION OUT RIGHT BLACK REGISTRATION OUT RIGHT BLACK SENSOR ERROR LEFT BLACK SENSOR ERROR RIGHT BLACK SENSOR ERROR RIGHT BLACK SENSOR ERROR RIGHT BLACK TONER EMPTY BLACK TONER LOW BLACK TONER SENSOR ERROR BLACK ID DENSITY ERROR 1 BLACK ID DENSITY ERROR 2 CALIBRATION CHIP ERROR CALIBRATION CHIP ERROR CALIBRATION ERROR COLOR DENSITY SENSOR ERROR CYAN DRUM LIFE OVER CYAN DRUM LIFE OVER CYAN DRUM LIFE OVER CYAN DRUM LIFE OVER CYAN DRUM UNIT FUSE CUT ERROR CYAN DRUM UN	BLACK REGISTRATION ERROR	Black irregularity error
black sub-scan registration BLACK REGISTRATION OUT LEFT Black REGISTRATION OUT RIGHT BLACK REGISTRATION OUT RIGHT BLACK SENSOR ERROR LEFT BLACK SENSOR ERROR RIGHT BLACK SENSOR ERROR RIGHT BLACK TONER EMPTY BLACK TONER EMPTY BLACK TONER EMPTY BLACK TONER SENSOR ERROR BLACK TONER SENSOR ERROR BLACK TONER SENSOR ERROR BLACK TONER SENSOR ERROR BLACK ID DENSITY ERROR 1 BLACK ID DENSITY ERROR 2 CALIBRATION CHIP ERROR CALIBRATION CHIP ERROR CALIBRATION CHIP ERROR COLOR DENSITY SENSOR ERROR CYAN DRUM LIFE OVER CYAN	BLACK REGISTRATION OUT HORIZONTAL	
BLACK REGISTRATION OUT LEFT BLACK REGISTRATION OUT RICHT BLACK REGISTRATION OUT RICHT BLACK SENSOR ERROR LEFT BLACK SENSOR ERROR LEFT BLACK SENSOR ERROR RIGHT BLACK SENSOR ERROR RIGHT BLACK SENSOR ERROR RIGHT BLACK TONER EMPTY BLACK TONER EMPTY BLACK TONER SENSOR ERROR BLACK SENSOR ERROR BLACK SENSOR ERROR BLACK TONER SENSOR ERROR BLACK ID DENSITY ERROR 1 BLACK ID DENSITY ERROR 1 BLACK ID DENSITY ERROR 2 CALIBRATION CHIP ERROR CALIBRATION ERROR CALIBRATION ERROR COLOR DENSITY CALIB ERROR COLOR DENSITY SENSOR ERROR COLOR DENSITY SENSOR ERROR COLOR DENSITY SENSOR ERROR COLOR DENSITY SENSOR ERROR COLING DOWN CUSTOM DIAGNOSTICS MODE CUSTOM DIAGNOSTICS MODE CYAN DRUM LIFE OVER CYAN DRUM LIFE OVER CYAN DRUM UNIT FUSE CUT ERROR CYAN DRUM UNIT FUSE CUT ERROR CYAN DRUM UP/DOWN ERROR CYAN DRUM UP/DOWN ERROR CYAN LED HEAD ERROR CYAN LED HEAD ERROR CYAN LED HEAD ERROR CYAN REGISTRATION OUT HORIZONTAL Abnormal color irregularity registration value detected in cyan sensor error CYAN DENS ERROR LEFT CYAN SENSOR ERROR LEFT CYAN SENSOR ERROR LEFT CYAN SENSOR ERROR RIGHT CYAN SENSOR ERROR RIGHT CYAN SENSOR ERROR RIGHT CYAN TONER EMPTY CYAN TONER SENSOR ERROR CYAN ID DENSITY ERROR 1 CYAN ID DENSITY ERROR 2 DIAGNOSTICS MODE DISPOSAL TONER FULL DISPOSAL TONER FULL		
BLACK REGISTRATION OUT RIGHT BLACK SENSOR ERROR LEFT BLACK SENSOR ERROR RIGHT BLACK SENSOR ERROR RIGHT BLACK TONER EMPTY BLACK TONER EMPTY BLACK TONER LOW BLACK TONER SENSOR ERROR BLACK SENSOR ERROR BLACK TONER SENSOR ERROR BLACK TONER SENSOR ERROR BLACK TONER SENSOR ERROR BLACK TONER SENSOR ERROR BLACK ID DENSITY ERROR 1 BLACK ID DENSITY ERROR 2 BLACK ID DENSITY ERROR 1 BLACK ID DENSITY ERROR 2 CALIBRATION CHIP ERROR CALIBRATION ERROR CALIBRATION ERROR COLOR DENSITY SENSOR ERROR COLOR DENSITY ERROR COLOR DENS	BLACK REGISTRATION OUT LEFT	
BLACK SENSOR ERROR LEFT BLACK SENSOR ERROR RIGHT BLACK TONER EMPTY BLACK TONER LOW BLACK TONER SENSOR ERROR BLACK TONER SENSOR ERROR BLACK TONER SENSOR ERROR BLACK ID DENSITY ERROR 1 BLACK ID DENSITY ERROR 2 CALIBRATION CHIP ERROR CALIBRATION CHIP ERROR CALIBRATION CHIP ERROR COLOR DENSITY CALIB ERROR COLOR DENSITY CALIB ERROR COLOR DENSITY CALIB ERROR COLOR DENSITY SENSOR ERROR COLOR DENSITY SENSOR ERROR COLOR DENSITY SENSOR ERROR COLOR DENSITY SENSOR ERROR COLOR DIAGNOSTICS MODE CYAN DIAGNOSTICS MODE CYAN DRUM LIFE OVER CYAN DRUM LIFE OVER CYAN DRUM LIFE OVER CYAN DRUM NEAR LIFE CYAN DRUM NEAR LIFE CYAN DRUM UNIT FUSE CUT ERROR CYAN DETECT VALUE ERROR CYAN LED HEAD ERROR CYAN LED HEAD ERROR CYAN LED HEAD ERROR CYAN LED HEAD ERROR CYAN REGISTRATION OUT HORIZONTAL Abnormal color irregularity registration value detected in cyan sub-scan registration CYAN REGISTRATION OUT RIGHT CYAN SENSOR ERROR LEFT CYAN REGISTRATION OUT RIGHT CYAN SENSOR ERROR LEFT CYAN SENSOR ERROR RIGHT CYAN SENSOR ERROR RIGHT CYAN SENSOR ERROR RIGHT CYAN TONER LOW CYAN TONER LOW CYAN TONER LOW CYAN TONER LOW CYAN TONER SENSOR ERROR CYAN ID DENSITY ERROR 2 DIAGNOSTICS MODE DISPOSAL TONER FULL DISPOSAL TONER FULL	BLACK REGISTRATION OUT RIGHT	
BLACK TONER EMPTY BLACK TONER LOW BLACK TONER SENSOR ERROR BLACK ID DENSITY ERROR 1 BLACK ID DENSITY ERROR 2 BLACK ID DENSITY ERROR 3 BLACK ID DENSITY ERROR 2 CALIBRATION CHIP ERROR CALIBRATION CHIP ERROR CALIBRATION CHIP ERROR CALIBRATION ERROR CALIBRATION ERROR COLOR DENSITY CALIB ERROR COLOR DENSITY CALIB ERROR COLOR DENSITY CALIB ERROR COLOR DENSITY SENSOR ERROR DENSITY ERROR COLOR DENSITY	BLACK SENSOR ERROR LEFT	
BLACK TONER LOW BLACK TONER SENSOR ERROR BLACK ID DENSITY ERROR 1 BLACK ID DENSITY ERROR 2 CALIBRATION CHIP ERROR CALIBRATION ERROR CALIBRATION ERROR CALIBRATION ERROR COLOR DENSITY CALIB ERROR COLOR DENSITY SENSOR ERROR COLOR DENSITY SENSOR ERROR COLOR DENSITY SENSOR ERROR COLOR DENSITY SENSOR ERROR COLING DOWN COUSTOM DIAGNOSTICS MODE CUSTOM DIAGNOSTICS MODE CYAN DRUM LIFE OVER CYAN DRUM LIFE OVER CYAN DRUM LIFE OVER CYAN DRUM UNIT FUSE CUT ERROR CYAN DRUM UNIT FUSE CUT ERROR CYAN DRUM UNIT FUSE CUT ERROR CYAN DRUM UP/DOWN ERROR CYAN DETECT VALUE ERROR CYAN LED HEAD ERROR CYAN LED HEAD ERROR CYAN REGISTRATION OUT HORIZONTAL Abnormal color irregularity registration value detected in cyan sub-scan registration CYAN REGISTRATION OUT RIGHT CYAN SENSOR ERROR RIGHT CYAN TONER EMPTY CYAN TONER SENSOR ERROR CYAN ID DENSITY ERROR 2 DIAGNOSTICS MODE DISPOSAL TONER FULL DISPOSAL TONER FULL	BLACK SENSOR ERROR RIGHT	Black right sensor error
BLACK TONER SENSOR ERROR BLACK ID DENSITY ERROR 1 BLACK ID DENSITY ERROR 2 CALIBRATION CHIP ERROR CALIBRATION CHIP ERROR CALIBRATION ERROR COLOR DENSITY CALIB ERROR COLOR DENSITY CALIB ERROR COLOR DENSITY SENSOR ERROR COLOR DENSITY ERROR COLOR DENSITY ERROR BLACK ID DENSITY ERROR IN CALL BEACH TO COLOR INTEGERAL BEACH COLOR DENSITY ERROR IN CALL BEACH TO COLOR INTEGERAL BEACH COLOR DENSITY ERROR IN CALL BEACH TO CALL BEACH	BLACK TONER EMPTY	Black toner empty
BLACK ID DENSITY ERROR 1 BLACK ID DENSITY ERROR 2 Black ID density error 2 CALIBRATION CHIP ERROR CALIBRATION ERROR CALIBRATION ERROR COLOR DENSITY CALIB ERROR COLOR DENSITY SENSOR ERROR COLOR DENSITY ERROR 1 COLOR DENSITY ERROR 1 COLOR DENSITY ERROR 2 DIAGNOSTICS MODE DISPOSAL TONER FULL DISPOSAL TONER FULL	BLACK TONER LOW	Black toner low
BLACK ID DENSITY ERROR 2 CALIBRATION CHIP ERROR CALIBRATION ERROR CALIBRATION ERROR CALIBRATION ERROR COLOR DENSITY CALIB ERROR COLOR DENSITY CALIB ERROR COLOR DENSITY SENSOR ERROR COLOR DENSITY ERROR 2 DIAGNOSTICS MODE DISPOSAL TONER FULL Black ID density error 2 Black ID densit	BLACK TONER SENSOR ERROR	Black toner sensor error
CALIBRATION CHIP ERROR CALIBRATION ERROR CALIBRATION ERROR COLOR DENSITY CALIB ERROR COLOR DENSITY SENSOR ERROR COLOR DENSITY ERROR COLO	BLACK ID DENSITY ERROR 1	Black ID density error 1
CALIBRATION ERROR COLOR DENSITY CALIB ERROR COLOR DENSITY CALIB ERROR COLOR DENSITY SENSOR ERROR CYAN DRUM LIFE OVER CYAN DRUM LIFE OVER CYAN DRUM LIFE OVER CYAN DRUM UPIFE OVER CYAN DETECT VALUE ERROR CYAN LED HEAD ERROR CYAN LED HEAD ERROR CYAN LED HEAD ERROR CYAN COLOR IRREGULARITY ERROR CYAN REGISTRATION OUT HORIZONTAL Abnormal color irregularity registration value detected in cyan sub-scan registration CYAN REGISTRATION OUT LEFT CYAN REGISTRATION OUT LEFT CYAN REGISTRATION OUT RIGHT CYAN SENSOR ERROR LEFT CYAN SENSOR ERROR LEFT CYAN SENSOR ERROR LEFT CYAN SENSOR ERROR RIGHT CYAN SENSOR ERROR RIGHT CYAN TONER EMPTY CYAN TONER EMPTY CYAN TONER EMPTY CYAN TONER LOW CYAN TONER SENSOR ERROR CYAN ID DENSITY ERROR 1 CYAN ID DENSITY ERROR 2 DIAGNOSTICS MODE DISPOSAL TONER FULL DISPOSAL TONER FULL	BLACK ID DENSITY ERROR 2	Black ID density error 2
COLOR DENSITY CALIB ERROR COLOR DENSITY SENSOR ERROR COLOR DENSITY SENSOR ERROR COLOR DENSITY SENSOR ERROR COOLING DOWN CUSTOM DIAGNOSTICS MODE CYAN DRUM LIFE OVER CYAN DRUM LIFE OVER CYAN DRUM NEAR LIFE CYAN DRUM NEAR LIFE CYAN DRUM UPIT FUSE CUT ERROR CYAN LED HEAD ERROR CYAN LED HEAD ERROR CYAN LED HEAD ERROR CYAN REGISTRATION OUT HORIZONTAL Abnormal color irregularity registration value detected in cyan sub-scan registration CYAN EGISTRATION OUT RIGHT CYAN SENSOR ERROR LEFT CYAN SENSOR ERROR LEFT CYAN SENSOR ERROR RIGHT CYAN TONER EMPTY CYAN TONER EMPTY CYAN TONER EMPTY CYAN TONER SENSOR ERROR CYAN ID DENSITY ERROR 1 CYAN ID DENSITY ERROR 2 DIAGNOSTICS MODE DISPOSAL TONER FULL DISPOSAL TONER FULL DISPOSAL TONER FULL	CALIBRATION CHIP ERROR	CALIBRATION CHIP ERROR
COLOR DENSITY SENSOR ERROR COOLING DOWN CUSTOM DIAGNOSTICS MODE CYAN DRUM LIFE OVER CYAN DRUM LIFE OVER CYAN DRUM NEAR LIFE CYAN DRUM UNIT FUSE CUT ERROR CYAN DRUM UP/DOWN ERROR CYAN DRUM UP/DOWN ERROR CYAN LED HEAD ERROR CYAN REGISTRATION OUT HORIZONTAL CYAN REGISTRATION OUT RIGHT CYAN SENSOR ERROR RIGHT CYAN SENSOR ERROR RIGHT CYAN SENSOR ERROR RIGHT CYAN TONER EMPTY CYAN TONER SENSOR ERROR CYAN TONER SENSOR ERROR CYAN TONER SENSOR ERROR CYAN ID DENSITY ERROR 1 CYAN ID DENSITY ERROR 2 DIAGNOSTICS MODE DISPOSAL TONER FULL DISPOSAL TONER FULL DISPOSAL TONER FULL	CALIBRATION ERROR	CALIBRATION ERROR
COOLING DOWN CUSTOM DIAGNOSTICS MODE CYAN DRUM LIFE OVER CYAN DRUM LIFE OVER CYAN DRUM NEAR LIFE CYAN DRUM NEAR LIFE CYAN DRUM UNIT FUSE CUT ERROR CYAN DETECT VALUE ERROR CYAN LED HEAD ERROR CYAN COLOR IRREGULARITY ERROR CYAN REGISTRATION OUT HORIZONTAL Abnormal color irregularity registration value detected in cyan sub-scan registration CYAN REGISTRATION OUT LEFT CYAN REGISTRATION OUT LEFT CYAN REGISTRATION OUT LEFT CYAN REGISTRATION OUT LEFT CYAN REGISTRATION OUT RIGHT CYAN SENSOR ERROR LEFT CYAN SENSOR ERROR LEFT CYAN SENSOR ERROR LEFT CYAN SENSOR ERROR RIGHT CYAN SENSOR ERROR RIGHT CYAN TONER EMPTY CYAN TONER EMPTY CYAN TONER EMPTY CYAN TONER EMPTY CYAN TONER SENSOR ERROR CYAN TONER SENSOR ERROR CYAN ID DENSITY ERROR 1 CYAN ID DENSITY ERROR 2 DIAGNOSTICS MODE DISPOSAL TONER FULL DISPOSAL TONER FULL	COLOR DENSITY CALIB ERROR	COLOR DENSITY CALIB ERROR
CUSTOM DIAGNOSTICS MODE CYAN DRUM LIFE OVER CYAN DRUM NEAR LIFE CYAN DRUM NEAR LIFE CYAN DRUM UNIT FUSE CUT ERROR CYAN DRUM UNIT FUSE CUT ERROR CYAN DRUM UP/DOWN ERROR CYAN DRUM UP/DOWN ERROR CYAN DRUM UP/DOWN ERROR CYAN DETECT VALUE ERROR CYAN LED HEAD ERROR CYAN LED HEAD ERROR CYAN REGISTRATION ERROR CYAN REGISTRATION OUT HORIZONTAL Abnormal color irregularity registration value detected in cyan sub-scan registration CYAN REGISTRATION OUT LEFT CYAN REGISTRATION OUT RIGHT CYAN SENSOR ERROR LEFT CYAN SENSOR ERROR RIGHT CYAN SENSOR ERROR RIGHT CYAN TONER EMPTY CYAN TONER EMPTY CYAN TONER LOW CYAN ID DENSITY ERROR 2 DIAGNOSTICS MODE DISPOSAL TONER FULL DISPOSAL TONER FULL	COLOR DENSITY SENSOR ERROR	COLOR DENSITY SENSOR ERROR
CYAN DRUM LIFE OVER CYAN DRUM NEAR LIFE CYAN DRUM NEAR LIFE CYAN DRUM UNIT FUSE CUT ERROR CYAN DRUM UNIT FUSE CUT ERROR CYAN DRUM UNIT FUSE CUT ERROR CYAN DRUM UP/DOWN ERROR CYAN DRUM UP/DOWN ERROR CYAN DETECT VALUE ERROR CYAN LED HEAD ERROR CYAN LED HEAD ERROR CYAN REGISTRATION ERROR CYAN REGISTRATION OUT HORIZONTAL Abnormal color irregularity registration value detected in cyan sub-scan registration CYAN REGISTRATION OUT LEFT CYAN REGISTRATION OUT RIGHT CYAN REGISTRATION OUT RIGHT CYAN SENSOR ERROR LEFT CYAN SENSOR ERROR RIGHT CYAN SENSOR ERROR RIGHT CYAN TONER EMPTY CYAN TONER EMPTY CYAN TONER LOW CYAN TONER SENSOR ERROR CYAN ID DENSITY ERROR 2 DIAGNOSTICS MODE DISPOSAL TONER FULL CYAN DRUM LIFE CYAN DRUM NEAR LIFE CYAN DRUM NEAR LIFE CYAN DRUM UNIT FUSE CUT ERROR CYAN DRUM UNIT FUSE CUT ERROR CYAN DRUM UNIT FUSE CUT ERROR CYAN DETECT CYAN DETECT CYAN DERROR LIFE CYAN DRUM LIFE CYAN DRUM UNIT FUSE CUT ERROR CYAN DETECT CYAN DETECT CYAN DETECT CYAN DETECT CYAN DETECT CYAN DRUM UNIT FUSE C	COOLING DOWN	COOLING DOWN
CYAN DRUM NEAR LIFE CYAN DRUM UNIT FUSE CUT ERROR CYAN DRUM UNIT FUSE CUT ERROR CYAN DRUM UP/DOWN ERROR CYAN DRUM UP/DOWN ERROR CYAN DETECT VALUE ERROR CYAN LED HEAD ERROR CYAN LED HEAD ERROR CYAN REGISTRATION ERROR CYAN REGISTRATION OUT HORIZONTAL CYAN REGISTRATION OUT LEFT CYAN REGISTRATION OUT RIGHT CYAN SENSOR ERROR LEFT CYAN SENSOR ERROR RIGHT CYAN SENSOR ERROR RIGHT CYAN TONER EMPTY CYAN TONER LOW CYAN TONER SENSOR ERROR CYAN ID DENSITY ERROR 1 CYAN ID DENSITY ERROR 2 DIAGNOSTICS MODE DISPOSAL TONER FULL CYAN DRUM NEAR LIFE CYAN DRUM NEAR LIFE CYAN DRUM UNIT FUSE CUT ERROR CYAN DETECT VALUE ERROR CYAN LEPTON OUT REGROR CYAN REGISTRATION OUT LEFT CYAN REGISTRATION OUT LEFT CYAN SENSOR ERROR LEFT CYAN SENSOR ERROR RIGHT CYAN SENSOR ERROR RIGHT CYAN TONER EMPTY CYAN TONER EMPTY CYAN TONER LOW CYAN TONER SENSOR ERROR CYAN ID DENSITY ERROR 1 CYAN ID DENSITY ERROR 2 DIAGNOSTICS MODE DISPOSAL TONER FULL CYAN DOWN ERROR CYAN DOWN ON TONER FULL CYAN DISPOSAL TONER FULL CYAN DRUM UNIT FUSE CUT ERROR CYAN DRUM UNIT FUSE CUT ERROR CYAN DRUM UNIT FUSE CUT ERROR CYAN DRUM UP/DOWN ERROR CYAN DRUM UNIT FUSE CUT ERROR CYAN DRUM UP/DOWN ERROR CYAN DRUM UP/DOWN ERROR CYAN DRUM UP/DOWN ERROR CYAN DRUM UNIT FUSE CUT ERROR CYAN DRUM UP/DOWN EROR CYAN DRUM UP/DOWN ERROR CYAN DRUM UP/DOWN EROR CYAN DRUM UP/DOWN E	CUSTOM DIAGNOSTICS MODE	CUSTOM DIAGNOSTICS MODE
CYAN DRUM UNIT FUSE CUT ERROR CYAN DRUM UP/DOWN ERROR CYAN DRUM UP/DOWN ERROR CYAN IRREGULAR ERROR CYAN LED HEAD ERROR CYAN LED HEAD ERROR CYAN REGISTRATION ERROR CYAN REGISTRATION OUT HORIZONTAL CYAN REGISTRATION OUT LEFT CYAN REGISTRATION OUT RIGHT CYAN SENSOR ERROR LEFT CYAN SENSOR ERROR RIGHT CYAN TONER EMPTY CYAN TONER EMPTY CYAN TONER SENSOR ERROR CYAN ID DENSITY ERROR 2 DIAGNOSTICS MODE DISPOSAL TONER FULL CYAN DRUM UNIT FUSE CUT ERROR CYAN DRUM UNIT FUSE CUT ERROR CYAN DRUM UP/DOWN ERROR CYAN DRUM UP/DOWN ERROR CYAN LEP CUT ERROR CYAN LED HEAD ERROR CYAN COLOR IRREGULARITY ERROR CYAN REGISTRATION OUT LEFT CYAN REGISTRATION OUT LEFT CYAN SENSOR ERROR LEFT CYAN SENSOR ERROR LEFT CYAN SENSOR ERROR RIGHT CYAN TONER EMPTY CYAN TONER EMPTY CYAN TONER EMPTY CYAN TONER LOW CYAN TONER SENSOR ERROR CYAN ID DENSITY ERROR 1 CYAN ID DENSITY ERROR 2 DIAGNOSTICS MODE DISPOSAL TONER FULL CYAN DETECT ON THE PULL CYAN DETECT ON TOWN ERROR CYAN DETECT ON THE PULL CYAN DETECT ON TOWN ERROR CYA	CYAN DRUM LIFE OVER	CYAN DRUM LIFE OVER
CYAN DRUM UP/DOWN ERROR CYAN IRREGULAR ERROR CYAN LED HEAD ERROR CYAN LED HEAD ERROR CYAN REGISTRATION ERROR CYAN REGISTRATION OUT HORIZONTAL CYAN REGISTRATION OUT LEFT CYAN REGISTRATION OUT RIGHT CYAN SENSOR ERROR LEFT CYAN SENSOR ERROR RIGHT CYAN SENSOR ERROR RIGHT CYAN TONER EMPTY CYAN TONER EMPTY CYAN TONER SENSOR ERROR CYAN ID DENSITY ERROR 2 DIAGNOSTICS MODE DISPOSAL TONER FULL CYAN DETECT VALUE ERROR CYAN DETECT VALUE ERROR CYAN LED HEAD ERROR CYAN LED HEAD ERROR CYAN LED HEAD ERROR CYAN COLOR IRREGULARITY ERROR CYAN COLOR IRREGULARITY ERROR CYAN REGISTRATION OUT LEFT CYAN REGISTRATION OUT LEFT CYAN SENSOR ERROR LEFT CYAN SENSOR ERROR LEFT CYAN SENSOR ERROR RIGHT CYAN TONER EMPTY CYAN TONER EMPTY CYAN TONER EMPTY CYAN TONER LOW CYAN TONER SENSOR ERROR CYAN ID DENSITY ERROR 1 CYAN ID DENSITY ERROR 2 DIAGNOSTICS MODE DISPOSAL TONER FULL CYAN DISPOSAL TONER FULL	CYAN DRUM NEAR LIFE	CYAN DRUM NEAR LIFE
CYAN IRREGULAR ERROR CYAN LED HEAD ERROR CYAN LED HEAD ERROR CYAN REGISTRATION ERROR CYAN REGISTRATION OUT HORIZONTAL Abnormal color irregularity registration value detected in cyan sub-scan registration CYAN REGISTRATION OUT LEFT CYAN REGISTRATION OUT LEFT CYAN REGISTRATION OUT RIGHT CYAN SENSOR ERROR LEFT CYAN SENSOR ERROR RIGHT CYAN SENSOR ERROR RIGHT CYAN SENSOR ERROR RIGHT CYAN TONER EMPTY CYAN TONER EMPTY CYAN TONER SENSOR ERROR CYAN TONER SENSOR ERROR CYAN ID DENSITY ERROR 1 CYAN ID DENSITY ERROR 2 DIAGNOSTICS MODE DISPOSAL TONER FULL CYAN DERECUTE VALUE ERROR CYAN LED HEAD ERROR CYAN COLOR IRREGULARITY ERROR CYAN REGISTRATION OUT LEFT CYAN REGISTRATION OUT LEFT CYAN REGISTRATION OUT RIGHT CYAN SENSOR ERROR LEFT CYAN SENSOR ERROR LEFT CYAN SENSOR ERROR RIGHT CYAN TONER EMPTY CYAN TONER EMPTY CYAN TONER EMPTY CYAN TONER SENSOR ERROR CYAN ID DENSITY ERROR 1 CYAN ID DENSITY ERROR 2 DIAGNOSTICS MODE DISPOSAL TONER FULL DISPOSAL TONER FULL	CYAN DRUM UNIT FUSE CUT ERROR	CYAN DRUM UNIT FUSE CUT ERROR
CYAN LED HEAD ERROR CYAN REGISTRATION ERROR CYAN REGISTRATION OUT HORIZONTAL Abnormal color irregularity registration value detected in cyan sub-scan registration CYAN REGISTRATION OUT LEFT CYAN REGISTRATION OUT LEFT CYAN REGISTRATION OUT RIGHT CYAN REGISTRATION OUT RIGHT CYAN SENSOR ERROR LEFT CYAN SENSOR ERROR LEFT CYAN SENSOR ERROR RIGHT CYAN SENSOR ERROR RIGHT CYAN TONER EMPTY CYAN TONER EMPTY CYAN TONER LOW CYAN TONER SENSOR ERROR CYAN ID DENSITY ERROR 1 CYAN ID DENSITY ERROR 2 DIAGNOSTICS MODE DISPOSAL TONER FULL CYAN COLOR IRREGULARITY ERROR CYAN REGISTRATION OUT LEFT CYAN REGISTRATION OUT RIGHT CYAN REGISTRATION OUT RIGHT CYAN SENSOR ERROR LEFT CYAN SENSOR ERROR RIGHT CYAN SENSOR ERROR RIGHT CYAN TONER EMPTY CYAN TONER EMPTY CYAN TONER EMPTY CYAN TONER SENSOR ERROR CYAN ID DENSITY ERROR 1 CYAN ID DENSITY ERROR 2 DIAGNOSTICS MODE DISPOSAL TONER FULL	CYAN DRUM UP/DOWN ERROR	CYAN DRUM UP/DOWN ERROR
CYAN REGISTRATION ERROR CYAN REGISTRATION OUT HORIZONTAL Abnormal color irregularity registration value detected in cyan sub-scan registration CYAN REGISTRATION OUT LEFT CYAN REGISTRATION OUT LEFT CYAN REGISTRATION OUT RIGHT CYAN REGISTRATION OUT RIGHT CYAN SENSOR ERROR LEFT CYAN SENSOR ERROR RIGHT CYAN SENSOR ERROR RIGHT CYAN SENSOR ERROR RIGHT CYAN TONER EMPTY CYAN TONER EMPTY CYAN TONER LOW CYAN TONER SENSOR ERROR CYAN TONER SENSOR ERROR CYAN ID DENSITY ERROR 1 CYAN ID DENSITY ERROR 2 DIAGNOSTICS MODE DISPOSAL TONER FULL CYAN COLOR IRREGULARITY ERROR CYAN REGISTRATION OUT LEFT CYAN SENSOR ERROR LEFT CYAN SENSOR ERROR RIGHT CYAN SENSOR ERROR RIGHT CYAN TONER EMPTY CYAN TONER EMPTY CYAN TONER SENSOR ERROR CYAN ID DENSITY ERROR 1 CYAN ID DENSITY ERROR 2 DIAGNOSTICS MODE DISPOSAL TONER FULL DISPOSAL TONER FULL	CYAN IRREGULAR ERROR	CYAN DETECT VALUE ERROR
CYAN REGISTRATION OUT HORIZONTAL Abnormal color irregularity registration value detected in cyan sub-scan registration CYAN REGISTRATION OUT LEFT CYAN REGISTRATION OUT LEFT CYAN REGISTRATION OUT RIGHT CYAN REGISTRATION OUT RIGHT CYAN SENSOR ERROR LEFT CYAN SENSOR ERROR LEFT CYAN SENSOR ERROR RIGHT CYAN SENSOR ERROR RIGHT CYAN TONER EMPTY CYAN TONER EMPTY CYAN TONER LOW CYAN TONER SENSOR ERROR CYAN TONER SENSOR ERROR CYAN TONER SENSOR ERROR CYAN TONER SENSOR ERROR CYAN ID DENSITY ERROR 1 CYAN ID DENSITY ERROR 2 DIAGNOSTICS MODE DISPOSAL TONER FULL DISPOSAL TONER FULL	CYAN LED HEAD ERROR	CYAN LED HEAD ERROR
CYAN REGISTRATION OUT LEFT CYAN REGISTRATION OUT LEFT CYAN REGISTRATION OUT RIGHT CYAN REGISTRATION OUT RIGHT CYAN SENSOR ERROR LEFT CYAN SENSOR ERROR RIGHT CYAN SENSOR ERROR RIGHT CYAN SENSOR ERROR RIGHT CYAN TONER EMPTY CYAN TONER EMPTY CYAN TONER LOW CYAN TONER SENSOR ERROR CYAN TONER SENSOR ERROR CYAN TONER SENSOR ERROR CYAN TONER SENSOR ERROR CYAN ID DENSITY ERROR 1 CYAN ID DENSITY ERROR 2 DIAGNOSTICS MODE DISPOSAL TONER FULL CYAN REGISTRATION OUT LEFT CYAN SENSOR ERROR LEFT CYAN SENSOR ERROR RIGHT CYAN SENSOR ERROR RIGHT CYAN TONER EMPTY CYAN TONER EMPTY CYAN TONER SENSOR ERROR CYAN TONER SENSOR ERROR CYAN ID DENSITY ERROR 1 CYAN ID DENSITY ERROR 2 DIAGNOSTICS MODE DISPOSAL TONER FULL DISPOSAL TONER FULL	CYAN REGISTRATION ERROR	CYAN COLOR IRREGULARITY ERROR
CYAN REGISTRATION OUT LEFT CYAN REGISTRATION OUT LEFT CYAN REGISTRATION OUT RIGHT CYAN SENSOR ERROR LEFT CYAN SENSOR ERROR LEFT CYAN SENSOR ERROR RIGHT CYAN SENSOR ERROR RIGHT CYAN TONER EMPTY CYAN TONER EMPTY CYAN TONER LOW CYAN TONER SENSOR ERROR CYAN TONER SENSOR ERROR CYAN TONER SENSOR ERROR CYAN TONER SENSOR ERROR CYAN ID DENSITY ERROR 1 CYAN ID DENSITY ERROR 2 DIAGNOSTICS MODE DISPOSAL TONER FULL CYAN REGISTRATION OUT LEFT CYAN SENSOR ERROR LEFT CYAN SENSOR ERROR RIGHT CYAN TONER EMPTY CYAN TONER EMPTY CYAN TONER SENSOR ERROR CYAN ID DENSITY ERROR 1 CYAN ID DENSITY ERROR 2 DIAGNOSTICS MODE DISPOSAL TONER FULL	CYAN REGISTRATION OUT HORIZONTAL	Abnormal color irregularity registration value detected in
CYAN REGISTRATION OUT RIGHT CYAN SENSOR ERROR LEFT CYAN SENSOR ERROR RIGHT CYAN SENSOR ERROR RIGHT CYAN SENSOR ERROR RIGHT CYAN TONER EMPTY CYAN TONER EMPTY CYAN TONER LOW CYAN TONER SENSOR ERROR CYAN TONER SENSOR ERROR CYAN TONER SENSOR ERROR CYAN ID DENSITY ERROR 1 CYAN ID DENSITY ERROR 2 DIAGNOSTICS MODE DISPOSAL TONER FULL CYAN REGISTRATION OUT RIGHT CYAN SENSOR ERROR RIGHT CYAN SENSOR ERROR RIGHT CYAN TONER EMPTY CYAN TONER SENSOR ERROR CYAN TONER SENSOR ERROR CYAN ID DENSITY ERROR 1 DIAGNOSTICS MODE DISPOSAL TONER FULL DISPOSAL TONER FULL		cyan sub-scan registration
CYAN SENSOR ERROR LEFT CYAN SENSOR ERROR RIGHT CYAN SENSOR ERROR RIGHT CYAN TONER EMPTY CYAN TONER LOW CYAN TONER SENSOR ERROR CYAN TONER SENSOR ERROR CYAN TONER SENSOR ERROR CYAN TONER SENSOR ERROR CYAN ID DENSITY ERROR 1 CYAN ID DENSITY ERROR 2 DIAGNOSTICS MODE DISPOSAL TONER FULL CYAN SENSOR ERROR LEFT CYAN SENSOR ERROR RIGHT CYAN TONER EMPTY CYAN TONER EMPTY CYAN TONER SENSOR ERROR CYAN TONER SENSOR ERROR CYAN ID DENSITY ERROR 1 DIAGNOSTICS MODE DISPOSAL TONER FULL DISPOSAL TONER FULL	CYAN REGISTRATION OUT LEFT	CYAN REGISTRATION OUT LEFT
CYAN SENSOR ERROR RIGHT CYAN TONER EMPTY CYAN TONER LOW CYAN TONER SENSOR ERROR CYAN TONER SENSOR ERROR CYAN TONER SENSOR ERROR CYAN TONER SENSOR ERROR CYAN ID DENSITY ERROR 1 CYAN ID DENSITY ERROR 2 DIAGNOSTICS MODE DISPOSAL TONER FULL CYAN SENSOR ERROR RIGHT CYAN TONER EMPTY CYAN TONER SENSOR ERROR CYAN TONER SENSOR ERROR CYAN ID DENSITY ERROR 1 DIAGNOSTICS MODE DISPOSAL TONER FULL DISPOSAL TONER FULL	CYAN REGISTRATION OUT RIGHT	CYAN REGISTRATION OUT RIGHT
CYAN TONER EMPTY CYAN TONER LOW CYAN TONER SENSOR ERROR CYAN TONER SENSOR ERROR CYAN ID DENSITY ERROR 1 CYAN ID DENSITY ERROR 2 DIAGNOSTICS MODE DISPOSAL TONER FULL CYAN TONER EMPTY CYAN TONER EMPTY CYAN TONER EMPTY CYAN TONER SENSOR ERROR CYAN ID DENSITY ERROR 1 CYAN ID DENSITY ERROR 2 DIAGNOSTICS MODE DISPOSAL TONER FULL DISPOSAL TONER FULL	CYAN SENSOR ERROR LEFT	CYAN SENSOR ERROR LEFT
CYAN TONER LOW CYAN TONER SENSOR ERROR CYAN TONER SENSOR ERROR CYAN ID DENSITY ERROR 1 CYAN ID DENSITY ERROR 1 CYAN ID DENSITY ERROR 2 DIAGNOSTICS MODE DISPOSAL TONER FULL CYAN TONER LOW CYAN TONER LOW CYAN TONER LOW CYAN TONER SENSOR ERROR CYAN ID DENSITY ERROR 1 DIAGNOSTICS MODE DISPOSAL TONER FULL	CYAN SENSOR ERROR RIGHT	CYAN SENSOR ERROR RIGHT
CYAN TONER SENSOR ERROR CYAN ID DENSITY ERROR 1 CYAN ID DENSITY ERROR 2 CYAN ID DENSITY ERROR 2 DIAGNOSTICS MODE DISPOSAL TONER FULL CYAN TONER SENSOR ERROR CYAN ID DENSITY ERROR 1 CYAN ID DENSITY ERROR 2 DIAGNOSTICS MODE DISPOSAL TONER FULL DISPOSAL TONER FULL	CYAN TONER EMPTY	CYAN TONER EMPTY
CYAN ID DENSITY ERROR 1 CYAN ID DENSITY ERROR 2 CYAN ID DENSITY ERROR 2 DIAGNOSTICS MODE DISPOSAL TONER FULL CYAN ID DENSITY ERROR 2 DIAGNOSTICS MODE DISPOSAL TONER FULL	CYAN TONER LOW	CYAN TONER LOW
CYAN ID DENSITY ERROR 2 DIAGNOSTICS MODE DISPOSAL TONER FULL CYAN ID DENSITY ERROR 2 DIAGNOSTICS MODE DISPOSAL TONER FULL	CYAN TONER SENSOR ERROR	CYAN TONER SENSOR ERROR
DIAGNOSTICS MODE DISPOSAL TONER FULL DISPOSAL TONER FULL	CYAN ID DENSITY ERROR 1	CYAN ID DENSITY ERROR 1
DISPOSAL TONER FULL DISPOSAL TONER FULL	CYAN ID DENSITY ERROR 2	CYAN ID DENSITY ERROR 2
	DIAGNOSTICS MODE	DIAGNOSTICS MODE
DISPOSAL TONER NEAR FULL DISPOSAL TONER NEAR FULL	DISPOSAL TONER FULL	DISPOSAL TONER FULL
	DISPOSAL TONER NEAR FULL	DISPOSAL TONER NEAR FULL

Panel Display	Details
DRIVE MOTOR OVER HEAT	DRIVE MOTOR OVER HEAT
DUPLEX I/F ERROR	DUPLEX I/F ERROR
DUPLEX TYPE MISMATCH	DUPLEX TYPE MISMATCH
DUPLEX UNIT OPEN	DUPLEX UNIT OPEN
ENGINE BOARD FAN MOTOR ERROR	ENGINE BOARD FAN MOTOR ERROR
ENGINE CONTROL ERROR	ENGINE CONTROL ERROR
ENGINE EEPROM MICONIC	ENGINE EEPROM MISCINIC
ENGINE LIFE OVER	ENGINE LIFE OVER
ENGINE LIFE OVER	ENGINE LIFE OVER
ENGINE RAM ERROR	ENGINE RAM ERROR
ENGINE ROM ERROR	ENGINE ROM ERROR
ENGINE SRAM ERROR	ENGINE SRAM ERROR
ENV TEMP SENSOR ERROR	ENV TEMP SENSOR ERROR
FACE-UP STACKER OPEN	FACE-UP STACKER OPEN
FLASH HARDWARE ERROR	FLASH HARDWARE ERROR
FLASH SOFTWARE ERROR	FLASH SOFTWARE ERROR
FRONT COVER OPEN	FRONT COVER OPEN
FUSER LIFE OVER	FUSER LIFE OVER
FUSER UNIT FAN MOTOR ERROR	FUSER UNIT FAN MOTOR ERROR
FUSER UNIT FUSE CUT ERROR	FUSER UNIT FUSE CUT ERROR
FUSER UNIT MISMATCH	FUSER UNIT MISMATCH
HOPPING ERROR DUPLEX	HOPPING ERROR DUPLEX
HOPPING ERROR MULTI PURPOSE FEEDER	HOPPING ERROR MULTI PURPOSE FEEDER
HOPPING ERROR TRAY1	HOPPING ERROR TRAY1
HOPPING ERROR TRAY2	HOPPING ERROR TRAY2
HOPPING ERROR TRAY3	HOPPING ERROR TRAY3
HOPPING ERROR TRAY4	HOPPING ERROR TRAY4
HOPPING ERROR TRAY5	HOPPING ERROR TRAY5
HUMIDITY SENSOR DEW ERROR	HUMIDITY SENSOR DEW ERROR
HUMIDITY SENSOR ERROR	HUMIDITY SENSOR ERROR
INFEED:DUPLEX	Duplex hopping error
INFEED:MP-FEEDER	MP feeder hopping error
INFEED:TRAY1	Tray 1 hopping error
INFEED:TRAY2	Tray 2 hopping error
INFEED:TRAY3	Tray 3 hopping error
INFEED:TRAY4	Tray 4 hopping error
INFEED:TRAY5	Tray 5 hopping error
INITIALIZING	Controlling initialization upon power ON
INITIALIZING PENGITY AD HIGT	Controlling initialization upon cover open/close
INITIALIZING DENSITY ADJUST	Controlling adjustment of auto density
INITIALIZING REGISTRATION ADJUST	Controlling adjustment of auto color irregularity
INPATH:DUPLEX ENTRY	Duplex internal jam
INPATH:DUPLEX INPUT	Duplex transport jam
INPATH:DUPLEX REVERSAL	Duplex reversal unit jam
INPATH:EEED	Ejection jam
INPATH:FEED	Feed jam Transport jam
INPATH:TRANSPORT	Transport jam
JAM DUPLEX ENTRY	Duplex internal jam
JAM DUPLEX INPUT	Duplex transport jam
JAM DUPLEX REVERSAL	Duplex reversal unit jam
JAM EXIT	Ejection jam
JAM FEED	Feed jam

Panel Display	Details
JAM TRANSPORT	Transport jam
JOB OFFSET HOME ERROR	JOB OFFSET HOME ERROR
LED HEAD OVER HEAT	LED HEAD OVER HEAT
LIFT ERROR TRAY1	LIFT ERROR TRAY1
LIFT ERROR TRAY2	LIFT ERROR TRAY2
LIFT ERROR TRAY3	LIFT ERROR TRAY3
LIFT ERROR TRAY4	LIFT ERROR TRAY4
LIFT ERROR TRAY5	LIFT ERROR TRAY5
LIFT UP TRAY1	LIFT UP TRAY1
LIFT UP TRAY2	LIFT UP TRAY2
LIFT UP TRAY3	LIFT UP TRAY3
LIFT UP TRAY4	LIFT UP TRAY4
LIFT UP TRAY5	LIFT UP TRAY5
LOWER HEATER HIGH TEMPER	LOWER HEATER HIGH TEMPER
LOWER HEATER LOW TEMPER	LOWER HEATER LOW TEMPER
LOWER HEATER OPEN ERROR	LOWER HEATER OPEN ERROR
LOWER HEATER SHORT ERROR	LOWER HEATER SHORT ERROR
MAGENTA DRUM LIFE OVER	MAGENTA DRUM LIFE OVER
MAGENTA DRUM NEAR LIFE	MAGENTA DRUM NEAR LIFE
MAGENTA DRUM UNIT FUSE CUT ERROR	MAGENTA DRUM UNIT FUSE CUT ERROR
MAGENTA DRUM UP/DOWN ERROR	MAGENTA DRUM UP/DOWN ERROR
MAGENTA IRREGULAR ERROR	MAGENTA IRREGULAR ERROR
MAGENTA LED HEAD ERROR	MAGENTA LED HEAD ERROR
MAGENTA REGISTRATION ERROR	MAGENTA REGISTRATION ERROR
MAGENTA REGISTRATION OUT HORIZONTAL	Abnormal color irregularity registration value detected in
	magenta sub-scan registration
MAGENTA REGISTRATION OUT LEFT	MAGENTA REGISTRATION OUT LEFT
MAGENTA REGISTRATION OUT RIGHT	MAGENTA REGISTRATION OUT RIGHT
MAGENTA SENSOR ERROR LEFT	MAGENTA SENSOR ERROR LEFT
MAGENTA SENSOR ERROR RIGHT	MAGENTA SENSOR ERROR RIGHT
MAGENTA TONER EMPTY	MAGENTA TONER EMPTY
MAGENTA TONER LOW	MAGENTA TONER LOW
MAGENTA TONER SENSOR ERROR	MAGENTA TONER SENSOR ERROR
MAGENTA ID DENSITY ERROR 1	MAGENTA ID DENSITY ERROR 1
MAGENTA ID DENSITY ERROR 2	MAGENTA ID DENSITY ERROR 2
MAILBOX I/F ERROR	MAILBOX I/F ERROR
MISSING BELT UNIT	MISSING BELT UNIT
MISSING BLACK DRUM	MISSING BLACK DRUM
MISSING CYAN DRUM	MISSING CYAN DRUM
MISSING FUSER UNIT	MISSING FUSER UNIT
MISSING MAGENTA DRUM	MISSING MAGENTA DRUM
MISSING YELLOW DRUM	MISSING YELLOW DRUM
MULTI PURPOSE FEEDER STAGE POSITION	MULTI PURPOSE FEEDER STAGE POSITION
PAPER END MULTI PURPOSE FEEDER	PAPER END MULTI PURPOSE FEEDER
PAPER END TRAY1	PAPER END TRAY1
PAPER END TRAY2	PAPER END TRAY2
PAPER END TRAY3	PAPER END TRAY3
PAPER END TRAY4	PAPER END TRAY4
PAPER END TRAY5	PAPER END TRAY5
PAPER NEAR END MULTI PURPOSE FEEDER	PAPER NEAR END MULTI PURPOSE FEEDER
PAPER NEAR END TRAY1	PAPER NEAR END TRAY1
PAPER NEAR END TRAY2	PAPER NEAR END TRAY2
PAPER NEAR END TRAY3	PAPER NEAR END TRAY3

Panel Display	Details
PAPER NEAR END TRAY4	PAPER NEAR END TRAY4
PAPER NEAR END TRAY5	PAPER NEAR END TRAY5
PAPER PILE OUT OF TRAY	Paper transport error
PAPER SIZE ERROR	PAPER SIZE ERROR
POWER SUPPLY FAN MOTOR ERROR	PU fan motor error
POWER SUPPLY LSI ERROR	POWER SUPPLY LSI ERROR
PROCESS CONTROL OFF	PROCESS CONTROL OFF
PROCESS WAIT MODE	Adjusting color irregularity / density (upon starting from CU)
PUNCH BOX NOT EXISTING	PUNCH BOX NOT EXISTING
PUNCH DUST OVERFLOW	PUNCH DUST OVERFLOW
REGISTRATION SENSOR CALIBRATION ERROR	REGISTRATION SENSOR CALIBRATION ERROR
R-SIDE COVER OPEN	R-SIDE COVER OPEN
SHUTTER ERROR1	Density adjustment shutter error 1
SHUTTER ERROR2	Density adjustment shutter error 2
STACKER FULL BOTTOM BIN	STACKER FULL BOTTOM BIN
STACKER FULL FACE DOWN	STACKER FULL FACE DOWN
STACKER FULL MAIL BOX1 STACKER FULL MAIL BOX2	STACKER FULL MAIL BOX1 STACKER FULL MAIL BOX2
STACKER FULL TOP BIN	STACKER FULL TOP BIN
THICKNESS ADJSTING	THICKNESS ADJSTING
THICKNESS NON-PAPER AD ERROR	AD out of regulated value error (upon no media)
THICKNESS PAPER THICKNESS ERROR	Media thickness out of range error
THICKNESS SNS AD ERROR	Sensor output difference out of range error (upon no media)
THICKNESS THICK_PAPER ERROR	Speed adjustment error
TOP COVER OPEN	TOP COVER OPEN
TRAY1 TYPE MISMATCH	TRAY1 TYPE MISMATCH
TRAY2 COVER OPEN	TRAY2 COVER OPEN
TRAY2 I/F ERROR	TRAY2 I/F ERROR
TRAY2 TYPE MISMATCH	TRAY2 TYPE MISMATCH
TRAY3 COVER OPEN	TRAY3 COVER OPEN
TRAY3 I/F ERROR	TRAY3 I/F ERROR
TRAY3 TYPE MISMATCH	TRAY3 TYPE MISMATCH
TRAY4 COVER OPEN	TRAY4 COVER OPEN
TRAY4 I/F ERROR	TRAY4 I/F ERROR
TRAY4 TYPE MISMATCH	TRAY4 TYPE MISMATCH
TRAY5 COVER OPEN	TRAY5 COVER OPEN
TRAY5 I/F ERROR	TRAY5 I/F ERROR
TRAY5 TYPE MISMATCH	TRAY5 TYPE MISMATCH
UPPER HEATER HIGH TEMPER	UPPER HEATER HIGH TEMPER
UPPER HEATER LOW TEMPER	UPPER HEATER LOW TEMPER
UPPER HEATER OPEN ERROR	UPPER HEATER OPEN ERROR
UPPER HEATER SHORT ERROR	UPPER HEATER SHORT ERROR
WARMING UP	WARMING UP
YELLOW DRUM LIFE OVER	YELLOW DRUM LIFE OVER
YELLOW DRUM NEAR LIFE	YELLOW DRUM NEAR LIFE
YELLOW DRUM UNIT FUSE CUT ERROR	YELLOW DRUM UNIT FUSE CUT ERROR
YELLOW DRUM UP/DOWN ERROR	YELLOW DRUM UP/DOWN ERROR
YELLOW IRREGULAR ERROR	YELLOW IRREGULAR ERROR
YELLOW LED HEAD ERROR	YELLOW LED HEAD ERROR
YELLOW REGISTRATION ERROR	YELLOW REGISTRATION ERROR
YELLOW REGISTRATION OUT HORIZONTAL	Abnormal color irregularity registration value detected in
	magenta sub-scan registration
YELLOW REGISTRATION OUT LEFT	YELLOW REGISTRATION OUT LEFT
	<u> </u>

Panel Display	Details
CYAN REGISTRATION OUT RIGHT	CYAN REGISTRATION OUT RIGHT
CYAN SENSOR ERROR LEFT	CYAN SENSOR ERROR LEFT
CYAN SENSOR ERROR RIGHT	CYAN SENSOR ERROR RIGHT
CYAN TONER EMPTY	CYAN TONER EMPTY
CYAN TONER LOW	CYAN TONER LOW
CYAN TONER SENSOR ERROR	CYAN TONER SENSOR ERROR
CYAN ID DENSITY ERROR 1	CYAN ID DENSITY ERROR 1
CYAN ID DENSITY ERROR 2	CYAN ID DENSITY ERROR 2

Details of jam error display

Panel Display	Details
INFEED:TRAY1	Tray 1 hopping error
INFEED:TRAY2	Tray 2 hopping error
INFEED:TRAY3	Tray 3 hopping error
INFEED:TRAY4	Tray 4 hopping error
INFEED:TRAY5	Tray 5 hopping error
INFEED:MP-FEEDER	MP feeder hopping error
INFEED:DUPLEX	Duplex hopping error
INPATH:DUPLEX INPUT	Duplex transport jam
INPATH:DUPLEX ENTRY	Duplex internal jam
INPATH:REVERSAL	Duplex reversal unit jam
INPATH:FEED	Feed jam
INPATH:TRANSPORT	Transport jam
INPATH:EXIT	Ejection jam

INFEED: Data on paper remaining at paper feed slot. INPATH: Data on paper remaining in paper path.

3.1.3 Various print jobs with single printer unit attached with a controller

Menu map print

Prints program version, configuration of the control unit, and other printer configuration and setting.

```
Operation: (Press switch)
Without HDD: "0". "3". "3"
With HDD: "0". "0". "3". "3"
```

File list print

Prints a file list stored in the HDD or Flash ROM.

```
Operation: (Press switch)
```

```
Without HDD : "0" . "3" . "1" . "3" With HDD : "0" . "0" . "3" . "1" . "3"
```

Font list print (PCL)

Prints a font list for PCL. Operation: (Press switch)

```
Without HDD : "0" . "3" . "1" . "1" . "3"
With HDD : "0" . "0" . "3" . "1" . "1" . "3"
```

Font list print (PS)

Prints a font list for PS.

Operation: (Press switch)

```
Without HDD : "0" . "3" . "1" . "1" . "3" With HDD : "0" . "0" . "3" . "1" . "1" . "1" . "3"
```

Demo print

Prints a demo pattern for each subject installed in the ROM.

```
Operation: (Press switch)
```

```
Without HDD : "0" . "3" . "1" . "1" . "1" . "1" . "3" With HDD : "0" . "0" . "3" . "1" . "1" . "1" . "1" . "3"
```

Ethernet self-diagnostic print

If an Ethernet board is installed, perform self-diagnosis by pressing the Ethernet board SW for two seconds or longer and print the result.

3.2 Adjustment After Replacing Parts

The following describes the adjustments that are required after each part replacement.

Adjustment and correction of color registration are always required for each part replacement.

Replaced Part	Adjustment
LED Head	Not required
Drum Cartridge (Y, M, C, K)	Not required.
Fuser Unit	Not required.
Belt Cassette Assy	Not required.
PU (K7N Board)	Re-mounting the EEPROM used on the board before the replacement. *Note
CU (TIG board)	Re-mounting the EEPROM used on the board before the replacement. *Note
Shutter	Setting the correction value of the calibration chip for detecting density.
Media Thickness Sensor	Adjusting paper thickness detection sensitivity and checking media
Assy	thickness detection value setting.

^{*} Note:1. When the EEPROM of PU (K7N board) is replaced to a new one, color balance must be adjusted.

3.2.1 Precautions in replacing the engine control board

When replacing the engine control board , remove the EEPROM from the old board and mount it on a new board (for errors other than those of engine EEPROM). When SERVICE CALL xxx (Engine EEPROM Error) is displayed on the operator panel, the EEPROM must be replaced with a new one. In this case, perform the operation described in section 3.2.2.

3.2.2 Precautions in replacing EEPROM

When the EEPROM is not removed from the board and placed on the new board at the time of engine controll board replacement, the Version Read function (fuse cut) is disabled. The printer must be switched from the factory mode to the shipping mode by the PJL command.

[Description]

- 1. Sending of an appropriate PJL file to the printer to place it in Shipping mode
- 2. Sending of a repower-on or reboot command (PJL file) to complete the setting

[Procedure]

At the MS-DOS prompt, perform the following steps:

- 1. Enter Copy /b Pjl ship.bin prn and hit <Enter>.
- 2. Enter Copy /b Pil reboot.bin prn and hit <Enter>, or power the printer off and on.

[Pil Files Required]

- 1. Pjl-ship.bin
- 2. Pjl-reboot.bin

Vote: Life data for consumables such as belt, toner, and ID is cleared when replacing EEPROM, therefore, be cautious as there will be a tolerance in life management upon replacing the unit in the future. The following count will be cleared when replacing EEPROM. Other than Total Sheets Feed is cleared when each unit is replaced, therefore, the tolerance will be cleared at that point.

^{*} Note: 2. When the EEPROM of CU (TIG board) is replaced to a new one, the Destination Setting must be adjusted.

Item	Contents	Count						
Fuser	Life count of the fuser	Value in which the number of printed pages is converted to the number of Letter paper after installing a new fuser unit.						
Transfer Belt	Life count of the transfer belt	Value in which the number of printed pages is converted to the number of Letter paper after installing a new fuser unit.						
Black Imaging Drum Cyan Imaging Drum Magenta Imaging Drum Yellow Imaging Drum	Life count of the imaging drums for each color	Value in which the number of rotations is converted to the number of Letter paper after installing a new ID unit.						
Black Toner Cyan Toner Magenta Toner Yellow Toner	Count of the used toner amount for each color	Count of the number of printed dots.						
Total Sheets Feed	Life count of the printer	Total number of printed pages.						
Black Impressions Cyan Impressions Magenta Impressions Yellow Impressions	Total number of printed pages	Number of printed pages after installing a new ID unit.						

3.2.3 Replacing EEPROM after replacing the TIG board

When replacing the TIG board, remove EEPROM from the board used by the user and set it to the replaced board. (This is to pass on the user set contents and font install data to the new board.) Furthermore, if the user's EEPROM cannot be used due to damages, use the EEPROM on the new board. In this case, the new board and EEPROM should be set with destinations.

3.2.4 Destination Setting (Checking Metod: Printing Demo Page)

The destination setting of each main control board, which takes on ODA by default, must be set, at the time of printer shipment, to correspond to the destination of the printer equipped with the board.

Japan indirect sales, ODA, OEL and APS maintenance boards are to be shipped with the destination setting left at its default.

Setting on Operation Panel:

Powering up each printer in maintenance mode and then setting its destination are made.

While holding SWs (1), (6), and (7) down, turn on printer.

After MAINTENANCE MENU is displayed on LCD, the display changes to USER.

Press SW (1) to select USER for destination setting.

ODA * appears on the lower display. Press SW (2) to select a destination.

Confirm the setting by pressing SW (3).

Printer restarts, and comes up with the destination changed.

Description:

Each of Japan domestic and over seas AR-C200P uses a common ROM.

Destination setting must be made for the common ROM to be used in the printers to various destinations (the setting in the ROM default to ODA).

Setiings are stored in TIG board's EEPROM.

Maintenance boards are to be shipped with the destination setting at its default and, when Settings are stored in TIG board's EEPROM.

3.2.5 Recovery Flash ROM data on TIG board

A 4MB Flash ROM that enables a user to register an arbitrary file is installed on the TIG board. When a TIG board has to be replaced, print a file list of the information menu and check the registered files before replacing the board.

Re-register necessary files when the TIG board is replaced.

3.3 Adjusting the Density

The auto density adjust mode is set to [Auto] when the printer is delivered, however, problems may occur upon using the printer if the mode is set to [Manual]. Perform the procedure when the density is improper.

Note: Perform the task when the printer is not in operation. Do not perform during warm-up.

- (1) Press ① several times and display [Color Menu].
- (2) Press 1 or 5 and display [Density Adjust/Start].
- (3) Press (3).

The auto density adjustment will begin.

3.4 Paper Thickness Detection Sensitivity Adjustment and Media Thickness Detection Value Check

Outline:

The sensitivity of a micro displacement sensor used for detecting media thickness varies from one to another. Therefore, to ascertain the sensitivity in advance, check the output value of the sensor by passing media of known thickness through the printer equipped with the sensor. The sensitivity is fixed based on the output value.

Adjustments must be made when the paper thickness sensor, the registration roller and the PU board are replaced.

By passing, from the multipurpose tray, four sheets of paper whose thickness has been measured with a micrometer (MDQ-30M, MDQ-30), the correction value for media thickness sensitivity is automatically set with the first three sheets. Check the media thickness detection value with the fourth sheet.

Media: Transparency (42404301)

Paper thickness difference: Within ±10∞m

3.4.1 Applicable Operating Systems and Interfaces, and File Required

Software: AdjustmentMM.exe (Ver. 1.12) File Required: Opusbase.dll

OS	I/F File Type		File Name	Remarks
Win9x Series (95/98/Me)	Centronics	No file required	No file required	The interface port must be checked for its bidirectional setting.
	USB	USB driver	USB Driver for Win98.exe	With the insertion of a USB, installation screen display is provided.
Win2000/XP	Centronics			Inapplicable
	USB	No file required	No file required	

Note: For use of a Centronics interface, the interface port must be checked for its bidirectional setting.

Checking: Check the parallel port is set to bidirectional in the BIOS setup (Parallel Mode parameter: Bi directional. No ECP/EEP).

Note: BIOS setup and program words vary with personal computers. Be sure to refer to the user documentation for the PC used.


(Example for NEC PCs)

- (1) Power on the PC.
- (2) POST (Power On Self-Test) details are displayed on the PC screen and then, at the lower left of the screen, Press <F2> to enter SETUP is shown.
- (3) At the press of <F2>, SETUP is activated and the Main menu appears.
- (4) Select Peripheral Configuration from the Advanced menu.
- (5) Select Parallel Mode and check the parallel port is set to Bi directional.
- (6) Press Esc to end the checking.

3.4.2 Setting

3.4.2.1 Menu Setting

- (1) Power on the PC.
- (2) Create an arbitrary folder, and copy the two files AdjustMM.exe and Opusbacc.dll into it (refer to the screen that is an example when the folder C:\MediaThickness has been created).

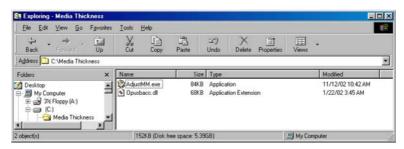

(3) On the PC, activate the adjustment software AdjustMM (press OK on the screen that is provided only when the software is activated first time).




Perform steps (2) to (4) only in first-time menu setting.

(4) Connect the printer AC cable and Centronics interface cable.


Note:

- When a Centronics is used, operation is not performed unless the Centronics is set to bidirectional. Refer to 3.4.1 Applicable Operating Systems and Interfaces, and File Required.
- When a USB is used with a Win9x series (Win95/98/Me), the USB driver "USB Driver for Win98.exe" must be installed.
- (5) Power on the printer. Wait until the printer is placed on-line.
- (6) Mark the Config(C) checkbox and then press Setup Data.

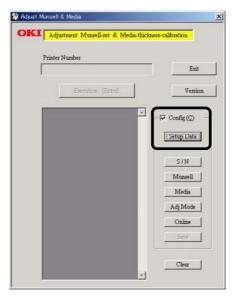

(7) Setting screen appears. Select (mark) LPT1 or USB on the Printer Port menu. Press OK.

Note: Do not change settings other than those instructed here.

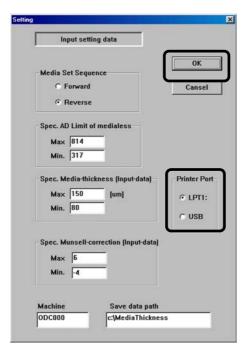


(8) The screen returns to the Adjust Munsell & Media screen. Press Media.



3.4.2.2 Media Setting

(1) The media thickness input screen is displayed. Prepare four sensitivity adjustment transparency sheets (42404301) and enter the thicknesses with which the transparency sheets are labeled.

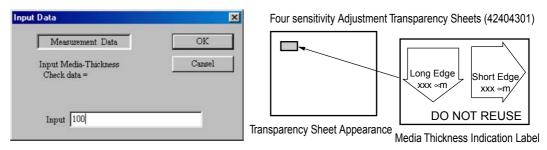


- **Note:** Make thickness entries in ∞m (simply type in the value that is indicated on each transparency sheet). Enter the value of the short edge.
 - Load the sheets in the multipurpose tray, in the order of their thickness entry (the media of the first entered thickness is to be lowermost in the multipurpose tray).

Thickness Entry Order	Screen Display	Tray Load	ing Order	Feed Order	Remarks
4	sample 1=	4 N	IP try top	1	Sensitivity adjustment 1st sheet
3	sample 2=	3	=	2	Sensitivity adjustment 2nd sheet
2	sample 3=	2	=	3	Sensitivity adjustment 3rd sheet
1	Check data=	1 N	IP try bottom	4	Check sheet

(2) After the completion of the thickness entry of the fourth sheet, the ADJUSTMM screen is shown.




Paper Orientation: Portrait

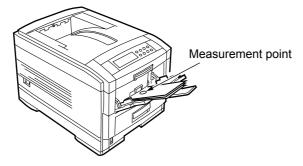

* Load four sheets of media so as that their measurement points are located at the front feeder - plate hopper.


3.4.2.3 Sensitivity Adjustment

(1) With the press of OK on the ADJUSTMM screen, sensitivity adjustment is performed. The printer boots up, and four sheets of media are passed through it.

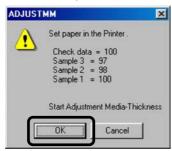

(2) When the sensitivity adjustment is completed properly, the ADJUSTMM screen and the Adjust Munsell & Media screen are displayed.



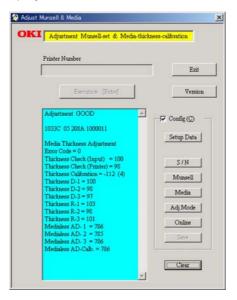


(3) When the sensitivity adjustment is not properly completed, the screen appears. In such cases, see Actions for NG Sensitivity Adjustment.



(4) The folder C:\MediaThickness is automatically created, storing the result of the sensitivity adjustment in the CSV format.

Determine cause(s) of NG results from the stored file. After the cause(s) are corrected, conduct sensitivity adjustment again.

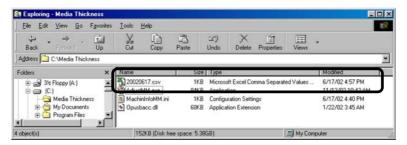

(5) Power off the printer and disconnect the interface cable.


3.4.2.4 Actions for NG Sensitivity Adjustment

When a CSV format file stored automatically in sensitivity adjustment is opened, the opened file contains the following. The yellow-shaded area shows errors. For error code-to-description correspondence, see the flow chart shown below.

Data stored in CSV format (Example)

Calibration of Media-thickness adjustment & Munsell correction writing												####	#						
		Lot: 0121 MO59970		970	Machin ODC-000														
	IR Number	Err.Code	Check Input	Check Meas	Calb	Data-D1	Data-D2	Data-D3	Data-R1	Data-R2	Data-R3	AD-1	AD-2	AD-3	AD-Che	Munsell	Judg	Date	Time
	17	0	101	107	141	101	103	102	99	105	104	754	760	762	763	FE	GOOD	######	8:55:06
	18	0	99	103	146	100	102	103	97	108	112	627	634	634	633	FE	GOOD	######	10:14:21
	37	0	96	100	145	103	101	101	101	109	107	640	653	654	654	0	GOOD	######	10:18:42
	1	0	101	105	139	98	99	103	98	98	102	772	779	781	781	3	GOOD	######	10:38:15
	13	0	101	105	136	98	103	104	91	100	104	687	697	698	697	2	GOOD	######	10:45:58
	5	0	102	98	140	101	104	101	97	106	102	752	760	759	758	2	GOOD	######	10:58:27

Action procedure for NG sensitivity adjustment on media thickness detection part

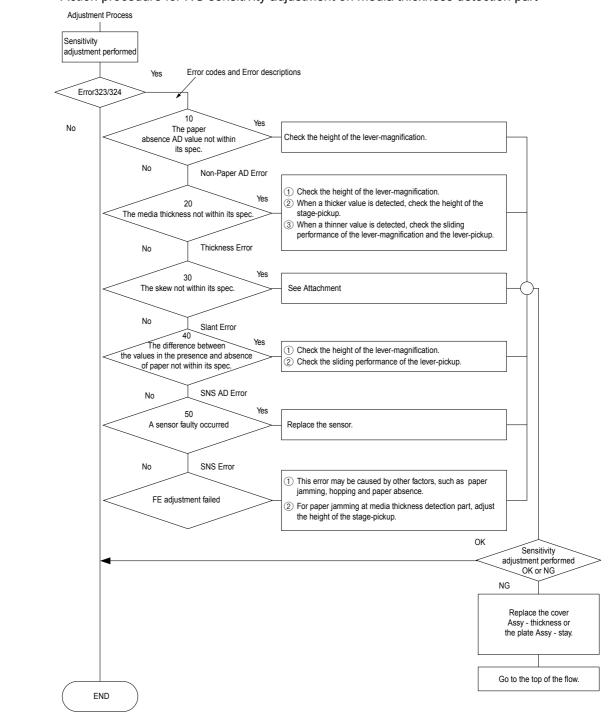

3.4.3 Inputting the density of the calibration chip for density detection


Write the calibration target adjustment value (last 2 digits in the barcode, refer to the figure below) indicated on the shutter label.

The adjustment value of the shutter must be reset when Sheet Color, density sensor, or PU sensor is replaced.


3.4.3.1 Density Adjustment Menu Setting

For the steps (1) to (8) of menu setting, see Media Thickness Detection Adjustment Calibration 3.4.2.1, steps (1) to (8).


(9) The screen returns to the Adjust Munsell & Media screen. Press Munsell.

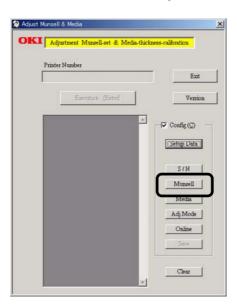

(10) Press Yes.

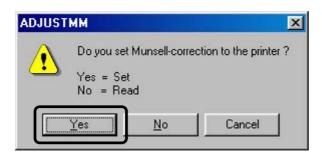


(11) The Munsell sheet correction value input screen appears.

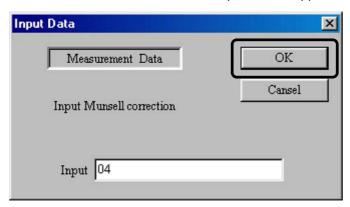

- (12) Enter the correction value marked on the barcode label on the shutter into the Input field and press OK (the Munsell sheet correction value is sent from the PC to the printer and set).
- (13) When the density adjustment is completed properly, the ADJUSTMM screen and the Adjust Munsell & Media screen are brought up.



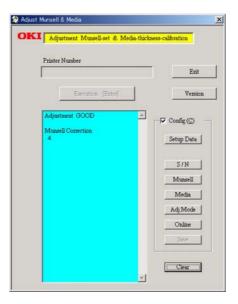

Barcode specification:

Applied code : code39
 Barcode digit : 12 digits

③ Written content: From the left:*1 digit

Date4 digits (ID barcode) method

Year 1 digit - 1 digit (x) in (200x)


Month 1 digit (10th, 11th, 12th month are indicated as X, Y, Z.)

Day 2 digits

Empty 4 digits Set zeros "0000".

 $\boldsymbol{2}$ adjustment digits (Same as the data format input manually for the printer.)

00~04 for 0 to 4, FF~FC for -1 to -4.

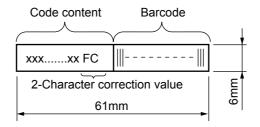

4 Barcode length YC4116-1006P001 label sheet 1/4"

3.4.4 Electronic Serial Number Input

[Outline]

The 22-character electronic serial number (E-S/N) that has been marked on each printer's nameplate is to be entered.


[Case that Requires Electronic Serial Number Input]

The EEPROM mounted on the PU board of a printer is replaced with a new one.


[Setting Method]

For the steps (1) to (8) of menu setting, see Media Thickness Detection Adjustment Calibration 3.4.2.1, steps (1) to (8).


(9) The screen returns to the Adjust Munsell & Media screen. Press S/N.

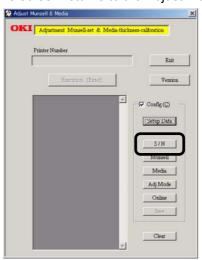

(10) The Input Data screen is displayed. Type 22-character electronic serial number in the Input field and press OK.

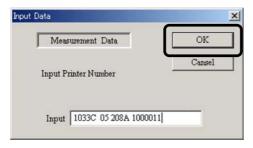

(11) When the electronic serial number input is completed properly, the Adjust Munsell & Media screen appears.

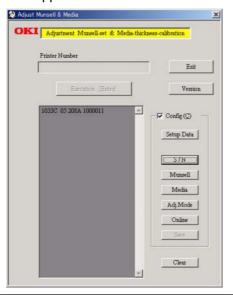

4. REGULAR MAINTENANCE

4.1 Parts Replaced Regularly

Users are recommended to replace parts periodically according to the table below. (Print quality cannot be assured and damages may occur, when the parts are not replaced.)

Part Name	Time of Replacement	Condition for Replacement	Adjustment (after replacement)
Large toner cartridge	When [Fill Toner] is displayed.	10,000 pages are printed.	
Toner cartridge	When [Fill Toner] is displayed.	5,000 pages are printed.	
ID	When [Drum Life] is displayed.	20,000 pages are printed. (3P/J)	
Fuser unit	When [Fuser Life] is displayed.	60,000 pages are printed.	
Belt unit	When [Belt Life] is displayed.	60,000 pages are printed.	
Feed Roller Components	When non-feeding of paper is frequent (a proper paper amount is loaded).	120,000 pages are printed (this is given as a guide).	

Parts are replaced periodically by users.

4.2 Cleaning

Clean the internal and external sections of the printer with waste and a small vacuum cleaner as required.


Note: Do not touch the image drum terminals, the LED lens array, and the LED head connecter.

4.3 Cleaning the LED Lens Array

Clean the LED head array while white bands or lines (white-out, faint print) appear in the vertical direction on a printed page.

Note: Be sure to clean the LED lens array with the LED lens array cleaner. (the LED head cleaner is packed together with the toner cartridge.)

White band, white stripe (Void or light printing)

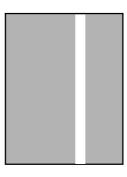

4.4 Cleaning the Pick-up Roller

Clean the pick-up roller if lines appear in the vertical direction on the printed page.

Note: Use a soft cloth in order to avoid scratching the roller surface.

5. TROUBLESHOOTING PROCEDURES

5.1 Precautions before troubleshooting

- (1) Confirm the basic inspection items described in the user manual.
- (2) Obtain as much information regarding the problem from the user as possible.
- (3) Check the printer in a condition close to that upon generating the problem.

5.2 Precautions before handling an abnormal image

- (1) Confirm that the environment for using this printer is appropriate.
- (2) Confirm that consumables (toner, drum cartridge) are replaced appropriately.
- (3) Confirm that paper is accurate. Refer to paper specifications.
- (4) Confirm that the drum cartridge is set appropriately.

5.3 Precautions upon handling an abnormal image

- (1) Do not touch or allow foreign objects to contact the OPC drum surface.
- (2) Do not expose the OPC drum to direct sunlight.
- (3) Do not touch the fuser unit as it is heated significantly.
- (4) Do not expose the image drum to light for longer than five minutes in room temperature.


5.4 Preparing for Troubleshooting

(1) Operator panel display

Problems that occur with the printer are indicated in the LCD. Apply proper remedies according to the message indicated in the LCD.

5.5 Troubleshooting Procedure

Confirm the problem in the following method when the printer generates a problem.

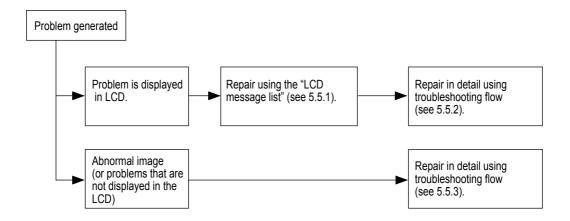

5.5.1 LCD message list

When the printer detects a non-recoverable error, the following service call error is displayed in the LCD.

Service call nnn: error

Note: nnn is an error code.

When [Service call] is displayed, error information that corresponds to the error code appears in the bottom line in the LCD. Error codes, their definitions and remedies are described in Table 5-1-1.

Table 5-1-1 Operator Alarm (1/6)

Message	Cause	Error Description		Solutions
Service Call 001: Error ~ 011: Error	CPU Exception	Does error display reappear? Does error display reappear?	Yes Yes	Turn power OFF and ON. Replace TIG board. (Replace EEPROM)
Service Call 020: Error	CU ROM Hash Check Error 1	Is program ROM DIMM set properly? Is error recovered by replacing program ROM DIMM?	No Yes No	Reset program ROM DIMM. Replace program ROM DIMM. Replace TIG board. (Replace EEPROM)
Service Call 030: Error	CU Slot1 DIMM RAM Check Error	Is subject RAM DIMM set properly? Is error recovered by replacing subject ROM DIMM?	No Yes No	Reset subject RAM DIMM. Replace RAM DIMM. Replace TIG board. (Replace EEPROM)
Service Call 031: Error	CU Slot2 DIMM RAM Check Error	Is subject RAM DIMM set properly? Is error recovered by replacing subject ROM DIMM?	No Yes No	Reset subject RAM DIMM. Replace RAM DIMM. Replace TIG board. (Replace EEPROM)
Service Call 032: Error	CU Slot3 DIMM RAM Check Error	Is subject RAM DIMM set properly? Is error recovered by replacing subject ROM DIMM?	No Yes No	Reset subject RAM DIMM. Replace RAM DIMM. Replace TIG board. (Replace EEPROM)
Service Call 035: Error	Slot1 RAM Spec Error. The CU RAM Slot1 DIMM specification is not supported.	Is RAM DIMM genuine? Is subject RAM DIMM gap setting proper? Is error recovered by replacing subject ROM DIMM?	No No Yes No	Use genuine RAM DIMM. Reset subject RAM DIMM. Replace RAM DIMM. Replace TIG board. (Replace EEPROM)
Service Call 036: Error	Slot2 RAM Spec Error. The CU RAM Slot2 DIMM specification is not supported.	Is RAM DIMM genuine? Is subject RAM DIMM gap setting proper? Is error recovered by replacing subject ROM DIMM?	No No Yes No	Use genuine RAM DIMM. Reset subject RAM DIMM. Replace RAM DIMM. Replace TIG board. (Replace EEPROM)
Service Call 037: Error	Slot3 RAM Spec Error. The CU RAM Slot3 DIMM specification is notsupported.	Is RAM DIMM genuine? Is subject RAM DIMM gap setting proper? Is error recovered by replacing subject ROM DIMM?	No No Yes No	Use genuine RAM DIMM. Reset subject RAM DIMM. Replace RAM DIMM. Replace TIG board. (Replace EEPROM)
Service Call 040: Error	CU EEPROM Error	Is error recovered by replacing EEPROM on CU board?	Yes No	Replace EEPROM. (Recover user environment.) Replace TIG board. (Replace EEPROM)
Service Call 041: Error	CU Flash Error Flash ROM error on CU board.	Does error display reappear?	Yes	Replace TIG board. (Replace EEPROM.)

Table 5-1-1 Operator Alarm (2/6)

Message	Cause	Error Description		Solutions
Service Call 042: Error ~ 044: Error	Flash File SYSTEM Error	Failed access to Flash set directly on CU board.		Press ①, ③, ⑤, ⑥ to turn power ON, release buttons when [FLASH FORMAT] appears, wait until [ON-LINE] (2sec) and replace TIG board if symptom does not change.
Service Call 048: Error	CU ROM for PS+PCL was set in Non-PS device.	Is proper program ROM set?	Yes No	Replace program ROM DIMM. Replace with proper program ROM DIMM.
Service Call 049: Error	CU type mismatch CU ROM does not match with the device.	Is proper program ROM set?	Yes No	Replace program ROM DIMM. Replace with proper program ROM DIMM.
Service Call 050: Error	Operater Panel Error	Does error display reappear?	Yes	Refer to no LCD display flow chart.
Service Call 051: Error	CU Fan Error Abnormal CPU cooling fan on CU board.	Is connector set properly on CU board? Is error recovered by replacing fan?	No Yes No	Connect properly. Replace fan. Replace TIG board. (Replace EEPROM.)
Service Call 063: Error	Network comm. Error Abnormal H/W I/F between CU-NIC.	Is network board set properly? Is error recovered by replacing network board?	No Yes No	Set properly. Replace Network. Replace TIG board. (Replace EEPROM.)
Service Call 065: Error	NIC Combination Error	Is proper Network board for the model set?	Yes No	Replace NIC card. Replace with proper Network board (MLETB11, etc.).
Service Call 070: Error	CANT_HAPPEN PS firmware fault detected.	Confirm that error is recovered by turning power OFF/ON.	No	Replace TIG board. (Replace EEPROM.)
Service Call 072: Error	Engine communication error I/F error between PU-CU.	Is CU assembly set properly? Is error recovered by replacing TIG board?	No Yes No	Set properly. Replace TIG board. (Replace EEPROM.) Replace PU board.
Service Call 073: Error ~ 075: Error	Video overrun detect	Is CU assembly set properly? Is error recovered by replacing TIG board?	No Yes	Set properly. Replace TIG board. (Replace EEPROM.)
Service Call 102: Error	Error in engine RAM read/write detected at power ON.	Does error reoccur?	Yes	Replace engine control board.
Service Call 103: Error	Error in engine SRAM read/write detected at power ON.	Does error reoccur?	Yes	Replace engine control board.
Service Call 104: Error	Error in engine EEPROM check total detected at power ON.	Does error reoccur?	Yes	Replace engine control board.
Service Call 105: Error	EEPROM not detected at power ON.	Does EEPROM exist? Does error reoccur?	Yes Yes	Check for EEPROM and set if not found. Replace engine control board.
Service Call 106: Error	Error in engine control logic detected at power ON.	Does error reoccur?	Yes	Replace engine control board.
Service Call 107: Error	Engine ROM check sum error.	Does error reoccur? Is error recovered by reloading PU F/W?	Yes No	Reload PU I/F. Replace engine control board.

Table 5-1-1 Operator Alarm (3/6)

Message	Cause	Error Description		Solutions
Service Call 110: Error 116: Error 110: Envelope Feeder 111: Duplex unit 112: 2nd Tray 113: 3rd Tray 114: 4th Tray 115: 5th Tray 116: Finisher	Option unit for different model detected.	Is a proper option unit for the printer set?	Yes No	Set proper option unit. Check connections and turn power ON. If error is not recovered, replace the unit.
Service Call 120: Error	PU unit fan motor error.	1) Is fan in PU unit operating?2) Error reoccurs after replacing fan motor.	No Yes Yes	Replace fan motor. Replace engine control board. Replace engine control board.
Service Call 121: Error	High-voltage power supply I/F error.	Is cable between PU board andhigh- voltage power LSI connected properly?	No Yes	Connect properly. Replace high-voltage power supply. Check improper connections for high-voltage.
Service Call 122: Error	Low-voltage power supply fan error. Low-voltage power supply temperature error.	Is fan in low-voltage power supply unit operating? Error reoccurs after replacing fan motor.	No Yes Yes	Replace fan motor. Replace low-voltage power supply. Replace low-voltage power supply.
Service Call 123: Error	Improper environment humidity detected by sensor.	1) Is error message displayed? 2) Does error reoccur?	Yes Yes	Turn ON power again. Replace humidity sensor.
Service Call 124: Error	Improper environment temperature detected by sensor.	1) Is error message displayed? 2) Does error reoccur?	Yes Yes	Turn ON power again. Replace humidity sensor.
Service Call 125: Error	Error detected at MT home position.	Is error message displayed? Does error reoccur?	Yes Yes	Turn ON power again. Replace MT.
Turn power OFF and wait 126: Dew error	Sensor dew error.	Sensor dew error detected.		Turn ON power after a while.
Service Call 130: Error	Temperature rise detected at LED head.	1) Is error message displayed? 2) Does error reoccur?	Yes Yes Yes	Leave alone for 30 min. Turn power OFF. Leave for 30 min., then turn power ON. Replace LED head.
Service Call 131: Y Head 132: M Head 133: C Head 134: K Head	Same unit not detected upon power ON or opening cover.	1) Is error message displayed? 2) Is LED head properly set? 3) Does error reoccur?	Yes No Yes	Confirm that LED head is set properly. Turn power ON again. Replace LED head assembly.
Service Call 140: Y ID 141: M ID 142: C ID 143: K ID	Error detected at proper ID position.	l) Is error message displayed? Does error reoccur?	Yes Yes	Turn power ON again. Replace drum assembly.
Service Call 150: Y 151: M 152: C 153: K	When a fuse could not be disconnected in the ID unit.	Is ID unit set properly?	Yes	Check cable connections and replace engine board.
Service Call 154: Error	When belt unit fuse cannot be disconnected.	Is belt unit set properly?	Yes	Check cable connections and replace engine board.
Service Call 155: Error	When fuser unit fuse cannot be disconnected.	Is fuser unit set properly?	Yes	Check cable connections and replace engine board.

Table 5-1-1 Operator Alarm (4/6)

Message	Cause	Error Description		Solutions
Service Call 160: Y Toner 161: M Toner 162: C Toner 163: K Toner	Error detected by toner sensor.	l) Is error message displayed? Does error reoccur?	Yes Yes	Replace toner sensor or assembly (Y71-PWB). Same as above.
Service Call 170: Error 171: Error 174: Error 175: Error	Short circuit in fuser thermistor or open detected (high temp. or low temp.)	Is error message displayed? Does error reoccur?	Yes Yes	Turn ON power again. Replace thermistor and turn power OFF. Leave aside for 30 min.
Service Call 172: Error 176: Error	Thermistor indicates high-temperature error.	Is error message displayed? Does error reoccur?	Yes Yes	Turn ON power again. Replace thermistor and turn power OFF. Leave aside for 30 min.
Service Call 173: Error 177: Error	Thermistor indicates low-temperature error.	Is error message displayed? Does error reoccur?	Yes Yes	Turn ON power again. Replace thermistor and turn power OFF. Leave aside for 30 min.
Service Call 179: Error	Wrong fuser standard.	Does fuser match with model and power voltage? Error reoccurs after setting fuser properly.	No Yes Yes	Set proper fuser. Check if fuser is set properly. Replace fuser.
Service Call 180: Error ~ 186: Error	Communication disability with option unit detected by engine.	Is error message displayed? Does error reoccur?	Yes Yes	Turn ON power again. Replace option unit.
Service Call 187: Error	Communication with control panel disabled.	Is cable properly connected to control panel?	No Yes	Connect properly. Replace control panel and cable.
Close cover 310: Top cover open	Printer engine cover open.	Check if top cover is open. Check if cover switch is proper.	Yes Yes No	Close top cover. Close side cover. Replace cover switch.
Reset fuser 320: Fuser error	Same unit not detected upon power ON or opening cover.	1) Is error message displayed? 2) Is fuser unit set properly? 3) Does error reoccur?	Yes No Yes	Check if fuser is set properly. Reset fuser and turn ON power again. Replace fuser unit assembly.
Turn power OFF and wait 321: MOTOR OVERHEAT	Printer cannot be used temporarily due to motor overheat.			Turn ON power after a while.
Open/close cover 323: Paper thickness error	Sensor output out of range with no media. (Only for Factory Mode)	Are foreign objects mixed in sensor? Does printer recover when detecting paper thickness by opening/closing tray? Does printer recover by power OFF/ON.	Yes No	Remove foreign objects. Normal.
Open/close cover 324: Paper thickness error	Sensor output gap out of range with no media. (Only for Factory Mode)	Are foreign objects mixed in sensor? Does printer recover when detecting paper thickness by opening/closing tray? Does printer recover by power OFF/ON.	Yes No	Remove foreign objects. Normal.
Open/close cover 325: Paper thickness error	Media detect value out of range.	Is different media type mixed in? Is media being double fed?	Yes	Remove foreign objects.
Open/close cover 326: Paper thickness error	U-Heavy mode media detect value out of range.	Is different media type mixed in?	Yes	Remove foreign objects.

Table 5-1-1 Operator Alarm (5/6)

Message	Cause	Error Description		Solutions
Reset belt 330: Belt error	Same unit not detected upon power ON or closing cover.	1) Is error message displayed? 2) Is belt unit set properly? 3) Does error reoccur?	Yes No Yes	Check set condition of belt unit. Reset belt unit and turn power ON again. Replace belt unit assembly.
Reset drum 330~343: Drum error	Same as above.	1) Is error message displayed? 2) Is image drum set properly? 3) Does error reoccur?	Yes No Yes	Check set condition of ID. Turn power ON again. Replace ID unit assembly.
Set new drum 350: Yellow drum life 351: Magenta drum life 352: Cyan drum life 353: Black drum life	ID unit life.	Right after replacing ID unit?	Yes No	Check ID unit life. Replace ID unit.
	Fuser life (occurs when fuser life continuation is OFF).	Right after replacing fuser?	Yes No	Check fuser life. Replace fuser.
Set new belt 355: Belt life	Belt life notified (alarm). Print N-count by opening and closing cover.	Right after replacing belt?	Yes No	Check belt life. Replace belt.
Set new belt 356: Belt life	Waste toner belt life notified (alarm). Print N-count by opening and closing cover. N=20	Right after replacing belt?	Yes No	Check belt life. Replace belt.
Set duplex unit 360: Duplex unit is open.	When duplex unit is removed from printer.	Does error recover by resetting duplex unit?	Yes No	Normal. Replace duplex unit or engine board.
Check DUPLEX 370: Paper jam	Paper jam detected after paper rotated in duplex unit.	Check paper jam in duplex unit.	Yes No	Remove jammed paper. Check/replace duplex unit.
Check DUPLEX 371: Paper jam	Paper jam during paper feed from duplex unit.	Check paper jam in duplex unit.	Yes No	Remove jammed paper. Check/replace duplex unit.
Check DUPLEX 372: Paper jam		Check miss-feed in duplex unit.	Yes No	Remove miss-fed paper and close cover. Check/replace duplex unit.
Open front cover 380: Paper jam	Paper jam during paper feed from cassette 1, 2, 3, 4 or 5.	Check miss-feed in duplex unit.	Yes No	Remove miss-fed paper and set cassette. Check/replace cassette 1, 2, 3, 4, or 5.
Open top cover 381: Paper jam	Paper jam detected between black ID and fuser	Check paper jam between yellow ID and fuser. Check fuser unit load.	Yes No	Remove jammed paper. Replace fuser unit.
Open top cover 382: Paper jam	Paper jam detected in fuser or during paper ejection from fuser.	Check paper jam in fuser and between yellow ID and fuser. Check if paper ejection switch is proper.	Yes No	Remove jammed paper. Replace paper ejection switch.
Open top cover 383: Paper jam	Paper jam detected when paper started to enter duplex print unit.	Check paper jam in duplex unit or at entrance.	Yes No	Remove jammed paper. Check/replace duplex unit.

Table 5-1-1 Operator Alarm (6/6)

Message	Cause	Error Description		Solutions
Open top cover 389: Paper jam	Jam generated in paper path.	Open front cover and check jammed paper.	Yes	Remove jammed paper.
Check MP tray 390: Paper jam	Paper jam during paper feed from MT.	Check for miss-fed paper around MT cassette.	Yes No	Remove miss-fed paper and close cover. Check/replace MT.
Check tray * 391~395: Paper jam	Paper jam detected between cassette and black ID.	Check jammed paper between cassette and yellow ID. Check if paper entry switch is normal.	Yes No	Remove jammed paper. Replace entry switch.
Open top cover 400: Paper size error	Non-set paper (45mm or above) detected by printer engine.	1) Is paper custom size? 2) Is paper standard size?	Yes Yes No	No treatment required. Adjust paper size guide in cassette. Replace paper size board (PXC PWB).
Refill toner 410: Yellow 411: Magenta 412: Cyan 413: Black	Certain toner is almost empty.	Selected toner cartridge is almost empty. Check if selected toner cartridge is normal.	Yes No	Replace with new toner kit. Replace selected toner sensor.
Remove paper 480: Stacker full	Paper ejection stacker is full.	Check if stacker is full. Check if stacker full sensor is operating properly.	Yes No	Remove paper from stacker. Replace stacker full sensor.
Set *** 490: No paper in MP tray (* stands for A4 B4, etc.)	No paper in selected cassette. cassette is not set, or paper ran out in cassette being used.	Check if paper is empty in MT. Check if paper-end sensor is operating properly.	Yes No	Set paper in MT. Replace paper-end sensor.
Set *** 491~495: No paper in * tray (* stands for A4 B4, etc.)	Paper empty in cassette 1, 2, 3, 4, or 5.	Check if paper is empty in selected cassette. Check if paper-end sensor is operating properly.	Yes No	Set paper in selected cassette. Replace the corresponding paper-end sensor.
Replace fuser	Fuser counter exceeded life.	1) Is error message displayed? 2) Was fuser unit just replaced?	Yes No	Check fuser unit life. Replace fuser immediately or at next maintenance.
Paper in * tray nearly empty	Paper near end detected.	Are only few papers remaining in tray? (approx. 30 sheets or less)	Yes No	Refill paper. Check paper near end sensor.
Disk operation error	Cannot write in HDD.	Is faulty operation being applied?	No Yes	Check manual operation. HDD abnormality. Replace HDD.

5.5.2 Preparing for troubleshooting

(1) Operator panel display

Problems that are generated in this device are indicated in the LCD. Apply proper measures according to the message displayed in the LCD.

No.	Problem	Flow Chart No.
1	The printer does not function properly after power ON.	①
2	Jam error Feed jam (1st tray) Feed jam (multipurpose tray) Path jam Exit jam Duplex jam	②-1 ②-2 ②-3 ②-4 ②-5
3	Paper size error	3
4	I/D up/down error	4
5	Fuser unit error	(5)
6	Fan motor error	6

Note: When changing the engine board, remove the EEPROM chip from the old board and install it on the newly replaced board

(2) CU assembly troubleshooting

No operation

No

Is an error message displayed?

YES Perform according to the error message.

Is black displayed in the top and bottom lines of the operator panel LCD?

No Check the power voltage 3.3V, 5V 3.3V is open space 2 pin for JTAGW 5V is 2, 3 pins for open space HD5V.

YES Check the PU board and operator panel board.

Replace the power supply.

YES Is ROM DIMM A set properly?

No

No Set a program DIMM to ROM DIMM A properly. If the error is not recovered, replace the CU board.

YES Replace the CU board.

Remove EEPROM from the old board and install it on the new board.

- (1) The printer does not function properly after power ON.
- Turn the power OFF then ON.

```
Is displayed? (Approx. 1 sec.)
```

No Is the AC cable connected properly?

No Connect the AC cable properly.

Yes Is +5V output to the panel connector (OPTN connector) on the engine board PWB?

Pin 10, 11, 18: +5V Pin 5, 7, 15,20: 0V

Yes Is +5V output to the panel connector on the relay board (Y73 PWB)?

Pin 5: +5V Pin 2: 0V

No Replace the relay board.

Yes Is the operator panel cable connected properly?

No Connect the cable properly.

Yes Replace the operator panel cable. Is operation recovered?

No Replace the cover assembly of the operator panel.

Yes End.

No Is +5V output to the power connector on the engine board?

Pin 5, 6, 7, 8: +5V Pin 1, 2, 3, 4, 9, 10, 11: 0V

No Check the power connection connector, then replace the low-voltage power supply

unit.

Yes Replace the engine board.

Yes Are the following voltages output to the PU IF connector on the main board?

Pin 137-147, 187-197 : +5V Pin 125-136, 175-186 : +3.3V Pin 148, 198 : +12V Pin 101-124, 149-174, 199, 200 : 0V

Yes Replace the main board.

No Is the following voltage output to the power connector on the engine board?

Pin 5, 6, 7, 8 : +5V Pin 15 : +12V

Pin 12, 13, 14 : +34V Pin 1, 2, 3, 4, 9, 10, 11 : 0V

Yes Replace the engine board.

No Replace the low-voltage power supply unit.

2-1 Feed jam (1st tray)

Do feed jams occur right after power ON? Yes Is the jam at the entrance cassette sensor or entrance MT sensor? Yes Remove the jammed paper. (A) No Does the sensor lever (entrance cassette sensor or entrance MT sensor) function properly? Replace the faulty sensor lever. Yes Does the sensor (input cassette sensor, entrance MT sensor) function properly? Operate each sensor lever and check the signal on the FSENS connector pin on the engine board (K7N PWB). Pin 4: Entrance sensor / Pin 2: Entrance MT sensor No Check the connection of the NO signal cable, then replace the engine. Yes Check the signal cable connection, then replace the sensor board (R71 PWB). No Do feed jams occur right after papers are absorbed? Yes Did the paper reach the entrance cassette sensor or entrance MT sensor? Yes Proceed to (A). Ţ Replace the feed roller or paper separation frame assembly of the paper cassette. No Is the main feed motor rotating? Yes Replace the feed roller or paper separation frame assembly of the paper cassette. No Is the main feed motor resistance within the regulated value (approx. 4.)? No Replace the main feed motor. Yes Is 34V output to fuse F2 and F4 on the engine board? No Replace the low-voltage power unit. Yes Check the gear mesh status and cable connections, then replace the engine board.

2)-2 Feed jam (multipurpose tray)

Do feed jams occur right after power ON? Yes Is the jam at the entrance cassette sensor or entrance MT sensor? Yes Remove the jammed paper. (A) No Does the sensor lever (entrance MT sensor) function properly? No Replace the faulty sensor lever. Yes Does the sensor (entrance MT sensor) function properly? (Operate each sensor lever and confirm that the sensors function properly in the switch scan test in the system maintenance mode. Also check the FSENS connector pin signal on the engine board.) PIN 2: Entrance MT sensor Check the signal cable connection, then replace the sensor board (R71 PWB). Yes Check the signal cable connection, then replace the engine board. No Do feed jams occur right after papers are absorbed? Yes Did the paper reach the entrance MT sensor? Yes Proceed to (A). No Replace the multipurpose tray assembly. No Is the resist motor rotating? Is 34V output to fuse F4 on the engine board? No No Replace the low-voltage power unit. Yes Check the cable connections, then replace the engine board. Yes Check the cable connections, then replace the engine board.

2-3 Path jam

Do path jams occur right after power ON? Yes Is the jam at the entrance belt sensor? Yes Remove the jammed paper. (A) No Does the light sensor lever function properly? Replace the light sensor lever. Yes Does the belt sensor lever function properly? (Operate the sensor lever and check the FSENS connector pin signal on the engine board.) Pin 6: Entrance belt sensor Check the cable connections, then replace the sensor board (K71 PWB). Yes Check the signal cable. Is it connected properly? Connect the cable properly. Yes Replace the engine board. No Do path jams occur right after papers are absorbed? Yes Did the paper reach the light sensor? Yes Proceed to (A). No Is the resist motor rotating? Is the main feed motor resistance within the regulated value (approx. 7.9.)? No Replace the resist motor. Yes Check the gear mesh status, then replace the engine board. Yes Replace resist motor A or B. No Do path jams occur upon loading paper? Yes Is the belt motor rotating? Is the belt motor resistance within the regulated value (approx. 7.9.)? No Replace the belt motor. Yes Check the gear mesh status, then replace the engine board. Check the gear mesh status, then replace the belt cassette assembly. No End.

2-4 Exit jam

Do exit jams occur right after power ON?

Yes Is the jam at the paper exit sensor?

· Yes Remove the jammed paper.

No Does the paper exit sensor lever function properly?

· No Replace the paper exit sensor lever.

Yes Does the paper exit sensor function properly?

(Operate each sensor lever and confirm that the sensors function properly in the switch scan test in the system maintenance mode. Also check the signal of connecter PARTTEMP Pin 8 on the engine board.)

No Check the signal cable connections, then replace the paper exit sensor.

Yes Replace the engine board.

No Is the cover of the face-up stacker fully opened or closed?

No Open or close the cover completely.

Yes Is the heat motor rotating?

No Is the heat motor resistance within the regulated value (approx. 7.9.)?

No Replace the heat motor.

Yes Is 34V output to power connector 12-14 pins on the engine board?

No Replace the low-voltage power unit.

Yes Check the cable connections, then replace the engine board.

Yes Is the paper ejection guide functioning properly?

No Replace the paper ejection guide.

Yes Replace the engine board.

2-5 Duplex jam

Do path jams occur right after power ON? Yes Is there paper in the duplex print unit? Yes Remove the jammed paper. (A) No Do the duplex unit entrance sensor, rear sensor, and sensor lever of the front sensor function properly? No Replace the faulty sensor lever. Yes Do the duplex unit entrance sensor, rear sensor, and front sensor function properly? (Check if the level of each sensor is "no paper" with the switch scan test in the system maintenance mode.) No Check the cable connections, then replace the faulty sensor. Yes Check the signal cable connection. Is it connected properly? No Connect the cable properly. Yes Replace the duplex print control board (V71 PWB) No Do path jams occur right after papers are absorbed? Yes Did the paper reach the duplex print rear sensor? Yes Proceed to (A). No Is the duplex print motor rotating? Is the duplex print motor resistance within the regulated value (approx. 6.7.)? No Replace the duplex print motor. Yes Check the gear mesh status, then replace the duplex print board (V71 PWB). Yes Replace resist motor A or B. No Replace the duplex print unit.

③ Paper size error

Is paper of regulated size being used?

No Use paper of regulated size.

Yes Is a jam detected by the entrance FF sensor or paper width sensor?

Yes Remove the jammed paper.

No Is the entrance FF sensor lever functioning properly?

No Place the faulty sensor lever.

Yes Is the entrance FF sensor functioning properly?

(Check the FSENS connector pin signal on the engine board.)

Pin 4: Entrance FF sensor

No Check the cable connections, then replace the sensor board (R71 PWB).

Yes Is the entrance belt sensor functioning properly?

No Place the faulty sensor lever.

Yes Is the entrance belt sensor functioning properly?

(Operate the sensor lever and confirm that the sensor functions properly in the switch scan test in the system maintenance mode. Also check the FSENS connector pin signal on the engine board (K7N PWB).)

Pin 6: Entrance belt sensor

No Check the cable connections, then replace the sensor board (R71 PWB).

Yes Are all paper size detection switch on the size detection board (PXC-PWB) functioning properly?

(Press the paper size detection switch and check the PSIZE connector pin signal on the engine board.)

Pin 3: Paper size detector 1

Pin 4: Paper size detector 2

Pin 5: Paper size detector 3

Pin 6: Paper size detector 4

No Check the cable connections, then replace the paper size detection board (PXC-PWB).

Yes Check the cable connections, then replace the engine board.

- 4 Up/Down movement error of the image drum unit (ID)
- Turn the printer OFF, then turn it ON after a few seconds.

Are all ID drums rotating properly during print operation?

No Is the ID motor resistance within the regulated value (approx. 8.6.)?

No Replace the faulty IDU motor.

Yes Is 34V output to F3 and F5 on the engine board?

No Replace the low-voltage power unit.

Yes Check the cable connections, then replace the engine board.

Yes Is the IDU sensor terminal functioning properly?

No Check the gear mesh status and sensor terminal function, the replace the gear or sensor terminal.

Yes Is the ID sensor terminal functioning properly?

(Check the JODEN connector pin signal on the driver board (K7N PXB).)

Pin 12 : IDU sensor - yellow
Pin 2 : IDU sensor - magenta
Pin 4 : IDU sensor - cyan
Pin 14 : IDU sensor - black
Are all at 5V level or 0V level?

No Replace the connection board (N71 PWB).

Yes

Check the cable connection between the connection board (N71 PWB) and engine board (K7N PWB), then replace the engine board.

(5) Fuser unit error

Do fuser errors occur right after power ON?

(A)

Yes Is the heat roller thermister disconnected or generating a short circuit? (See Fig. 5-1) (Approx. 190k-980k. in room temperature of 0-43 degrees Celsius.)

- · Yes Replace the fuser unit.
- No Is the back-up roller thermister disconnected or generating a short circuit? (See Fig. 5-1) (Approx. 190k-980k. in room temperature of 0-43 degrees Celsius.)
 - Yes Replace the fuser unit.

No

No Does a fuser unit error occur approx. three minutes after power ON?

· No Proceed to (A).

Is the heater in the fuser unit turned ON? (Is it hot?)

Yes Replace the engine board.

No Replace the fuser unit.

No Is AC voltage output between CN1 connector pin 1 and pin 3 in the low-voltage power unit?

• No Replace the low-voltage power unit.

Yes Replace the fuser unit.

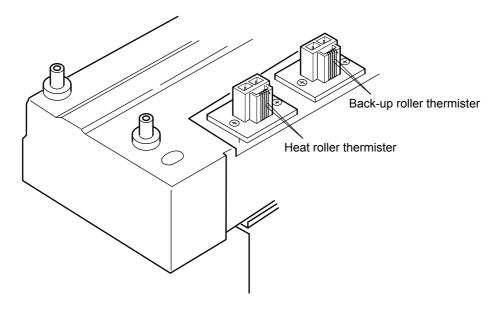


Figure 5.1

(5) Motor fan error

Does the low-voltage power fan rotate at power ON? Is 34V output to fuse F7 on the engine board (K7N PWB)? No Is 34V output to the power connector on the engine board (K7N PWB)? 34V: Pin 12, 13, 14 No Check the cable connections, then replace the low-voltage power unit. Yes Replace the engine board. Was the low-voltage power board replaced? Yes Yes End. No Replace the low-voltage power board. Yes Does the engine board fan rotate at power ON? Is 34V output to fuse F7 on the engine board (K7N PWB)? No No Is 34V output to the power connector on the engine board (K7N PWB)? 34V: Pin 12, 13, 14 No Check the cable connections, then replace the low-voltage power unit. Yes Replace the engine board. Yes Replace the engine board fan. Yes End.

5.5.3 Troubleshooting for abnormal images

Apply remedies according to the following table when printed images are abnormal as shown below.

Abnormal Image	Flowchart No.
The entire image is faint or the color is irregular. (Figure 5.2-A)	1
The white portion is dirty. (Figure 5.2-®)	2
A white page is output. (Figure 5.2-©)	3
Streaks or solid lines appear in the vertical direction.	4
(Black line, color line / black streak, color streak) (Figure 5.2-①)	
White solid lines / streaks or blurred color lines / streaks appear in the vertical	(5)
direction. (Figure 5.2-(F))	
Faulty fusing (image blurs or scatters when touched)	6
Consistent abnormality (Figure 5.2-©)	7
Color detachment	8
Color irregularity	9
Different color compared with the original.	10

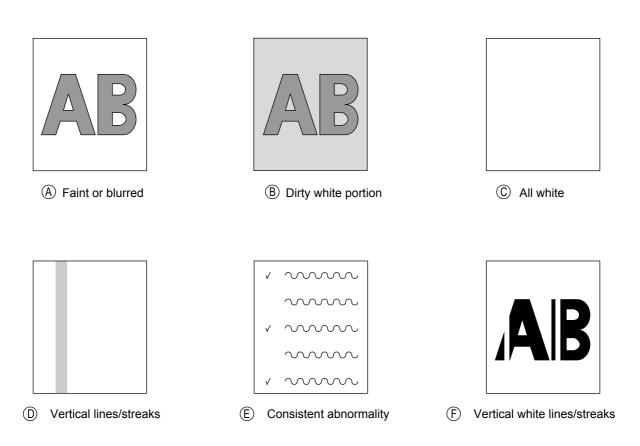


Figure 5.2

(1) An image is generally faint or the color is irregular. (Fig 5-2 (A)) Is the amount of toner low? (Is [Toner Low] indicated?) Yes Refill toner. No Is regulated paper used? No Use regulated paper. Yes Is the LED head lens dirty? Yes Clean the LED head lens. Are all items of the LED head assembly connected properly to the connection board (Y73 No PWB) and engine board (K7N PWB)? Check the cable connection (between each LED head and engine board), then connect the No cables between the LED head and engine board properly. Yes Is +5V output to the following power connector pins on the connection board (Y73 PWB)? +5V: Pin 1, 2, 3, 4, 5, 6 Yes Is +5V output to the each LED head assemblies on the connection board (Y73 PWB)? 3 pin for YPOW connector: LED head assembly - yellow 3 pin for MPOW connector: LED head assembly - magenta 3 pin for CPOW connector: LED head assembly - cyan 3 pin for KPOW connector: LED head assembly - black Replace the connection board (Y73 PWB). Yes Check the cable connections, then replace the LED head assembly. No Check the cable connections, then replace the low-voltage power unit. Did the printer recover? Yes End. No Is 34V output to the power connector on the engine board (K7N PWB)? +34V: Pin 12, 13, 14 Check the cable connections, then replace the low-voltage power unit. No Yes Is 34V output to the HVOLT connector pin 2 on the engine board (K7N PWB)? Replace the engine board. No Yes Check the cable connections, then replace the high-voltage power unit or belt cassette assembly. Yes End. No Is the I/D unit terminal connected properly to the contact assembly. (See Fig. 5-2) Connect the I/D unit terminal properly to the contact assembly. No Yes Replace the image drum. Note: 1. Remove EEPROM from the old board and set it on the new board upon replacing the

engine board (K7N PWB).

(2) Dirty Background. (Fig. 5-2 (B)) Was the image drum exposed to external light for a long time? Yes Replace the I/D unit. No Is the roller in the fuser unit dirty? Yes Replace the fuser unit. No Correct the PAPER THICKNESS setting. Light: 64 g/m² Medium Light: 64 to 74 g/m² Medium: 75 to 90 g/m² Medium Heavy: 91 to 104 g/m² Heavy: 105 to 120 g/m² Ultra Heavy 121 to 203 g/m² Transparency No Set [Paper Thickness] properly. No Is the LED head assembly connected properly to the connection board (Y73 PWB)? Connect the LED head assembly properly to the connection board (Y73 PWB). No Yes Is +5V output to the following power pins on the connection board (Y73 PWB)? +5V: Pin 1, 2, 3, 4, 5, 6 Yes Is +5V output to the following cable connector pins between the connection board (Y73 PWB) and LED head assembly? 3 pin for YPOW connector: LED head assembly - yellow 3 pin for MPOW connector: LED head assembly - magenta 3 pin for CPOW connector: LED head assembly - cyan 3 pin for KPOW connector: LED head assembly - black Replace the connection board (Y73 PWB). Yes Check the cable connections, then replace the LED head assembly. No Check the cable connections, then replace the low-voltage power unit. Did the printer recover? Yes End. No Is 34V output to the power connector on the engine board (K7N PWB)? +34V: Pin 12, 13, 14 Check the cable connections, then replace the low-voltage power unit. No Yes Is 34V output to the power connector pin 2 on the engine board (K7N PWB)? +34V: Pin 12, 13, 14 Replace the engine board. No Yes Check the cable connections, then replace the high-voltage power unit or belt cassette assembly. Yes End. No Is the I/D unit terminal connected properly to the contact assembly. (See Fig. 5-2) No Connect the I/D unit terminal properly to the contact assembly.

Note: 1. Remove EEPROM from the old board and set it on the new board upon replacing the engine board (K7N PWB).

2. If EEPROM is not replaced, refer to section 3.2.2.

Replace the image drum unit.

Yes

③ White page (Fig 5-2 ©)

Is the LED head assembly connected properly to the connection board (Y73 PWB) or engine board (K7N PWB)?

NO Connect the cables, connect the LED assembly to the connection board (Y73 PWB), and engine board properly.

YES Is +5V output to the following power connector pins on the connection board (Y73 PWB)? +3.8V: Pin 1, 2, 3, 4, 5, 6

YES Is +5V output to the following cable connector pins between the connection board (Y73 PWB) and LED head assembly?

3 pin for YPOW connector: LED head assembly - yellow 3 pin for MPOW connector: LED head assembly - magenta 3 pin for CPOW connector: LED head assembly - cyan 3 pin for KPOW connector: LED head assembly - black

NO Replace the connection board (Y73 PWB).

YES Check the cable connections, then replace the LED head assembly.

NO Is 34V output to the power connector on the engine board (K7N PWB)? +34V: Pin 12, 13, 14

NO Check the cable connections, then replace the low-voltage power unit.

YES Is 34V output to HVOLT connector pin 2 on the engine board (K7N PWB)?

NO Replace the engine board.

NO Check the cable connections, then replace the high-voltage power unit or belt cassette assembly. Did the printer recover?

YES End.

NO Is the I/D unit terminal connected properly to the contact assembly. (See Fig. 5-2)

NO Connect the I/D unit terminal properly to the contact assembly.

YES Replace the image drum unit.

Note: 1. Remove EEPROM from the old board and set it on the new board upon replacing the engine board (K7N PWB).

4 Solid lines or streaks appear in the vertical direction. (Black lines, color lines / black streaks, color streaks) (Fig. 5-2 ①)

Is the LED head assembly connected properly to the connection board (Y73 PWB)?

NO Connect the LED head assembly to the connection board properly.

YES Check the cable connections, then replace the LED head assembly. Did the printer recover?

YES End.

YES Check the cable connections, then replace the connection board (Y73 PWB). Did the printer recover?

YES End

NO Is the engine board (K7N PWB) connected properly to the connection board (Y73 PWB)?

NO Connected the engine board properly to the connection board.

YES Check the cable connections, then replace the engine board (K7N PWB). Did the printer recover?

YES End

NO Is the I/D terminal connected properly to the contact assembly? (See Fig. 5-3)

NO Connect the I/D terminal properly to the contact assembly.

YES Replace the image drum.

Note: 1. Remove EEPROM from the old board and set it on the new board upon replacing the engine board (K7N PWB).

Thick white lines / streaks or blurred color lines / streaks appear in the vertical direction (Fig. 5-2 (F)) Is the LED head dirty? YES Clean the LED head. NO Is the LED head assembly connected to the connection board (Y73 PWB) properly? NO Connect the LED head assembly to the connection board (Y73 PWB) properly. YES Check the cable connections, then replace the LED head assembly. Did the printer recover? YES End. NO Check the cable connections, then replace the connection board (Y73 PWB). Did the printer recover? YES End NO Is the engine board (K7N PWB) connected properly to the connection board (Y73 PWB)? NO Connected the engine board properly to the connection board. YES Check the cable connections, then replace the engine board (K7N PWB). Did the printer recover? YES End NO Is the I/D terminal connected properly to the contact assembly? (See Fig. 5-3)

YES Replace the image drum.

Note: 1. Remove EEPROM from the old board and set it on the new board upon replacing the engine board (K7N PWB).

2. If EEPROM is not replaced, refer to section 3.2.2.

NO Connect the I/D terminal properly to the contact assembly.

Poor Fusing (Ink spreads or peels when touched with fingers)

Is regulated paper being used?

Use regulated paper.

YES Is the contact of the fuser unit connected properly?

NO Connect the contact of the fuser unit properly.

YES Is the roller in the fuser unit dirty?

YES Replace the fuser unit assembly.

NO Is the PAPER THICKNESS (menu 1) selected correctly?

Light: 64 g/m² Medium Light: 64 to 74 g/m² Medium: 75 to 90 g/m²

Medium Heavy: 91 to 104 g/m² Heavy: 105 to 120 g/m² Ultra Heavy 121 to 203 g/m²

Transparency

NO Set [Paper Thickness] properly.

YES Is AC voltage output between CN connector pins 1 and 3 in the low-voltage power unit?

NO Replace the low-voltage power unit.

YES Is the heat roller thermister resistance within the regulated value? (See Fig. 5-1)

(Approx. 180k-980k. in room temperature of 0-43 degrees Celsius.)

NO Replace the fuser unit.

YES Is the back-up roller thermister resistance within the regulated value? (See Fig. 5-1)

(Approx. 190k-980k. in room temperature of 0-43 degrees Celsius.)

NO Replace the fuser unit.

YES Does the fuser temperature match the set temperature?

Check the fuser temperature in the LCD display of the engine maintenance mode.

Heat roller (upper): 145-155 degrees (5FH-6BH)

Back-up (lower) : 125-135 degrees (48H-53H)

NO Replace the fuser unit assembly.

YES Replace the fuser unit assembly.

Note: 1. Remove EEPROM from the old board and set it on the new board upon replacing the engine board (K7N PWB).

⑦ Consistent abnormality (Figure 5.2-⑤)

Consistency	Problem	Remedy
94.2 mm	Image Drum	Replace the ID unit.
63.6 mm	Developing Roller	Replace the ID unit.
57.8 mm	Toner Supply Roller	Replace the ID unit.
44.0 mm	Charge Roller	Replace the ID unit.
113.1 mm	Fuser Roller (Upper)	Replace the fuser unit.
	Fuser Roller (Lower)	Replace the fuser unit.
57.8 mm	Transfer Roller	Replace the belt cassette assembly.

Note: The life counter for the I/D unit, fuser unit, and belt cassette unit is reset automatically when the unit is replaced.

8 Color detaches.

Is the LED head dirty?

YES Clean the LED head.

NO Is the LED head assembly connected to the connection board (Y73 PWB) properly?

NO Check the connection cable between the LED head and connection board, then connect properly.

YES Is +5V output to the following HEADPOW connector pins on the connection board (Y73 PWB)?

+5V: Pin 1, 2, 3, 4, 5, 6

YES Is +5V output to the each LED head assemblies on the connection board (Y73 PWB)?

3 pin for YPOW connector: LED head assembly - yellow

3 pin for MPOW connector: LED head assembly - magenta

3 pin for CPOW connector: LED head assembly - cyan

3 pin for KPOW connector: LED head assembly - black

NO Replace the connection board (Y73 PWB).

YES Check the cable connections, then replace the LED head assembly.

NO Check the cable connections, then replace the low-voltage power unit. Did the printer recover?

YES End.

NO Is 34V output to the power connector on the engine board (K7N PWB)? +34V: Pin 12, 13, 14

NO Check the cable connections, then replace the low-voltage power unit.

YES Is 34V output to the HVOLT connector pin 2 on the engine board (K7N PWB)?

NO Replace the engine board.

YES Check the cable connections, then replace the high-voltage power unit or belt cassette assembly.

YES End.

NO Is the I/D unit terminal connected properly to the contact assembly. (See Fig. 5-3)

NO Connect the I/D unit terminal to the contact assemblyproperly.

YES Replace the image drum.

Note: 1. Remove EEPROM from the old board and set it on the new board upon replacing the engine board (K7N PWB).

9	Color	irregul	larity
O	00101	III ogu	

[Toner Low] is displayed.

YES Refill toner. Did the printer recover?

YES End.

NO Perform the color irregularity test in the engine maintenance mode.

Method: Enter the self-diagnostic mode (Level 1) in the engine maintenance mode.

DIAGNOSTIC MODE
XX.XX.XX


Press the ① and ④ keys and enter the self-diagnostic mode (Level 2).



Press the (1) key three times and display [REG ADJUST TEST].



Press the ② key once and display [REG ADJUST EXECUTE].



Press the ③ key and execute auto adjustment for color irregularity. (The motor will start to rotate and adjustment for color irregularity will begin.)

[OK] is displayed immediately with executing color irregularity adjustment. (Motor does not rotate.)

YES Error other than color irregularity has generated. Did color irregularity recover after the error was released?

YES End.

(A)

(A) NO [NG CALIBRATION LEFT /RIGHT] display. YES Is the color irregularity sensor cover dirty? YES: Faulty cleaning operation of the rear sensor cover due to the cleaning blade on the rear side of the shutter. Replace the shutter and sensor cover, and recover cleaning capability. Check the connection of the Z71 board (color irregularity board) connector, RSNS on the K7N board (engine board), and power connector. Did the printer recover after checking the connections? YES End. NO Replace the Z71 board. Did the printer recover? YES End. Replace the engine board. Did the printer recover? YES End. Replace the cables for the Z71 board and engine board. Did the printer recover? YES End. NO [DYNAMICRANGE LEFT /RIGHT] display. YES Is the color irregularity sensor cover dirty? YES Faulty cleaning operation of the rear sensor cover due to the cleaning blade on the rear side of the shutter. Replace the shutter and sensor cover, and recover cleaning capability. NO Is the open/close operation of the shutter abnormal? YES Replace the shutter. Did the printer recover? YES End. NO Replace the shutter open/close solenoid. Did the printer recover? YES End. Replace the belt unit. Did the printer recover? YES End. Replace the ID unit. Did the printer recover? YES End. (B)

[Yellow/Magenta/Cyan Left/Right/Horizontal] display YES Replace the belt unit. Did the printer recover? YES End. NO Replace the ID unit. Did the printer recover? YES End. NO Is the gear abnormal? (Gear assembly such as I/D, multipurpose tray, belt unit, belt motor.) YES Replace the damaged gear assembly. NO Is the LED head unit connected to the connection board (Y73 PWB) properly? NO Connect the LED head unit to the connection board properly. YES Check the cable connections, then replace the LED head assembly. Did the printer recover? YES End. Check the cable connections, then replace the connection board (Y73 PWB). Did the printer YES End. Is the engine board (K7N PWB) connected to the connection board (Y73 PWB) properly? NO Connect the engine to the connection board properly. Replace the engine board. Did the printer recover? YES End. NO Is the I/D terminal connected to the contact assembly properly? (See Fig. 5-3) NO Connect the I/D terminal to the contact assembly properly. YES Replace the image drum.

Note: 1. Remove EEPROM from the old board and set it on the new board upon replacing the engine board (K7N PWB).

Color irregularity compared with the original Is the LED head lens dirty? YES Clean the LED head lens. NO Is the LED head assembly connected to the connection board (Y73 PWB) properly? Check the cable between the LED assembly and connection board and connect properly. YES Is +5V output to the following HEADPOW connector pins on the connection board (Y73 PWB)? +5V: Pin 1, 2, 3, 4, 5, 6 YES Is +5V output to the each LED head assemblies on the connection board (Y73 PWB)? 3 pin for YPOW connector: LED head assembly - yellow 3 pin for MPOW connector: LED head assembly - magenta 3 pin for CPOW connector: LED head assembly - cyan 3 pin for KPOW connector: LED head assembly - black NO Replace the connection board (Y73 PWB). YES Check the cable connections, then replace the LED head assembly. NO Check the cable connections, then replace the low-voltage power unit. Did the printer recover? YES End. NO Is 34V output to the power connector on the engine board (K7N PWB)? +34V: Pin 12, 13, 14 NO Check the cable connections, then replace the low-voltage power unit. YES Is 34V output to HVOLT connector pin 2 on the engine board (K7N PWB)? NO Replace the engine board. YES Check the cable connections, then replace the high-voltage power unit or belt cassette assembly. Did the printer recover? YES End. NO Is the I/D unit terminal connected properly to the contact assembly. (See Fig. 5-3) Connect the I/D unit terminal properly to the contact assembly. NO YES Replace the image drum unit.

Note: 1. Remove EEPROM from the old board and set it on the new board upon replacing the engine board (K7N PWB).

(1) Paper thickness error (Err Code 323, 324)

Is the sensor connector connected?

NO Connect the connecter.

YES Is the sensor cable disconnected?

NO Replace the cable.

YES Is +5V output to the PU board REG 13pin?

NO Replace the PU board.

YES IS GND connection made to the PU board REG 15pin?

NO Replace the PU board.

YES Is pulse signal 5ms ON 10% Duty output to the PU board REG 16pin?

(Disabled on field due to sync usage.)

NO Replace the PU board.

YES Turn ON the power and check the media thickness. Is the error released?

NO Replace the sensor.

YES: End.

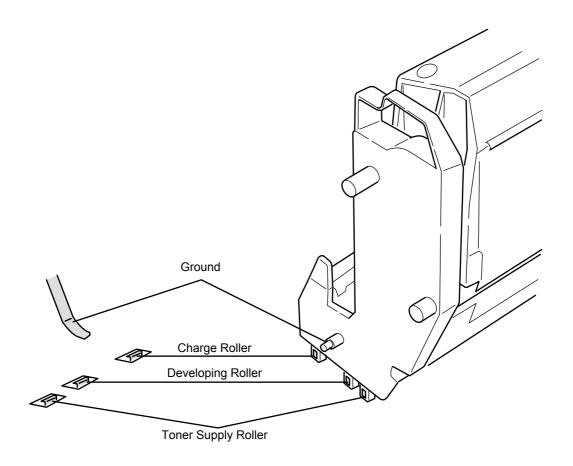


Figure 5.3

5.6 Fuse check

When it is occured bellow errors, check these fuses on Print Engine Controller PWB (K7N-PWB).

Table 5-6 Fuse Error

Fuse Name	Error Description	Insert Point
F1	2nd or 3rd TRY Hopping Error	Option TRY 34V
F2	MID UP/DOWN Error	MID,Hopping Motor Driver
F3	Fuse Cut Error	YID,Fuser Motor Driver JODEN-board
F4	JAM	KID,Registraiton Motor Driver
F5	F5 CID UP/DOWN Error CID,Belt Moto	
F6	POEWR OFF	5V Sensor
F7	PU FAN Error FAN Clutch	JobOff Motor Driver
F8	Cover Open	Cover Open Switch

6. CONNECTION DIAGRAM

6.1 Resistance Checks

Resistance	Between pins 1 and 2: 7.9. Between pins 3 and 4: 7.9.	Between pins 1 and 2: 8.6. Between pins 3 and 4: 8.6.	Between pins 1 and 2: 8.6. Between pins 3 and 4: 8.6.
Illustration			
Circuit Diagram	1	1 0 M 3 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	1 0 M S S S S S S S S S S S S S S S S S S
Unit	Transport Belt Motor	Main Motor (Y)	Main Motor (M)


Resistance	Between pins 1 and 2: 8.6. Between pins 3 and 4: 8.6.	Between pins 1 and 2: 8.6. Between pins 3 and 4: 8.6.	Between pins 1 and 2: 7.9. Between pins 3 and 4: 7.9.
Illustration			
Circuit Diagram	1 0 M 2 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	1 2 3 4 4	10 20 30 40
Unit	Main Motor (C)	Main Motor (K)	Registration Motor

Resistance	Between pins 1 and 2: 7.9. Between pins 3 and 4: 7.9.	Between pins 1 and 2: 7.9. Between pins 3 and 4: 7.9.	Between pins 1 and 2: 6.7. Between pins 3 and 4: 6.7.	
Illustration				
Circuit Diagram	1 or Red 2 or Yellow 3 or Yellow 4 or Blue	1 2 3 4 4	1 2 3 3 4	
Unit	Fuser Motor	Feeder Motor	Duplex Motor	


Resistance	1. Upper Roller Side Between pins "a" and "b": Between pins "c" and "d": 363k (at 25 C) Between pins "e" and "f": Open 2. Backup Roller Side Between pins "a" and "b": Between pins "c" and "d": 363k (at 25 C) Between pins "c" and "f": 0 or open
Illustration	1. Upper roller side
Circuit Diagram	① Upper roller Heater a continuous at (2) Backup roller at (2) Backu
Unit	Fuser Unit

6.2 Program/Font ROM Layouts


(1) Print Engine Controller PWB a) (K7N PWB : 600dpi)

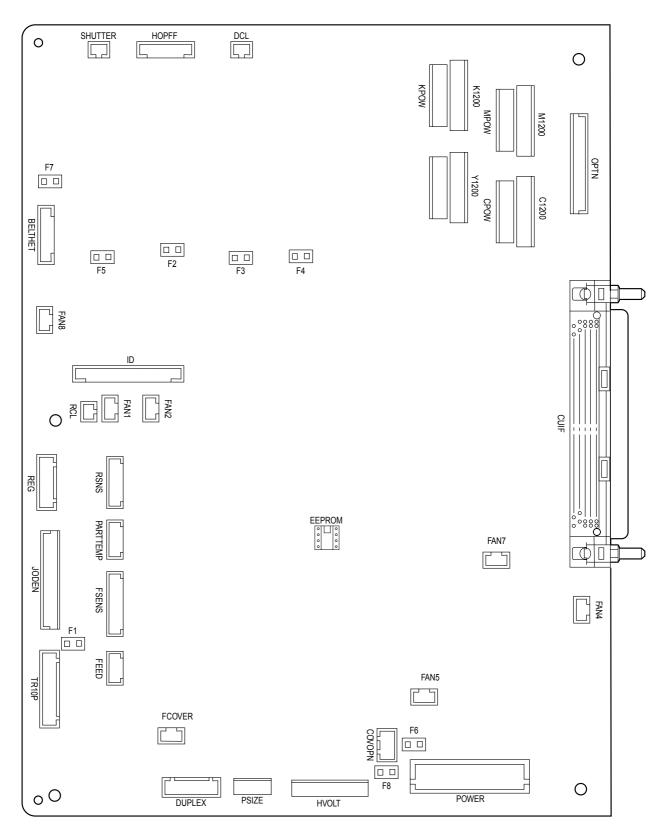


(2) Main Controller PWB

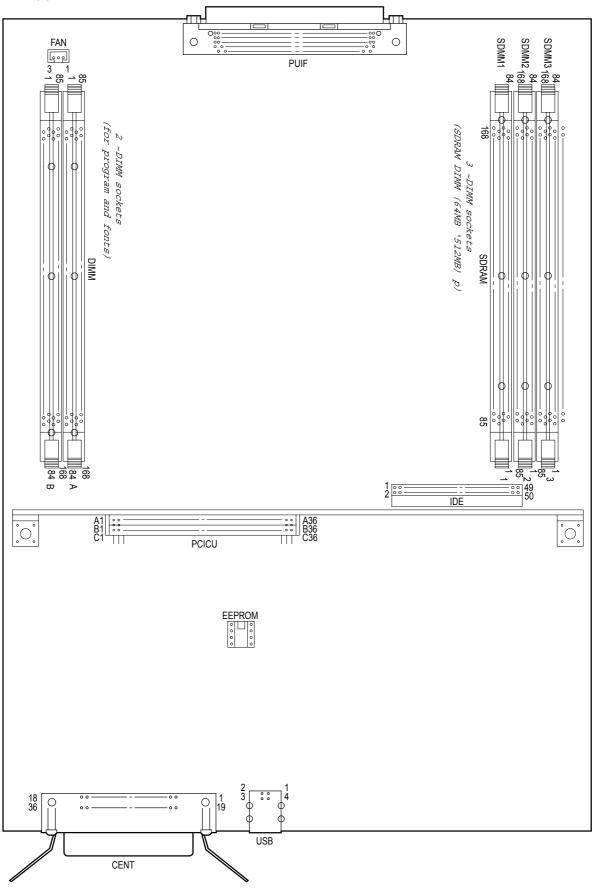


(3) LED Control PWB a) (Y73-1 PWB:600dpi)

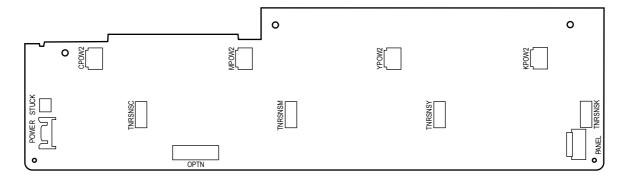

(4) Duplex Control PWB (V71--N PWB)

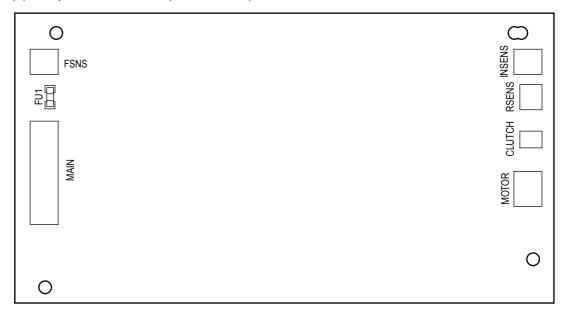


(5) Control Panel PWB (X7N PWB)

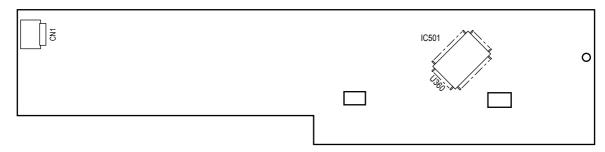


(6) N71 PWB




(7) Entrance Sensor PWB (R71 PWB)

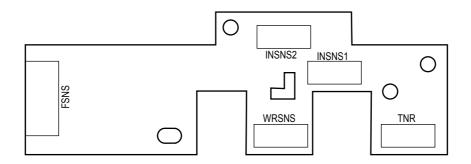


(8) Paper Size Sensing PWB (PXC PWB)

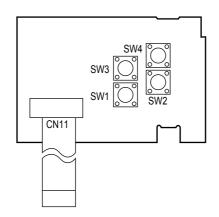

(9) High voltage power supply PWB

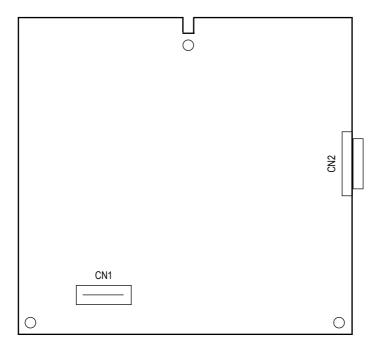

(10) Low voltage power supply PWB

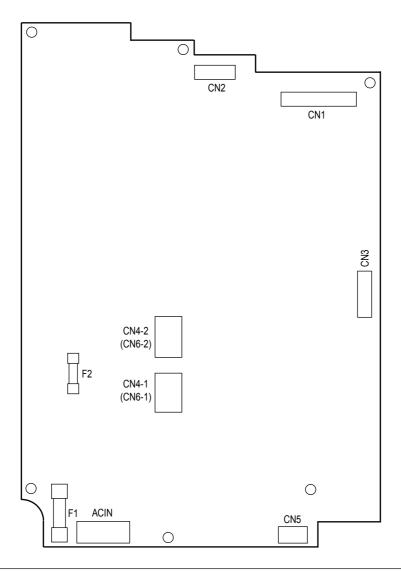

APPENDIX A INTERFACE SPECIFICATIONS

1. Parallel Interface Specifications

1.1 Parallel Interface

Item	Description		
Mode	Compatibility mode, Nibble mode, ECP mode		
Data bit length	8 bits: Compatibility mode, 4bits: Nibble mode,9 bits: ECP mode		

1.2 Parallel Interface Connector and Cable


1) Connector

Printer side: 36-pin receptacle

Type 57LE-40360-12 (D56) (made by Daiichi Denshi) or equivalent

Cable side: 36-pin plug

Type 57FE-30360-20N (D8) (made by Daiichi Denshi) or equivalent



Connector Pin Arrangement Viewed from Cable Side

2) Cable

Cable length: 1.8 m max.

(A shielded cable composed of twisted pair wires is recommended for noise prevention.)


1.3 Parallel Interface Level

LOW: 0 V to +0.8 V HIGH: +2.4 V to 5.0 V


1.4 Timing Charts

Compatible mode


a) Data receiving timing

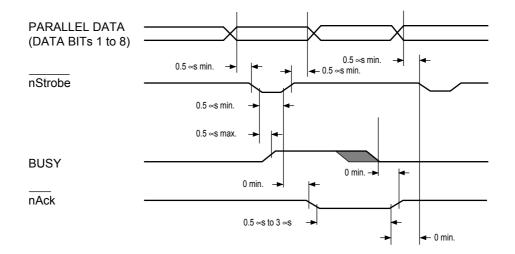


b) On-line (off-line switching timing by ON-LINE SW)

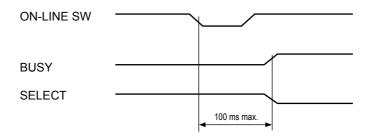

c) Off-line (on-line switching timing by ON-LINE SW)



d) nlnit timing (invalid by default)

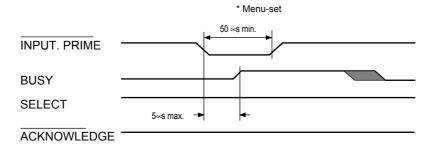

1.5 Parallel I/F Signals

Table 8-1 shows interface signal names and pin numbers.

Table 8-1 Signals

Pin No.	Signal Name	Signal Direction	Functions
1	Nstrobe (HostClk)	. PR	Pulse for reading data in at trailing edge.
2	DATA 1		
3	DATA 2		
4	DATA 3		8-bit parallel data.
5	DATA 4	. PR	Each signal is HIGH when data is logical 1 and
6	DATA 5		LOW when it is logical 0.
7	DATA 6		
8	DATA 7		
9	DATA 8		
10	nAck (PtrClk)	. PR	Indicates the completion of data reception.
11	Busy (PtrBusy)	. PR	Indicates whether the printer is ready for receiving data. Data cannot be received while the signal is HIGH.
12	PError (AckDataReq). PR	Indicates paper error when held HIGH.
13	Select (Xflag)	. PR	HIGH without exception when the parallel
			interface is enabled.
14	NAutoFd (HostBusy)	. PR	Used in bidirectional communication.
15	-		Unassigned.
16	GND		Signal ground.
17	FG		Chassis ground.
18	+5V	. PR	Used for supplying +5V. Power cannot be
			supplied to the outside of the printer.
19			
~	GND		Signal ground.
30			
31	NInit (nInit)	. PR	Initializes the printer when held LOW.
32	NFault (nDataAvail)	. PR	LOW during alarm.
33	GND		Signal ground.
34	-		Unassigned.
35	HILEVEL	. PR	Pulled up to +5V at 3.3K. inside the printer.
36	Nselectin	. PR	Used in bidirectional communication. Low without
	(IEEE 1284 active)		exception in compatible mode.

Note: Parenthesized signal names are used in nibble mode.

Only functions in compatible mode are listed.

2. Universal Serial Bus (USB) Interface Specifications

2.1 USB Interface

(1) Basic specifications

Conforms to USB specification, revision 1.1.

(2) Transmission mode

Full speed (max. 12 Mbps + 0.25%)

(3) Power Control

Self-power device

2.2 USB Interface Connector and Cable


(1) Connector

Printer side: Type B receptacle

Upstrem port

UBB-4R-D14T-1 (made by JST) or equivalent

Connector pin layout

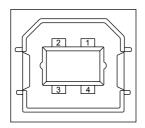

Cable side: Type B plug

(2) Cable

Cable length: 5 m max. (cable compliant with USB specification, revision 1.1)

(A shielded cable must be used.)


2.3 USB Interface Signals

	R1	Function
1	Vbus	Power Supply (+5V) (red)
2	D -	Data transmission (white)
3	D +	Data transmission (green)
4	GND	Signal ground (black)
Shell	Shield	

APPENDIX B 2ND/3RD TRAY MAINTENANCE


1. Parts Replacement

- 1.1 Cover Idle Roller Assy
 - (1) Unscrew the four screws 1 to remove the cover side 2 and the plate cover PCB 3.
 - (2) Unscrew the two screws ④ to demount the cover idle roller Assy ⑤.

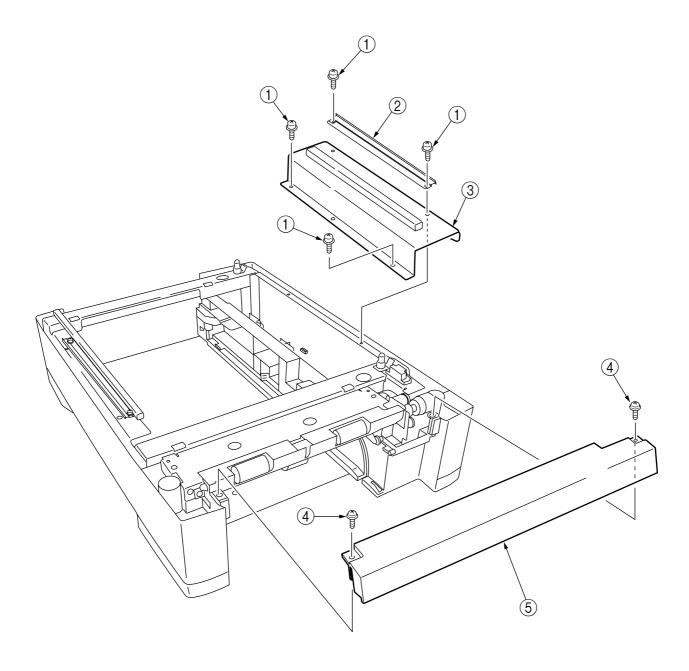


1.2 PCB

- (1) Unscrew the four screws 1 to remove the plate cover PCB 2.
- (2) Remove the connectors (at seven places) and the two screws ③, then demount the board ④.

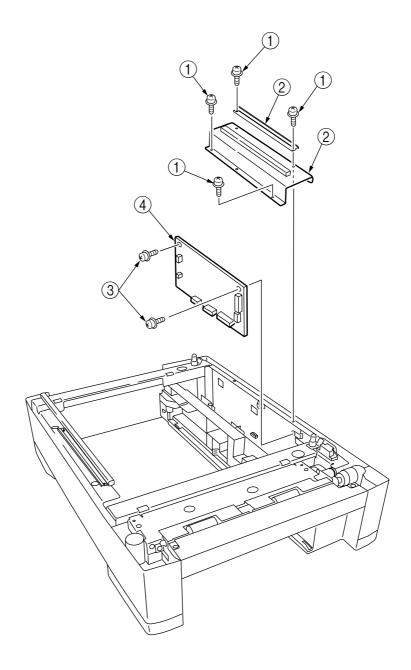


1.3 Feeder Drive Assy

- (1) Remove the four screws ①, six screws ② and the eight screws ③.
- (2) Remove the cover sides (4) and (5), the plate cover PCB (6) and the frame hopping Assy (7).
- (3) Remove the E ring (8), the clutch (9) and the two screws (10).
- (4) Unscrew the two screws 1 to remove the core 2 and the connector 3.
- (5) Unscrew the two screws (4), then detach the motor (5).
- (6) Unscrew the tow screws 6 to remove the connector 7.

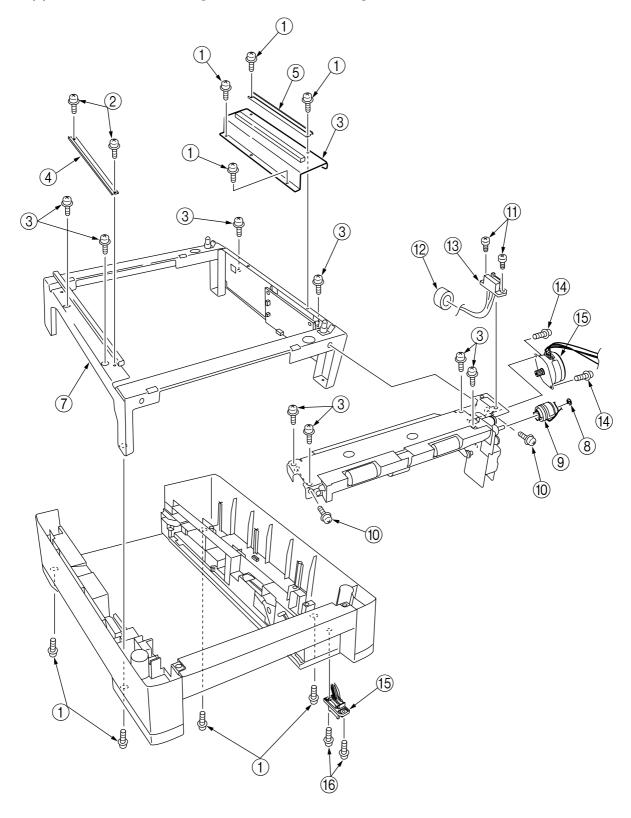

2. 2nd/3rd Tray PARTS LIST

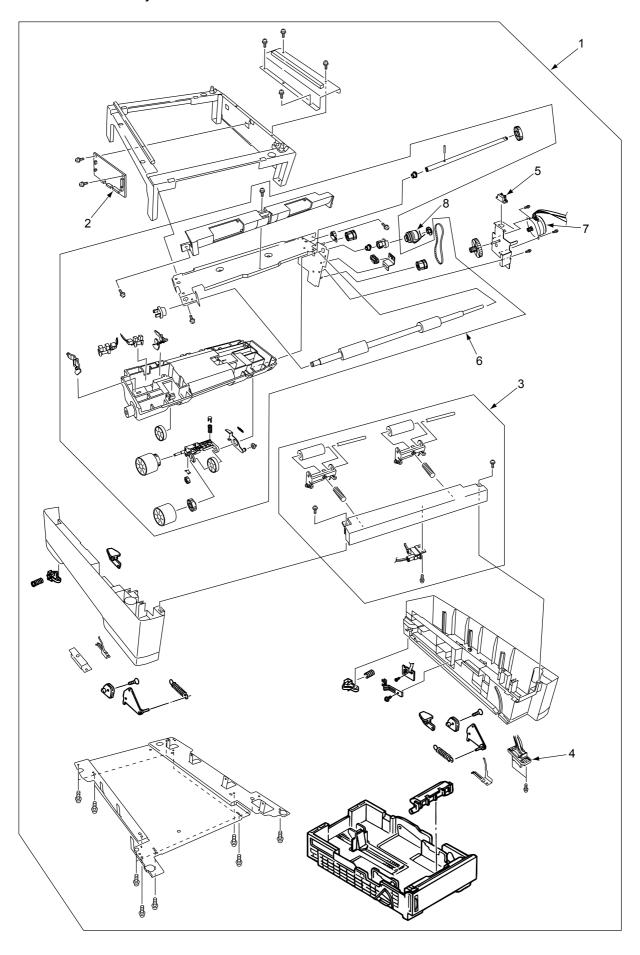



APPENDIX C ERROR MESSAGES

1. Error messages

(Caution) *: Raise in the factory mode only.

** : Not raise in the standard config machines.

Err Code	LCD Messages	LED Ready	LED Atten	Description	Comments
300	POWER OFF/ON 300:NETWORK ERROR	OFF	Blink	A network error is occurring.	
310	CLOSE COVER 310:UPPER COVER OPEN	OFF	Blink	The cover is open.	
311	CLOSE COVER 311:SIDE COVER OPEN	OFF	Blink	The cover is open.(PX711)	
311	CLOSE COVER 311:SIDE COVER OPEN	OFF	Blink	The cover is open.(PX713)	
312	CLOSE COVER 312:TRAY2 COVER OPEN	OFF	Blink	The cover is open.	
313	CLOSE COVER 313:TRAY3 COVER OPEN	OFF	Blink	The cover is open.	
314	CLOSE COVER 314:TRAY4 COVER OPEN	OFF	Blink	The cover is open.	
315	CLOSE COVER 315:TRAY5 COVER OPEN	OFF	Blink	The cover is open.	
320	CHECK FUSER UNIT 320:FUSER UNIT MISSING	OFF	Blink	The fuser unit is not correctly installed	
321	POWER OFF AND WAIT FOR A WHILE 321:MOTOR OVERHEAT	OFF	Blink	Motor (Driver LSD) overheat error	
323	OPEN AND CLOSE COVER 323:PAPER THICK ERROR	OFF	Blink	A Sensor output at Medea Empty is outside the spec.(factory mode only raise)	Anomalies with Media Weight Detection
324	OPEN AND CLOSE COVER 324:PAPER THICK ERROR	OFF	Blink	The difference among Sensor outputs is outside the spec.(factory mode only raise)	sensor.
325	OPEN AND CLOSE COVER 325:PAPER THICK ERROR	OFF	Blink	Media detected values are outside the spec.	
326	OPEN AND CLOSE COVER 326:PAPER THICK ERROR	OFF	Blink	Media detected values in U-Heavy Mode are outside the spec.	
327	DOWNLOAD CHIP DATA 327:DENSITY CALIBRATION CHIP ERROR	OFF	Blink	Density Adjustment's calibration chip correction errorOmission of factory default setting. To prevent setting mistake.Error that does not occur at user level.Displayed only in Factory Mode.	

Err Code	LCD Messages	LED Ready	LED Atten	Description	Comments
330	CHECK BELT UNIT 330:BELT UNIT MISSING	OFF	Blink	The belt unit is not correctly installed.	
340	CHECK IMAGE DRUM 340:YELLOW DRUM MISSING	OFF	Blink	The drum is not correctly installed.	
341	CHECK IMAGE DRUM 340:MAGENTA DRUM MISSING	OFF	Blink		
342	CHECK IMAGE DRUM 340:CYAN DRUM MISSING	OFF	Blink		
343	CHECK IMAGE DRUM 340:BLACK DRUM MISSING	OFF	Blink		
350	INSTALL NEW IMAGE DRUM 350:YELLOW DRUM LIFE	OFF	Blink	The life of the drum (Alarm) Warning status takes effect at Cover Open/Close, while allowing 500 pages	
351	INSTALL NEW IMAGE DRUM 351:MAGENTA DRUM LIFE	OFF	Blink	printing at maximum	
352	INSTALL NEW IMAGE DRUM 352:CYAN DRUM LIFE	OFF	Blink		
353	INSTALL NEW IMAGE DRUM 353:BLACK DRUM LIFE	OFF	Blink		
355	INSTALL NEW BELT UNIT 355:BELT UNIT LIFE	OFF	Blink	Notifies the transfer belt has reached its life. This is the error displayed based on the counter to indicate that the belt has reached its life, and printing will stop.	
356	INSTALL NEW BELT UNIT 356:BELT UNIT LIFE	OFF	Blink	Notifies the transfer belt has reached its life. This is the error to indicate that the belt has reached its life because the waste toner has filled up the container, and printing will stop.	
360	INSTALL DUPLEX UNIT 360:DUPLEX UNIT OPEN	OFF	Blink	Duplex unit is open (removed). When this error is detected, printing stops.(PX713 only)	
361	REMOVE FINISHER 361:PAPER JAM	OFF	Blink	Jam has occurred nearby FINISHER unit.(Only install the FINISHER unit) 361:Before Input	
362	REMOVE FINISHER 362:PAPER JAM	OFF	Blink	362:Input Area 363:Regist Roller 364:Invert Path	
363	REMOVE FINISHER 363:PAPER JAM	OFF	Blink	365:Invert Stack 366:Output Bin1 Exit	
364	REMOVE FINISHER 364:PAPER JAM	OFF	Blink	367:Output Bin2 Exit	
365	REMOVE FINISHER 365:PAPER JAM	OFF	Blink		
366	REMOVE FINISHER 366:PAPER JAM	OFF	Blink		
367	REMOVE FINISHER 367:PAPER JAM	OFF	Blink		

Err Code	LCD Messages	LED Ready	LED Atten	Description	Comments
370	CHECK DUPLEX 370:PAPER JAM	OFF	Blink	Jam has occurred nearby DUPLEX unit.(Duplex Reversal)	
371	CHECK DUPLEX 371:PAPER JAM	OFF	Blink	Jam has occurred nearby DUPLEX unit.(Duplex Input)	
372	CHECK DUPLEX 372:PAPER JAM	OFF	Blink	Jam has occurred nearby DUPLEX unit.(Duplex Missfeed)	
380	OPEN FRONT COVER 380:PAPER JAM	OFF	Blink	Jam has occurred in paper path.(PX711)	
380	OPEN FRONT COVER 380:PAPER JAM	OFF	Blink	Jam has occurred in paper path.(PX713)	
381	OPEN UPPER COVER 381:PAPER JAM	OFF	Blink	Jam has occurred in paper path.(Transport)	
382	OPEN UPPER COVER 382:PAPER JAM	OFF	Blink	Jam has occurred in paper path.(Exit)	
383	OPEN UPPER COVER 383:PAPER JAM	OFF	Blink	Jam has occurred in paper path.(Duplex Entry)	
389	OPEN UPPER COVER 389:PAPER JAM	OFF	Blink	Jam has occurred in paper path.(Others)	
390	CHECK MPTRAY 390:PAPER JAM	OFF	Blink	Paper jam occurred during paper feeding from each tray.	
391	CHECK TRAY1 391:PAPER JAM	OFF	Blink		
392	CHECK TRAY2 392:PAPER JAM	OFF	Blink		
393	CHECK TRAY3 393:PAPER JAM	OFF	Blink		
394	CHECK TRAY4 394:PAPER JAM	OFF	Blink		
395	CHECK TRAY5 395:PAPER JAM	OFF	Blink		
400	OPEN UPPER COVER 400:PAPER SIZE ERROR	OFF	Blink	Inappropriate size paper was fed from a tray. Check the paper in the tray or check for Multiple-feed. Open and close the cover to perform recovery printing, and continue.	
401	OPEN UPPER COVER 401:PAPER MULTI FEED	OFF	Blink	Warns that inappropriate long paper has been fed from the tray. Check whether Multi-feed has happened. Recovery Print takes place at Cover Open/Close, allowing the operation to continue.	

Err Code	LCD Messages	LED Ready	LED Atten	Description	Comments
410	INSTALL NEW TONER 410:YELLOW TONER EMPTY	OFF	Blink	Toner of (Yellow/Magenta/Cyan/Black) ends. Warning status takes effect at Cover Open/Close, while allowing printing at least 20 pages	
411	INSTALL NEW TONER 411:MAGENTA TONER EMPTY	OFF	Blink		
412	INSTALL NEW TONER 412:CYAN TONER EMPTY	OFF	Blink		
413	INSTALL NEW TONER 413:BLACK TONER EMPTY	OFF	Blink		
420	INSTALL ADDITIONAL MEMORY 420: MEMORY OVERFLOW	OFF	Blink	Memory capacity overflows due to the following reason. Press ON-LINE switch so that it continues. Install expansion RAM or decrease the data amount. - Too much print data in a page. - Too much Macro data. - Too much DLL data. - After frame buffer compress	
430	INSTALL PAPER CASSETTE 430:TRAY1 MISSING	OFF	Blink	The tray cassette of paper to which printing is intended is removed, and paper cannot be fed.	
431	INSTALL PAPER CASSETTE 431:TRAY2 MISSING	OFF	Blink		
432	INSTALL PAPER CASSETTE 432:TRAY3 MISSING	OFF	Blink		
433	INSTALL PAPER CASSETTE 433:TRAY4 MISSING	OFF	Blink		
434	INSTALL PAPER CASSETTE 434:TRAY5 MISSING	OFF	Blink		
440	INSTALL PAPER CASSETTE 440:TRAY1 OPEN	OFF	Blink	The tray cassette that is a paper path for the paper to be printed to is removed.(PX711 only)	
441	INSTALL PAPER CASSETTE 441:TRAY2 OPEN	OFF	Blink	Terrioved.(FA711 orily)	
442	INSTALL PAPER CASSETTE 442:TRAY3 OPEN	OFF	Blink		
443	INSTALL PAPER CASSETTE 443:TRAY4 OPEN	OFF	Blink		
440	INSTALL PAPER CASSETTE 440:TRAY1 OPEN	OFF	Blink	The tray cassette that is a paper path for the paper to be printed to is	
441	INSTALL PAPER CASSETTE 441:TRAY2 OPEN	OFF	Blink	removed.(PX711 only)	
442	INSTALL PAPER CASSETTE 442:TRAY3 OPEN	OFF	Blink		
443	INSTALL PAPER CASSETTE 443:TRAY4 OPEN	OFF	Blink		Not rasise (TRAY4:not configuration)

Err Code	LCD Messages	LED Ready	LED Atten	Description	Comments
450	REMOVE THE PAPER 450:TRAY1 UNSUITABLE SIZE	OFF	Blink	Paper that cannot be used in the tray is set. (It takes a while until the status appears after you have closed the tray	
451	REMOVE THE PAPER 451:TRAY2 UNSUITABLE SIZE	OFF	Blink	and the lever lifted.)	
452	REMOVE THE PAPER 452:TRAY3 UNSUITABLE SIZE	OFF	Blink		
453	REMOVE THE PAPER 453:TRAY4 UNSUITABLE SIZE	OFF	Blink		
454	REMOVE THE PAPER 454:TRAY5 UNSUITABLE SIZE	OFF	Blink		
460	CHANGE PAPER TO mmmmmmmmmm/ppppppp 460:MPTRAY MEDIA MISMATCH	OFF	Blink	The size of paper or media type in the tray does not match the print data. Load mmmmm/ppppp paper in the tray (It takes a while until the status disappears after you have closed the tray and the lever lifted.) mmmmm : Paper Size (A4 , . ,B5 ,A6) pppp	
	CHANGE PAPER TO mmmmmmmmm/ppppppp 460:MPTRAY SIZE MISMATCH	OFF	Blink		
461	CHANGE PAPER TO mmmmmmmmm/ppppppp 461:TRAY1 MEDIA MISMATCH	OFF	Blink		
	CHANGE PAPER TO mmmmmmmmm/ppppppp 461:TRAY1 SIZE MISMATCH	OFF	Blink		
462	CHANGE PAPER TO mmmmmmmmm/ppppppp 462:TRAY2 MEDIA MISMATCH	OFF	Blink		
	CHANGE PAPER TO mmmmmmmmm/ppppppp 462:TRAY2 SIZE MISMATCH	OFF	Blink		
463	CHANGE PAPER TO mmmmmmmmm/ppppppp 463:TRAY3 MEDIA MISMATCH	OFF	Blink		
	CHANGE PAPER TO mmmmmmmmm/ppppppp 463:TRAY3 SIZE MISMATCH	OFF	Blink		
464	CHANGE PAPER TO mmmmmmmmm/ppppppp 464:TRAY4 MEDIA MISMATCH	OFF	Blink		
	CHANGE PAPER TO mmmmmmmmm/ppppppp 464:TRAY4 SIZE MISMATCH	OFF	Blink		

Err Code	LCD Messages	LED Ready	LED Atten	Description	Comments
465	CHANGE PAPER TO mmmmmmmmm/ppppppp 465:TRAY5 MEDIA MISMATCH	OFF	Blink	The size of paper or media type in the tray does not match the print data. Load mmmmm/ppppp paper in the tray	
	CHANGE PAPER TO mmmmmmmmm/ppppppp 465:TRAY5 SIZE MISMATCH	OFF	Blink	(It takes a while until the status disappears after you have closed the tray and the lever lifted.)	
469 **	(Reserved : for FRONT FEEDER)	OFF	Blink	mmmmm : Paper Size (A4 , . ,B5 ,A6)	
	(Reserved : for FRONT FEEDER)	OFF	Blink		
471	CHECK STAPLER CARTRIDGE 471:STAPLER CARTRIDGE MISSING	OFF	Blink	The stapler cartridge of Finisher unit is removed	
472	CHECK PUNCH CHIP BOX 472:PUNCH CHIP BOX MISSING	OFF	Blink	The punch chip box of Finisher unit is removed	
473	INSTALL FINISHER 473:FINISHER IS REMOVED	OFF	Blink	The finisher unit is removed	
480	REMOVE THE PAPER 480:STACKER FULL	OFF	Blink	Stacker-full is occurring in the upper part of the printer.	
481	REMOVE THE PAPER 481:FINISHER STACKER FULL	OFF	Blink	Stacker-full in the finisher is occurring.	
482	REMOVE THE PAPER 482:FINISHER STACKER FULL	OFF	Blink	Stacker-full in the finisher is occurring.	
490	LOAD mmmmmmmm 490:MPTRAY EMPTY	OFF	Blink	Printing request is issued to the empty tray.	
491	LOAD mmmmmmmmm 491:TRAY1 EMPTY	OFF	Blink	Load mmmmmmmmm paper. (It takes a while until the status disappears after you have closed the tray and the lever	
492	LOAD mmmmmmmm 492:TRAY2 EMPTY	OFF	Blink	Iifted.) mmmmmmmmm : Paper Size (A4 ,,,,B5,	
493	LOAD mmmmmmmm 493:TRAY3 EMPTY	OFF	Blink	A6)	
494	LOAD mmmmmmmm 494:TRAY4 EMPTY	OFF	Blink		
495	LOAD mmmmmmmm 495:TRAY5 EMPTY	OFF	Blink		
499 **	(Reserved : for FRONT FEEDER)	OFF	Blink		
500	SET mmmmmm ON MPTRAY AND PUSH ON-LINE SWITCH	Light	OFF	Manual paper feed is required. Manually insert the paper shown by mmmmm. mmmmmmmmmmm :Paper Size (A4 ,,,B5, A6)	

Err Code	LCD Messages	LED Ready	LED Atten	Description	Comments
520	CHECK PAPER CASSETTE 520:TRAY1 LIFT UP ERROR	OFF	Blink	Print request was made to Tray1~5, to which Tray Lift Up Error has occurred. Lift Up Retry will take place when the	
521	CHECK PAPER CASSETTE 521:TRAY2 LIFT UP ERROR	OFF	Blink	tray is removed and put back in. (PX713 only)	
522	CHECK PAPER CASSETTE 522:TRAY3 LIFT UP ERROR	OFF	Blink		
523	CHECK PAPER CASSETTE 523:TRAY4 LIFT UP ERROR	OFF	Blink		
524	CHECK PAPER CASSETTE 524:TRAY5 LIFT UP ERROR	OFF	Blink		
530	REMOVE EXCESS PAPER 530:TRAY1 OVERFILLED	OFF	Blink	Print request was made to Tray 1~5, which has been detected to have too	
531	REMOVE EXCESS PAPER 531:TRAY2 OVERFILLED	OFF	Blink	much paper. This status will be cleared when excess paper is removed from that tray and the tray is put back in. (PX713 only)	
532	REMOVE EXCESS PAPER 532:TRAY3 OVERFILLED	OFF	Blink		
533	REMOVE EXCESS PAPER 533:TRAY4 OVERFILLED	OFF	Blink		
534	REMOVE EXCESS PAPER 534:TRAY5 OVERFILLED	OFF	Blink		

2. Error messages : Color, Media Detect

(Caution) *: Raise in the factory mode only.

Err Code	LCD Messages	LED Ready	LED Atten	Description	Comments
	COLOR ADJUSTING	Varies	Varies	Executing Auto Color Adjusting	
		Varies	Varies	Executing Auto Density Adjustment	
	_ MEDIA WEIGHT DETECTING	Varies	Varies	Detecting media weight.	
	YELLOW TONER SENSOR ERROR	Varies	Light	Something is wrong with the toner sensor. When the Engine setting is Shipping mode, displayed in a combination of other message in the	
	MAGENTA TONER SENSOR ERROR	Varies	Light	first line. If the engine setting is Factory mode, error display appears as mentioned later	
	_ CYAN TONER SENSOR ERROR	Varies	Light		
	BLACK TONER SENSOR ERROR	Varies	Light		
	_ NON PAPER SENSE ERROR	Varies	Light	A Sensor output at Paper Empty is outside the spec. Prints according to the Media Weight MIDIUM when this error occurs	
	_ PAPER SENSE ERROR	Varies	Light	The difference in Sensor outputs is outside the spec. (The weight is beyond the recognizable limits.) At Error, Prints according to the Media Weight MEDIUM	
*	BELT REFLEX ERROR	Varies	Light	Belt Reflex Check Error.Error that does not occur at user level.Displayed only in FactoryMode.	
*	DENSITY SHUTTER ERROR2	Varies	Light	Density Adjustment Shutter Error 2.Error that does not occur at user level.Displayed only in FactoryMode.	
*	DENSITY SHUTTER ERROR1	Varies	Light	Density Adjustment Shutter Error 1.Error that does not occur at user level.Displayed only in FactoryMode.	
*	DENSITY COLOR CALIBRATION ERROR	Varies	Light	Density Adjustment Color Calibration Error.Error that does not occur at user level.Displayed only in FactoryMode.	

Err Code	LCD Messages	LED Ready	LED Atten	Description	Comments
*	DENSITY COLOR SENSOR ERROR	Varies	Light	Density Adjustment Color Sensor Error.Error that does not occur at user level.Displayed only in FactoryMode.	
*	DENSITY BLACK CALIBRATION ERROR	Varies	Light	Density Adjustment Black Calibration Error.Error that does not occur at user level.Displayed only in FactoryMode.	
*	DENSITY BLACK SENSOR ERROR	Varies	Light	Density Adjustment Black Sensor Error.Error that does not occur at user level.Displayed only in FactoryMode.	
*	_ YELLOW IMAGE DRUM SMEAR ERROR	Varies	Light	Density Adjustment C/M/Y/K ID ERROR 2. Smear due to the ID failure.	
*	_ MAGENTA IMAGE DRUM SMEAR ERROR	Varies	Light		
*	_ CYAN IMAGE DRUM SMEAR ERROR	Varies	Light		
*	BLACK IMAGE DRUM SMEAR ERROR	Varies	Light		
*	_ YELLOW LOW DENSITY ERROR	Varies	Light	Density Adjustment C/M/Y/K ID ERROR. LED out of focus is assumed.	
*	MAGENTA LOW DENSITY ERROR	Varies	Light		
*	CYAN LOW DENSITY ERROR	Varies	Light		
*	BLACK LOW DENSITY ERROR	Varies	Light		
*	REGISTRATION ERROR1	Varies	Light	Registration Error.This is not user-level error.	
*	SENSOR CALIBRATION ERROR	Varies	Light	Sensor Calibration Error.This is not user-level error.	
*	REGISTRATION ERROR2	Varies	Light	Gamma error(Yellow) This is not user-level error.	
*	REGISTRATION ERROR3	Varies	Light	Gamma error(Magenta) This is not user-level error.	
*	REGISTRATION ERROR4	Varies	Light	Gamma error(Cyan) This is not user-level error.	
*	REGISTRATION ERROR5	Varies	Light	Gamma error(Black) This is not user-level error.	
*	REGISTRATION SENSOR ERROR2	Varies	Light	Registration Sensor Error(Yellow) This is not user-level error.	

Err Code	LCD Messages	LED Ready	LED Atten	Description	Comments
*	REGISTRATION SENSOR ERROR3	Varies	Light	Registration Sensor Error(Magenta) This is not user-level error.	
*	REGISTRATION SENSOR ERROR4	Varies	Light	Registration Sensor Error(Cyan) This is not user-level error.	
*	REGISTRATION SENSOR ERROR5	Varies	Light	Registration Sensor Error(Black) This is not user-level error.	
	PRESS ONLINE SW COULD NOT STAPLE/PUNCH.TOO THICK PAPER	Varies	Varies	Staple/Punch could not be executed because the media was too thick. This appears when the media too thick to be stapled/punched has been detected. Detection of Transparency falls under this category. Pressing the ONLINE key will clear the message. (R	
	PRESS ONLINE SWCOULD NOT DUPLEX. TOO THICK PAPER	Varies	Varies	Could not perform Duplex printing because the paper is too thick. Displays when paper is detected to be too thick for Duplex printing. The message will disappear when the ONLINE key is pressed.	

3. Warning messages : Usage, Media

Err Code	LCD Messages	LED Ready	LED Atten	Description	Comments
	_ ttttt NEAR END	Varies	Varies	The paper in the selected tray is near end.	
	_ YELLOW TONER LOW	Varies	Light	Toner amount is low. Displayed in a combination of other message in the first line. In case of MENU hLOW TONER=STOP, h ATTENTION LED blinks and the printer shifts to OFF Line. When ON-LINE switch is pressed,	
	_ MAGENTA TONER LOW	Varies	Light		
	_ CYAN TONER LOW	Varies	Light	printing can continue until TONER EMPTY.	
	_ BLACK TONER LOW	Varies	Light		
	_ YELLOW DRUM NEAR LIFE	Varies	Light	The life of the drum (warning). Displayed in a combination of other message in the first line. The printer	
	MAGENTA DRUM NEAR LIFE	Varies	Light	stops at the point when it reaches the drum life (Shifts to error, OFF-LINE.)	
	_ CYAN DRUM NEAR LIFE	Varies	Light		
	BLACK DRUM NEAR LIFE	Varies	Light		
	FUSER UNIT NEAR LIFE	Varies	Light	Notifies the fuser unit is near its life.	
	BELT UNIT NEAR LIFE	Varies	Light	Notifies the belt unit is near its life. This is a warning; thus, printing will not stop.	
	_ CHANGE FUSER UNIT	Varies	Light	Notifies the life of the fuser unit (warning). Displayed in a combination of other message in the first line. Warning only (No Life error)	
	_ ttttt EMPTY	Varies	Varies	ttttt: The tray is empty. Treated as Warning until printing to the empty tray is designated.	ttttt:TRAY1~ 5,MPTRAY
		Varies	Varies	Lift Up Error has occurred to tttttt Tray. That tray is treated "Paper Empty" as a result, and printing from that tray becomes disabled. (This sometimes occurs only to PX713.)	ttttt:TRAY1~5
	_ ttttt OVERFILLED	Varies	Varies	Displays that there is too much paper in Tray tttttt. This is a warning; thus, printing will not stop.(This sometimes occurs only to PX713.)	ttttt:TRAY1~5

4. Warning messages : Job Account

Err Code	LCD Messages	LED Ready	LED Atten	Description	Comments
	FILE ACCESSING	Varies	Varies	Accessing the File System (HDD/FLASH) on the CU board.	
	CANCELLING(USER DENIED)	Blink	Varies	Job cancellation due to no print permit. (Related to JobAccount)1. A job received from a user who is denied printing.2. A color job received from a user who is denied color printing.	
	CANCELLING(BUFFER FULL)	Blink	Light	Indiates that a job has been cancelled because the printer area where the logs are stored has been used up and also "Cancel job" is specified as an operation at the time of Log Full. (Related to JobAccount)	
	_ INVALD ID.JOB REJECTED	Varies	Light	Notifies users that jobs have been cancelled because they are not permitted for printing. (Related to JobAccount). Stays displayed until the ON LINE key is pressed.	
	LOG BUFFER FULL.JOB REJECTED	Varies	Light	Notifies users that jobs have been cancelled because the buffer is full. (Related to JobAccount.)Stays displayed until the ON LINE key is pressed.	

5. Other Warnings

(Caution) *: Raise in the factory mode only.

Err Code	LCD Messages	LED Ready	LED Atten	Description	Comments
	DISK FILE SYSTEM IS FULL	Varies	Light	Disk-full is occurring. Because this is a temporary warning, it remains until the end of the job and disappears	
	DISK IS WRITE PROTECTED	Varies	Light	An attempt to write in a read-only file was done. Because this is a temporary warning, it remains until the end of the job and disappears.	
	DISK FILE OPERATION FAILED nnn	Varies	Light	Operation that does not involve a disk is available. nnn: An identifier to Error type (For details, see the Error table provided in the subsequent chapter.)	See right table
	JOB OFFSET HOME ERROR	Varies	Light	Job Offset Home Position Sensor ErrorThe Job Offset function becomes disabled, however, printing can continue.	
*	PU FLASH ERROR	Varies	Light	Error occurred while writing over the PU firmware(This does not occur at user level.)	
	COLLATE FAIL:TOO MANY PAGES	Varies	OFF	The data of MOPY is memory-full.	


In case of occourrence of Disk Operation Error, error numbers will be displayed according to individual errors as follows:

Errors	LCD Display	PJL Status Code
GENERAL ERROR	DISK FILE OPERATION FAILED 0	32000
VOLUME NOT AVAILABLE	DISK FILE OPERATION FAILED 1	32001
DISK FULL	DISK FILESYSTEM IS FULL	32002
FILE NOT FOUND	DISK FILE OPERATION FAILED 3	32003
NO FREE FILE DESCRIPTORS	DISK FILE OPERATION FAILED 4	32004
INVALID NUMBER OF BYTES	DISK FILE OPERATION FAILED 5	32005
FILE ALREADY EXISTS	DISK FILE OPERATION FAILED 6	32006
ILLEGAL NAME	DISK FILE OPERATION FAILED 7	32007
CANT DEL ROOT	DISK FILE OPERATION FAILED 8	32008
NOT FILE	DISK FILE OPERATION FAILED 9	32009
NOT DIRECTORY	DISK FILE OPERATION FAILED 10	32010
NOT SAME VOLUME	DISK FILE OPERATION FAILED 11	32011
READ ONLY	DISK FILE OPERATION FAILED 12	32012
ROOT DIR FULL	DISK FILE OPERATION FAILED 13	32013
DIR NOT EMPTY	DISK FILE OPERATION FAILED 14	32014
BAD DISK	DISK FILE OPERATION FAILED 15	32015
NO LABEL	DISK FILE OPERATION FAILED 16	32016
INVALID PARAMETER	DISK FILE OPERATION FAILED 17	32017
NO CONTIG SPACE	DISK FILE OPERATION FAILED 18	32018
CANT CHANGE ROOT	DISK FILE OPERATION FAILED 19	32019
FD OBSOLETE	DISK FILE OPERATION FAILED 20	32020
DELETED	DISK FILE OPERATION FAILED 21	32021
NO BLOCK DEVICE	DISK FILE OPERATION FAILED 22	32022
BAD SEEK	DISK FILE OPERATION FAILED 23	32023
INTERNAL ERROR	DISK FILE OPERATION FAILED 24	32024
WRITE ONLY	DISK FILE OPERATION FAILED 25	32025
WRITE PROTECTED	DISK IS WRITE PROTECTED	32026


PARTS GUIDE

DIGITAL LASER PRINTER

MODEL: AR-C240P

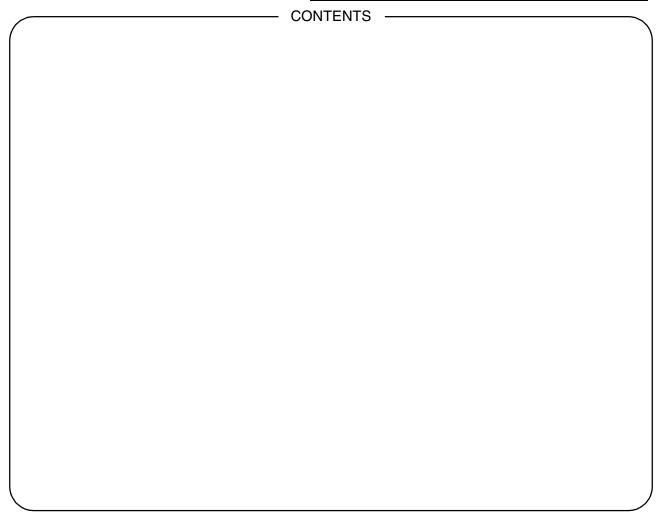

Because parts marked with " Λ " is indispensable for the machine safety maintenance and poeration, it must Be replaced with the parts specific to the product specification.

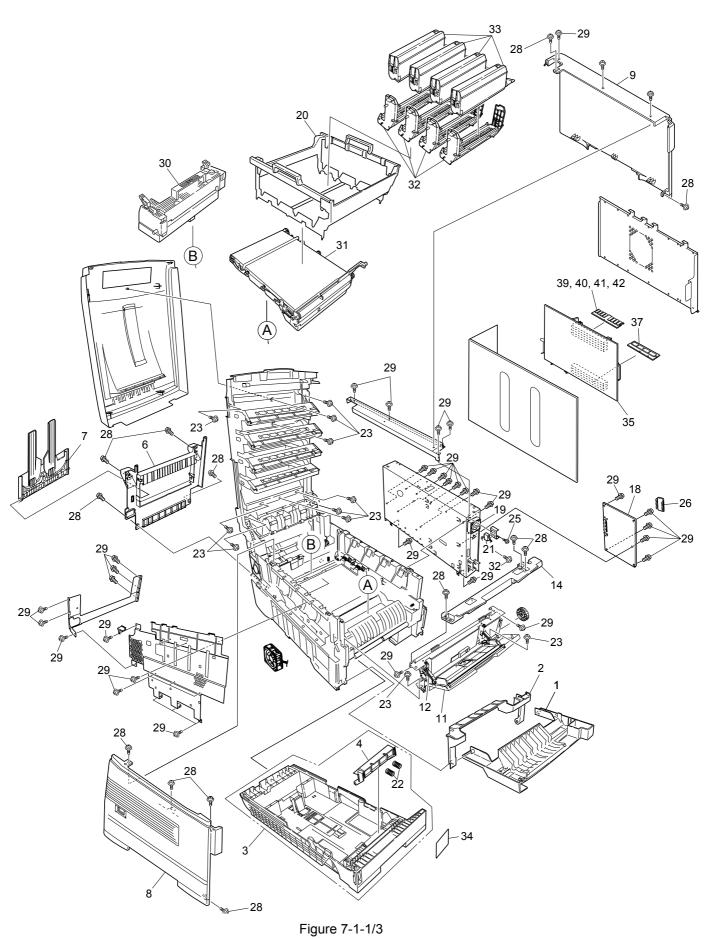

· ·

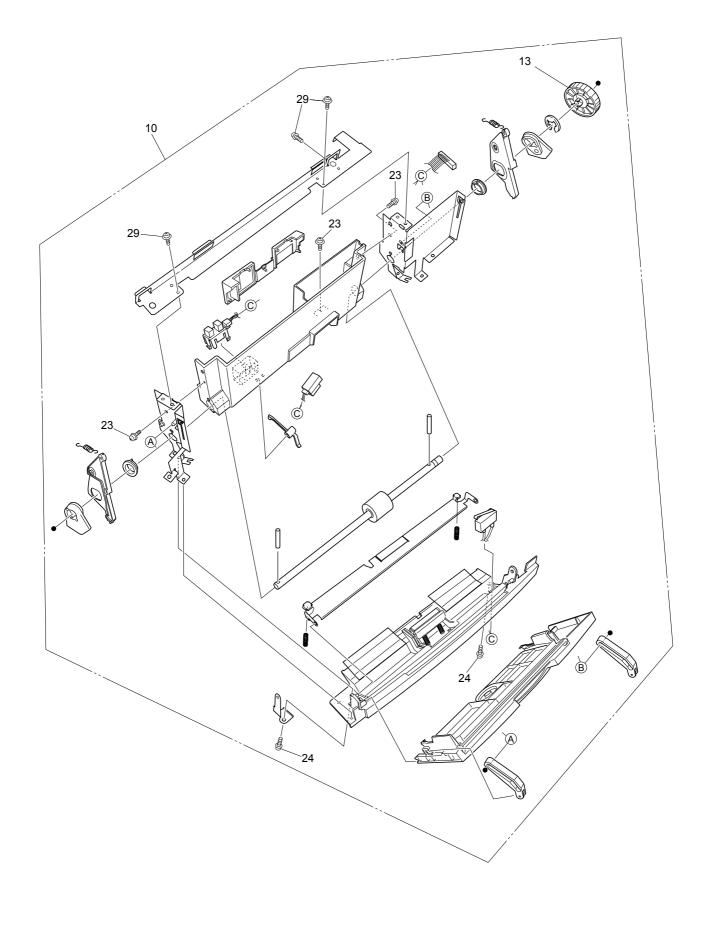


Figure 7-1-2/3


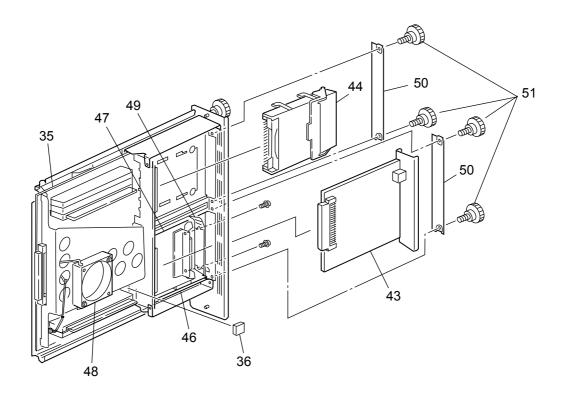


Figure 7-1-3/3

(1) Main Assembly

Table 7-1

<u> </u>	ianii 7 toooiiiibiy		
No.	Part Number	Description	Comment
1	0ZZ40864601//	Front Cover Assy	
2	0ZZ41042501//	Front Cover Inner Baffle	
3	0ZZ40866701//	Cassette Assy	
4	0ZZ41438401//	Retard Pad Assy	
6	0ZZ40864301//	Rear Cover	
7	0ZZ41374902//	Face Up Stacker Assy	
8	0ZZ40864411//	Left Side Cover	
9	0ZZ40864503//	Right Side Cover	
10	0ZZ40862006//	Multipurpose Tray Assy	
11	0ZZ40866301//	Multipurpose Tray Cover Assy	
		Link	
13		Multipurpose Tray Drive Gear	
14	0ZZ40952701//	Multipurpose Tray Top Cover	
18	0ZZ42433206//	Print Engine Controller PWB	
19		Electrical Chassis Cooling Fan	
20	0ZZ40864901//	CRU Basket Assembly	
		Upper Cover Open Switch	
22	0ZZ41439401//	Retard Pad Assy Springs	
	0ZZ55946501//		
30	0ZZ57100901//	Fuser-Unit	AR-C20FU1
31		Belt-Unit	AR-C20TBU1
34	0ZZ41377401//		
		PCB Assy CU HME 600DPI	
	0ZZ55946601//	,	
37	0ZZ42567303//	Board-TNY (PX711(600)) (PS/PCL)	
	0ZZ50132001//	Network Interface Card	
	0ZZ70040902//	20GB HDD	
46	0ZZ41278601//	Guide-Rail(A)	
47	0ZZ41278701//	Guide-Rail(B)	
48	0ZZ41410201//	Motor-Fan For CPU	
49	0ZZ41467401//	Plate-FG(Centro)	
50	0ZZ41254601//	Plate-Blank	

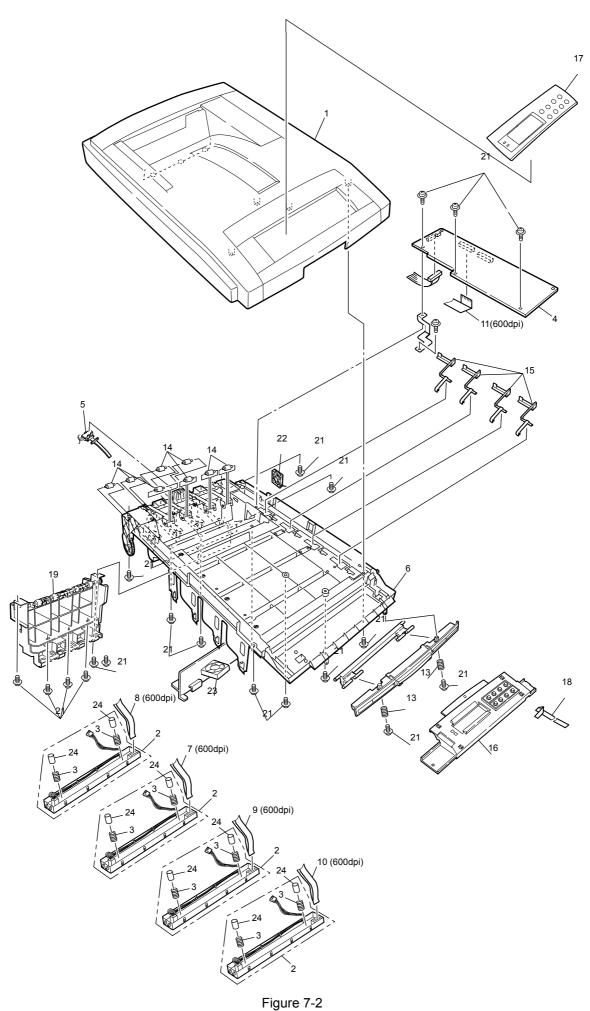

iguio / 2

(2) Top Cover Assembly

No.	Part Number	Description	Comment
1	0ZZ40859702//	Top Cover	
2	0ZZ42460901//	LED Assy (600dpi) Kit	
3	0ZZ42216201//	LED Assy Spring	
4	0ZZ41960901//	LED Control PWB(Y73)	
5	0ZZ40365404//	Stacker Full Sensor	
6	0ZZ41316501//	Top Cover Inner Frame Kit	
7	0ZZ41309603//	LED Harness M	
8	0ZZ41309604//	LED Harness C	
9	0ZZ41309602//	LED Harness Y	
10	0ZZ41409601//	LED Harness K	
11	0ZZ41593101//	LED Control PWB Tape Harness	
14	0ZZ41765601//	Eject Roller	
15	0ZZ40860602//	Toner Sensor	
16	0ZZ40866102//	Control Panel Assembly	
17	0ZZ42542730//	Control Panel Bezel	
18	0ZZ41593101//	Control Panel Tape Harness	
19	0ZZ40861501//	Eject Guide Assembly	
22	0ZZ40197106//	Fuse Fan 60	
23	0ZZ41469007//	ID cooling Fan	
24	0ZZ42447501//	Post-Guide	

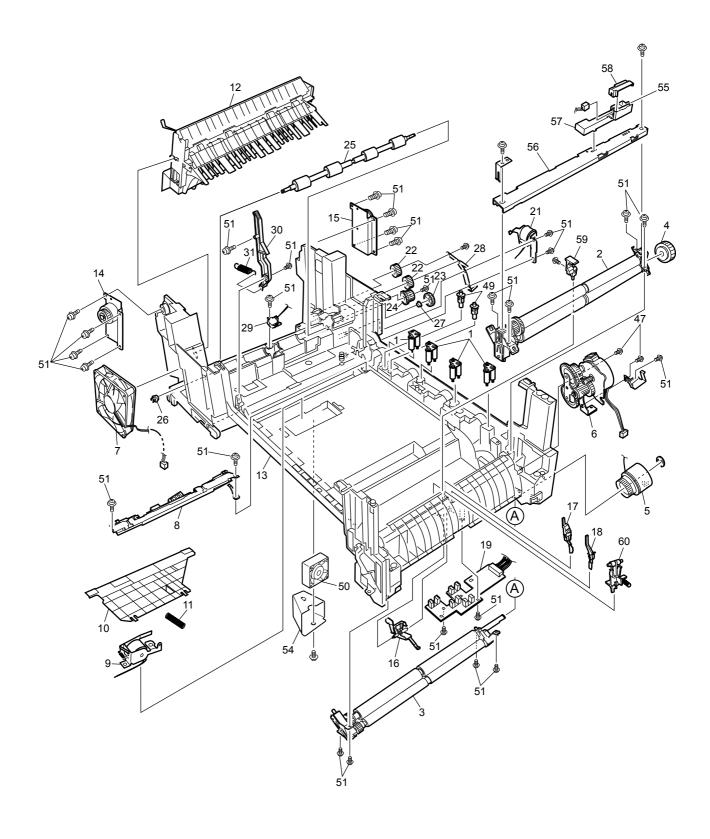


Figure 7-3-1/2

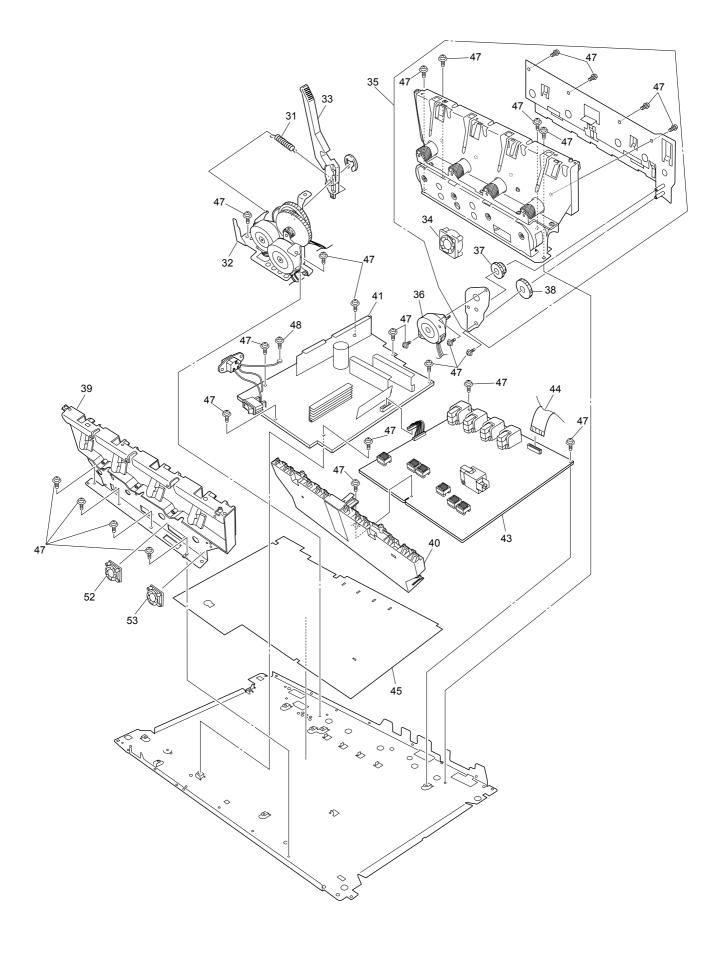


Figure 7-3-2/2

(3) Printer Unit Chassis

	o. Part Number Description Comments				
		Description	Comments		
1		Drum contact Assy			
2		Registration Roller Assy (A)			
3		Registration Roller Assy (B)			
4		Registration Drive Gear (A)			
5		Registration Clutch			
6		Registration Motor Assy			
7		Main Cooling Fan			
8		Color Registration Sensor Assy			
9		Registration Shutter Solenoid			
10	0ZZ41944201//	Registration Shutter			
11	0ZZ41968501//	Registration Shutter Spring			
12	0ZZ40859201//	Duplex Guide Assy			
13	0ZZ41940301//	Printer Unit Chassis			
14	0ZZ41312801//	Left Top Cover Spring Assy			
15	0ZZ41312901//	Right Top Cover Spring Assy			
16	0ZZ40841601//	Entrance Sensor Actuator #1			
17	0ZZ40841701//	Entrance Sensor Actuator #2			
18	0ZZ40841801//	Entrance Sensor Actuator #3			
19	0ZZ41258301//	Entrance Sensor PWB (R71)			
21	0ZZ41253601//	Duplex Gate Solenoid Assy			
22	0ZZ40842401//	Fuser Drive Gear -A			
23	0ZZ40316301//	Fuser Drive Gear -B			
24	0ZZ42170801//	Fuser Drive Gear -C			
25	0ZZ40323902//	Fuser Exit Roller	SPC		
26		Fuser Exit Roller Bushing (L)			
27	0ZZ51609401//	□Fuser Exit Roller Bushing (R)			
28	0ZZ40842501//	Fuser Exit Roller Contact			
29	0ZZ41073601//	Exit Sensor Assy			
30		Fuser Latching Handle (L)			
31	0ZZ40841501//	Fuser Latching Handle Springs			
32	0ZZ40848801//	Belt Motor Assy			
33	0ZZ40841401//	Fuser Latching Handle (R)			
34		ID Motor Fan			
35	0ZZ40847306//				
36	0ZZ40846001//	Main Feeder Drive Motor			
37	0ZZ40848501//	Main Feeder Drive Gear (A)			
38		Main Feeder Drive Gear (B)			
39	0ZZ41303606//	` '			
40	0ZZ40850201//	Contact Assy			
40	UZZ4UU3UZU I//	Contact Assy			

(3) Printer Unit Chassis

No.	Part Number	Description	Comments
41	0ZZ41862901//	Power-Unit AC-DC-switching(115V)	
43	0ZZ42046801//	Power-Unit (high-voltage)	
44	0ZZ56738201//	☐HV Tape Harness	
45	0ZZ41128101//	Power Supply Insulator	
49	0ZZ41346301//	Transfer Contact Assy	
50	0ZZ41469006//	Power Cooling Fan	
52	0ZZ41469003//	HV Fan	
53	0ZZ41469003//	Belt Fan	
54	0ZZ42309801//	Film Duct	SPC
55	0ZZ41911101//	Thickness Sensor	
56	0ZZ41911201//	Thickness Plate Assy	SPC
57	0ZZ41911101//	Thickness Sensor Assy	
58	0ZZ41888701//	Cover Seal Sensor	SPC
59	0ZZ41928801//	Pickup Stage	SPC
60	0ZZ42199601//	Waste Toner Sensor Actuator	

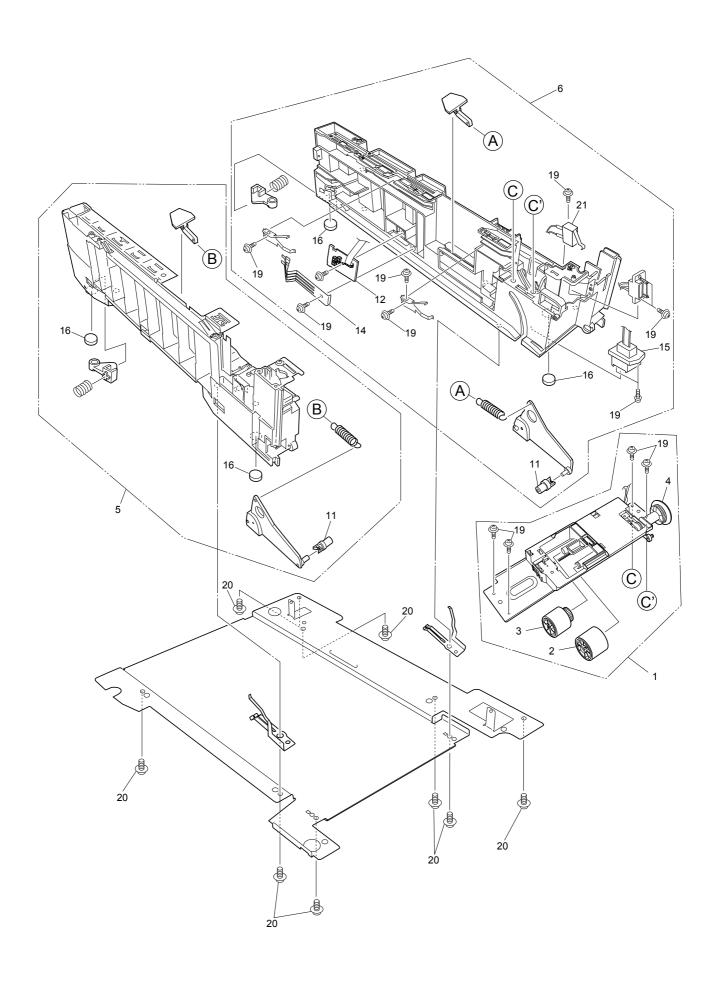


Figure 7-4

(4)Paper Tray Guide

No.	Part Number	Description	Comments
1	0ZZ40839801//	Main Feed Assy	
2	0ZZ40371302//	Feed Roller	
3	0ZZ40313202//	Nudger Roller	
4	0ZZ40325401//	Main Feeder Drive Gear	
5	0ZZ40839001//	Left Cassette Guide Assy	
6	0ZZ40839406//	Right Cassette Guide Assy	
11	0ZZ40349701//	Plastic Roller	
12	0ZZ40368304//	Paper Size Sensing PWB PXC	
14	0ZZ50928901//	Paper Size Actuator	
15	0ZZ41309106//	2nd Tray Connector	
16	0ZZ40839001//	Foot	
21	0ZZ41275901//	Front Cover Open Switch	

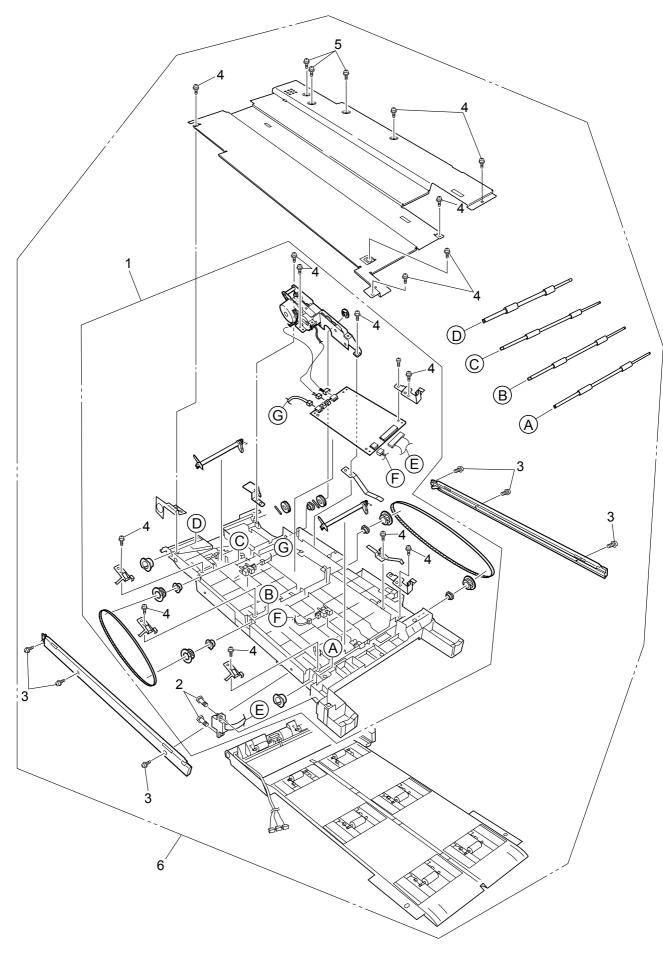


Figure 7-5

(5) Duplex Unit

No.	Part Number	Description	Comments
1	0ZZ41946501//	Duplex Transport Assy	SPC
6	0ZZ50133401//	Duplex Unit	AR-C20ADU



No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without prior written permission of the publisher.

COPYRIGHT © 2004 BY SHARP ELECTRONICS CORPORATION

ALL RIGHTS RESERVED.